

XD 9004H
AGKGSWGHE
02/16/2021

XLT[®]

SmartSolutions[™]



XLT Gas Oven & XLT Hood Installation & Operation Manual



Read This Manual Before Using This Appliance.

Current versions of this manual, Technical/Rough-In Specifications, Parts & Service Manual, Architectural Drawings, & a list of International Authorized Distributors are available at: www.xltovens.com

For use with the following XLT Gas Oven Versions:

Australia (AE) G
Korea (K) G
Standard (S) G
World (W) G

For use with the following XLT Gas Hood Versions:

Standard (S) E
World (W) E



Original Instructions

XLT Ovens
PO Box 9090
Wichita, Kansas 67277
US: 888-443-2751 FAX: 316-943-2769 INTL: 316-943-2751 WEB: www.xltovens.com

**WARNING**

Post in a prominent location instructions to be followed in the event you smell gas. This information can be obtained by consulting your local gas supplier.

**WARNING****FOR YOUR SAFETY**

Do not store or use gasoline or other flammable vapors and liquids on the vicinity of this or any other appliance

**WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

**WARNING**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

XLT has spent millions of dollars designing and testing our products as well as developing Installation & Operation Manuals. These manuals are the most complete and easiest to understand in the industry. However, they are worthless if they are not followed.

We have witnessed store operators and building owners lose many thousands of dollars in lost revenue due to incorrect installations. We highly recommend you follow all instructions given in this manual as well as follow best practices in plumbing, electrical, and HVAC building codes.

Revision History Table

Revision	Comments	Date
G	Updated Operation Section Pg. 39, Updated Schematics Pg. 100-119	11/20/2020
H	Added Adjustable Bypass Orifice Notes Pg. 22, Updated Oven Operator Controls Pg. 41, Updated Schematics Pg. 101-105, 110-113	02/16/2021

Definitions & Symbols

A safety instruction (message) includes a “Safety Alert Symbol” & a signal word or phrase such as **DANGER**, **WARNING** or **CAUTION**. Each signal word has the following meaning:

**DANGER**

Indicates a potentially hazardous situation that, if not avoided, can result in serious injury or death.

**HIGH
VOLTAGE**

Indicates a high voltage. It calls your attention to items or operations that could be dangerous to you & other persons operating this equipment. Read the message & follow the instructions carefully.

**WARNING**

Indicates a potentially hazardous situation, that if not avoided, can result in cuts or being crushed. It calls your attention to items or operations that could be dangerous to you & other persons operating this equipment.

**CAUTION**

Indicates a potentially hazardous situation, that if not avoided, can result in minor to moderate injury or serious damage to the product. The situation described in the CAUTION may, if not avoided, lead to serious results. Important safety measures are described in CAUTION (as well as WARNING), so be sure to observe them.

**NOTE**

Notes indicates an area or subject of special merit, emphasizing either the product’s capability or common errors in operation or maintenance.

**TIP**

Tips give a special instruction that can save time or provide other benefits while installing or using the product. The tip calls attention to an idea that may not be obvious to first-time users of the product.



SAFETY DEPENDS ON YOU



CAUTION

This appliance is for professional use by qualified personnel. This appliance must be installed by qualified persons in accordance with the regulations in force. This appliance must be installed with sufficient ventilation to prevent the occurrence of unacceptable concentrations of substances harmful to health in the room in which it is installed. This appliance needs an unobstructed flow of fresh air for satisfactory operation & must be installed in a suitably ventilated room in accordance with current regulations. This appliance should be serviced by qualified personnel at least every twelve (12) months or sooner if heavy use is expected.



DANGER

Installation and repairs of all electrical appliances & ventilation exhaust hoods should only be performed by a qualified professional who has read & understands these instructions & is familiar with proper safety precautions. Read this manual thoroughly before installing or servicing this equipment.

- Post in a prominent location instructions to be followed in the event you smell gas. This information can be obtained by consulting your local gas supplier.
- In the event a gas odor is detected, shut off the gas at the main shutoff valve immediately. Contact your local Gas Company or supplier.
- Do not restrict the flow of combustion and/or ventilation air to the unit. Provide adequate clearance for operating, cleaning, and maintaining & adequate clearance for operating the gas shutoff valve when the unit is in the installed position.
- Keep the area free & clear of combustible material. **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.**
- Ovens are certified for installation on combustible floors.
- Electrical schematics are located inside the control box of the oven, in this manual, and online at www.xltovens.com. Disconnect input power to the unit before performing any maintenance.
- This unit requires a ventilation hood that must conform to local codes.
- This unit may be operated with either natural gas or liquid petroleum fuel as designated on the data plate located on the side of the unit.
- This unit must be operated by the same voltage, phase, & frequency of electrical power as designated on the data plate located on the side of the unit.
- Minimum clearances must be maintained from combustible & non-combustible construction materials.
- Follow all local codes when installing this unit.
- Follow all local codes to electrically ground the unit.
- Appliance is not to be cleaned with water jet (high pressure water).
- XLT ovens are certified for use in stacks of up to four (4) units of XLT products. Integration of other manufacturer's products into an oven stack is not recommended, & voids any warranties. XLT assumes no liability for mixed product applications.
- Failure to call XLT Customer Service at 1-888-443-2751 prior to contacting a repair company voids any & all warranties.
- PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

TABLE OF CONTENTS

5

Warning & Safety Information.....	2
Warranty.....	6
General	8
Receiving & Inspection	9
Installation Responsibilities	10
Oven Description.....	12
Oven Crate Dimensions.....	15
Oven Dimensions & Weights.....	16
Oven Requirements	19
Oven Only Rough-In Specifications	27
Oven Assembly	29
Oven Connection.....	36
Oven Fire Suppression	37
Oven Ventilation Guidelines.....	39
Oven Initial Start-Up.....	40
Oven Operation	41
Oven Operator Controls	42
Oven Cleaning.....	44
Oven Maintenance.....	49
Oven Troubleshooting.....	50
Hood Installation	52
Hood Description	53
Hood and Shroud Crate Dimensions	55
Hood Dimensions & Weights.....	56
Recommended Exhaust Flow Rates.....	58
Hood Electrical Requirements.....	60
Hood Rough-In Specifications	61
Hood Electrical Connections.....	62
Hood Assembly	76
Hood Connection.....	94
Hood Initial Start-Up.....	96
Hood Operator Controls	97
Hood Valance Kit.....	98
Hood Duct Wrap Kit	101
Hood Cleaning.....	102
Electrical Schematics	104
Certifications	133
Start-Up Checklist.....	135
Typical Store Installation	136
Notes.....	137



Warranty - US and Canada

Rev H

Approval Date: 09/28/2017

XLT warrants Version G ovens manufactured after October 16, 2017 to be free from any defect in material and workmanship under normal use for seven (7) years from the date of original purchase by the end user, and further warrants main fan blades, conveyor shafts, and conveyor bearings for ten (10) years. XLT further warrants all ovens/hoods to be free from rust for ten (10) years from the date the equipment is originally purchased. XLT warrants Version E hoods manufactured after October 16, 2017 to be free from any defect in material and workmanship under normal use for seven (7) years from the date of original purchase by the end user purchaser. If the purchase includes a pre-piped Ansul system hood and the ovens both the warranty will be increased to ten (10) years on both pieces of equipment. In the event of a part failure, XLT will furnish a replacement part and pay for all labor associated with the replacement of the part. If upon inspection XLT determines that the part is not defective, all incurred costs will be the responsibility of the end user purchaser. This warranty is extended to the original end user purchaser and is not transferable without prior written consent of XLT. Damages are limited to the original purchase price.

DUTIES OF THE OWNER:

- The owner must inspect the equipment and crates at time of receipt. Damage during shipment is to be immediately reported to the carrier and also to XLT
- The equipment must be installed and operated in accordance with the I&O Manual furnished with the unit
- This warranty shall not excuse the owner from properly maintaining the equipment in accordance with the I&O Manual furnished with the unit
- A copy of the "Initial Start-Up Checklist" must be filled out and returned to XLT when the unit is initially installed, and/or when the unit is removed and installed in another location
- The gas, electric, and HVAC utilities must be connected to the oven and installed by locally licensed contractors
- Failure to contact XLT Ovens prior to contacting a repair company for warranty work voids any and all warranties

WHAT IS NOT COVERED:

- Freight damage
- Overtime charges
- Any part that becomes defective because of utility services (power surges, high or low voltages, high or low gas pressure or volume, contaminated fuel, or improper utility connections)
- Any part that becomes defective because of moisture and/or other contaminants
- Conveyor belts
- Filters
- Exhaust Fans
- Light Bulbs
- Painted or Powder Coated surfaces
- Normal maintenance or adjustments
- This warranty shall not apply if the equipment or any part is damaged as a result of accident, casualty, alteration, misuse, abuse, improper cleaning, improper installation, improper operation, natural disasters, or man-made disasters

CLAIMS HANDLED AS FOLLOWS:

Should any such defect be discovered, XLT must be notified. Upon notification, XLT will arrange for necessary repairs to be made by an authorized service agent. Denial of services upon the arrival of an authorized service agent will release XLT of any and all warranty obligations.





Warranty - International

Rev K

Approval Date: 09/28/2017

XLT warrants Version G ovens manufactured after October 16, 2017 to be free from any defect in material and workmanship under normal use for five (5) years from the date of original purchase by the end user, and further warrants main fan blades, conveyor shafts, and conveyor bearings for ten (10) years. XLT further warrants all ovens/hoods to be free from rust for ten (10) years from the date the equipment is originally purchased. XLT warrants Version E hoods manufactured after October 16, 2017 to be free from any defect in material and workmanship under normal use for five (5) years from the date of original purchase by the end user purchaser. If the purchase includes a hood and the ovens both the warranty will be increased to seven (7) years on both pieces of equipment. In the event of a part failure, XLT will furnish a replacement part and pay for all labor associated with the replacement of the part. If upon inspection XLT determines that the part is not defective, all incurred costs will be the responsibility of the end user purchaser. This warranty is extended to the original end user purchaser and is not transferable without prior written consent of XLT. Damages are limited to the original purchase price.

DUTIES OF THE OWNER:

- The owner must inspect the equipment and crates at time of receipt. Damage during shipment is to be immediately reported to the carrier and also to the Distributor/Service Provider
- The equipment must be installed and operated in accordance with the I&O Manual furnished with the unit
- This warranty shall not excuse the owner from properly maintaining the equipment in accordance with the I&O Manual furnished with the unit
- A copy of the "Initial Start-Up Checklist" must be filled out and returned to Distributor/Service Provider when the unit is initially installed, and/or when the unit is removed and installed in another location
- The gas, electric, and HVAC utilities must be connected to the oven and installed by locally licensed contractors
- Failure to contact the Distributor/Service Provider prior to contacting a repair company for warranty work voids any and all warranties

WHAT IS NOT COVERED:

- Freight damage
- Overtime charges
- Any part that becomes defective because of utility services (power surges, high or low voltages, high or low gas pressure or volume, contaminated fuel, or improper utility connections)
- Any part that becomes defective because of moisture and/or other contaminants
- Conveyor belts
- Filters
- Exhaust Fans
- Light Bulbs
- Painted or Powder Coated surfaces
- Normal maintenance or adjustments
- This warranty shall not apply if the equipment or any part is damaged as a result of accident, casualty, alteration, misuse, abuse, improper cleaning, improper installation, improper operation, natural disasters, or man-made disasters

CLAIMS HANDLED AS FOLLOWS:

Should any such defect be discovered, the Distributor/Service Provider must be notified. Upon notification, Distributor/Service Provider will arrange for necessary repairs to be made by an authorized service agent. Denial of services upon the arrival of an authorized service agent will release XLT and Distributor/Service Provider of any and all warranty obligations.




Save this Manual

This document is the property of the owner of this equipment.

XLT reserves the right to make changes in design & specifications, and/or make additions to or improvements to its product without imposing any obligations upon itself to install them in products previously manufactured.

All Right Hand & Left Hand designations in this manual are from the point of view as seen below.

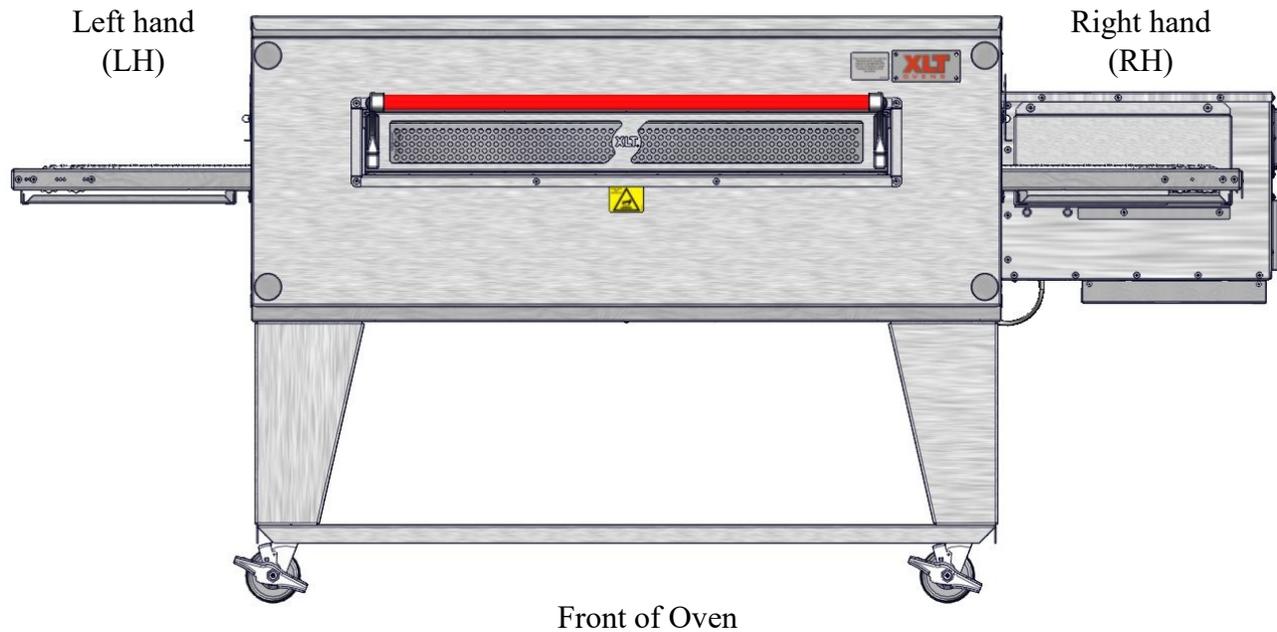

NOTIFY CARRIER OF DAMAGE AT ONCE

Upon receiving of all goods shipped by a Common Carrier, check for any exterior damage that may indicate interior damage. If conditions permit, open all crates & do a full inspection for any damage while the delivery driver is still there. If there is damage, please note on the delivery receipt & call the carrier to make a freight damage claim within 24 hours of receipt. Failure to make a damage claim within the first 24 hours may void the opportunity to have the claim resolved.

XLT wants you to be totally satisfied with every aspect of owning & using your oven & hood. Your feedback, both positive & negative, is very important to us as it helps us understand how to improve our products & our company. Our goal is to provide you with equipment that we are proud to build & you will be proud to own.

To receive technical support for the oven or hood you purchased, XLT has qualified customer service personnel that can provide assistance on any type of XLT equipment problem you may experience. Customer Service is available 24/7/365 at 888-443-2751 or visit www.xltovens.com.



DANGER

Installation of all gas appliances & ventilation exhaust hoods should only be performed by a qualified professional who has read & understands these instructions & is familiar with proper safety precautions. Read this manual thoroughly before installing or servicing this equipment.

Responsibility	Service Company	Owner/ Contractor
Site Survey: Verify electric and gas meter/regulator sizes	X	
Supply wiring from TS1 #R3, R4, R5 to exhaust fan		X
Supply (1) single phase 230 volt 10 amp circuit from breaker panel to XLT Hood		X
Assembly of new hood per XLT Installation & Operation Manual		X
Suspend XLT Hood from ceiling		X
Install new exhaust fan on roof		X
Supply power to XLT Hood		X
Install Duct Cover or Valance above XLT Hood		X
Assembly of new ovens per XLT Installation & Operation Manual		
Base assembled and set in place	X	
Ovens moved and stacked with proper lifting equipment	X	
Peel all PVC	X	
Assemble shrouds & brackets to XLT Oven/Hood	X	
Connecting fuel to XLT products		
Install piping and drip legs		X
Weld ducting to XLT Hood		X
Check for leaks		X
Install flexible gas hoses	X	
Connect electrical supply	X	
Connection may require Permit and Code Inspections		X
Relocate Make-Up-Air to enter the room at the ends of the ovens		X
Start-up per XLT Installation & Operation Manual:	X	
Gas pressure/leak testing, hood/oven functions, adjust as necessary	X	
Start-Up Checklist must be submitted to XLT to validate Warranty		X


**NOTE**

If XLT employees are completing the installation process, they will be considered a Service Company in regards to the above table.

This page is intentionally left blank.

This manual covers the following XLT Oven & Hood models:

Ovens		Hoods
Standard	HP	
X3G-1832-xxxxx		H3E-1832-xxxxx
X3G-2336-xxxxx		
X3G-2440-xxxxx		H3E-2440-xxxxx
X3G-3240-xxxxx	X3G-3240-xxxxx-HP	H3E-3240-xxxxx
X3G-3255-xxxxx	X3G-3255-xxxxx-HP	H3E-3255-xxxxx
X3G-3270-xxxxx	X3G-3270-xxxxx-HP	H3E-3270-xxxxx
X3G-3855-xxxxx	X3G-3855-xxxxx-HP	H3E-3855-xxxxx
X3G-3870-xxxxx	X3G-3870-xxxxx-HP	H3E-3870-xxxxx

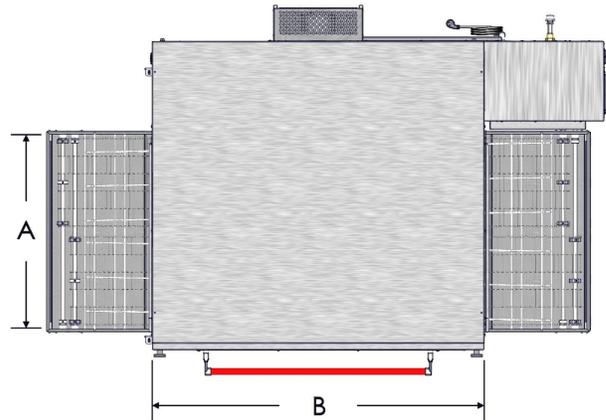



The first two (2) digits of the model number, after the dash represent the conveyor width and the last two digits indicate the bake chamber length. For example, the X3G-3255-xxxx models would have a bake chamber with the width (A in image above) of 32 inches and the length (B in the image above) of 55 inches. The five (5) x's after those numbers represents the oven and hood configuration number. The HP after the five (5) x's represents high performance ovens. These models should be chosen when planning to run the ovens near the maximum temperatures of 590°F/310°C, or if intending to switch quickly and often between two temperatures that vary greatly. The larger orifice sizes included with the HP models help the ovens to maintain optimum performance in these conditions. The models 3270 and 3870 are two burners, one on each side, and have two control boxes. All other models have only one burner with a single control box, which can be provided at each end. The ovens can be used in a single, double, triple, or quad oven stack configurations. All ovens are gas and are available in natural gas or liquefied petroleum gas models (electric ovens are also available in a variety of sizes). All models can be configured for conveyor split belt.

OVEN DESCRIPTION

Food product is placed on the stainless steel wire conveyor belt on one side of the oven. The conveyor then transports the food through the bake chamber at a user-controlled speed. This provides repeatable and uniform food cooking. The conveyors can be easily configured to move either left-to-right or right-to-left with a simple programming change. A large optional center sandwich door allows the introduction of food items for cooking at shorter times. Precise temperatures are user adjustable and maintained by a digital control.


An easily removable front panel allows the full cleaning of the oven interior. All exposed oven surfaces both exterior and interior are stainless steel. The conveyor is a one piece design and is removed from the side which has the control box. No tools are required for disassembly and cleaning of the conveyor or oven interior. The oven itself is mounted on lockable swivel casters for easy moving and maintenance.

Accessories such as conveyor shelves, base shelves, extended fronts, fire suppression components, and perforated crumb trays are available from XLT. In addition, moving equipment such as carts and lifting jacks are available to help install and move ovens. Please contact XLT or your Authorized Distributor for more information.

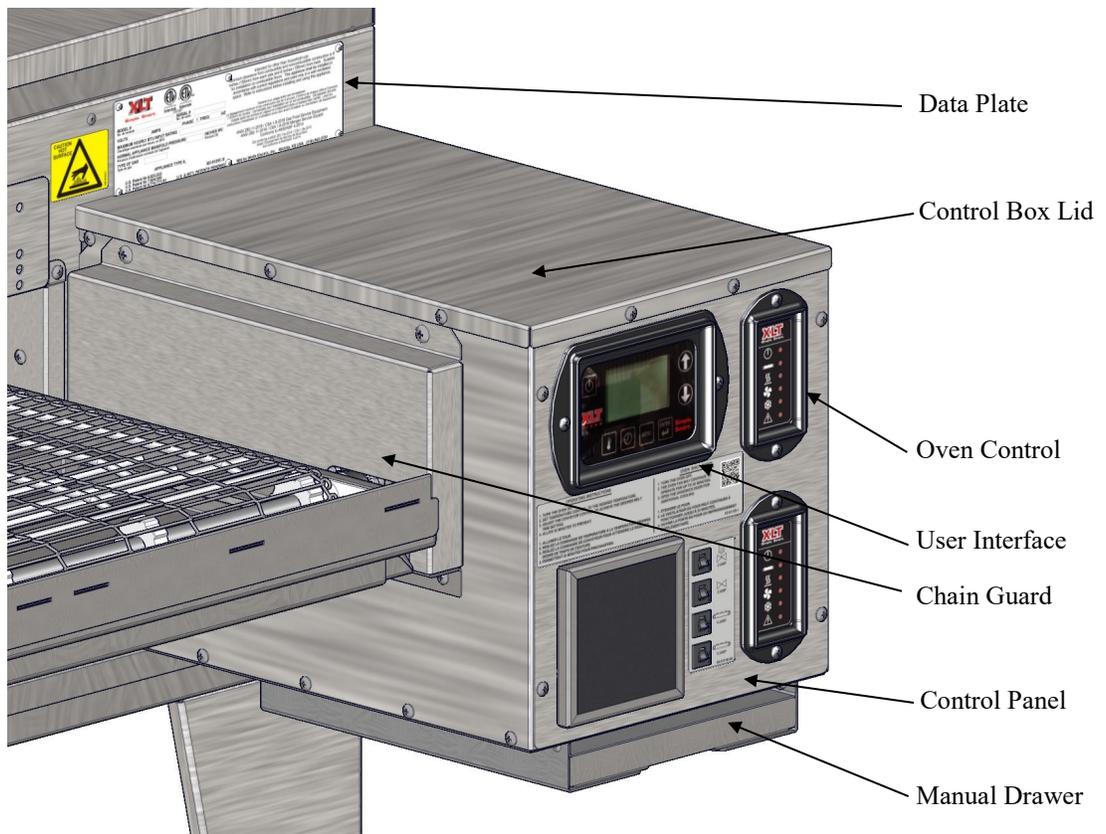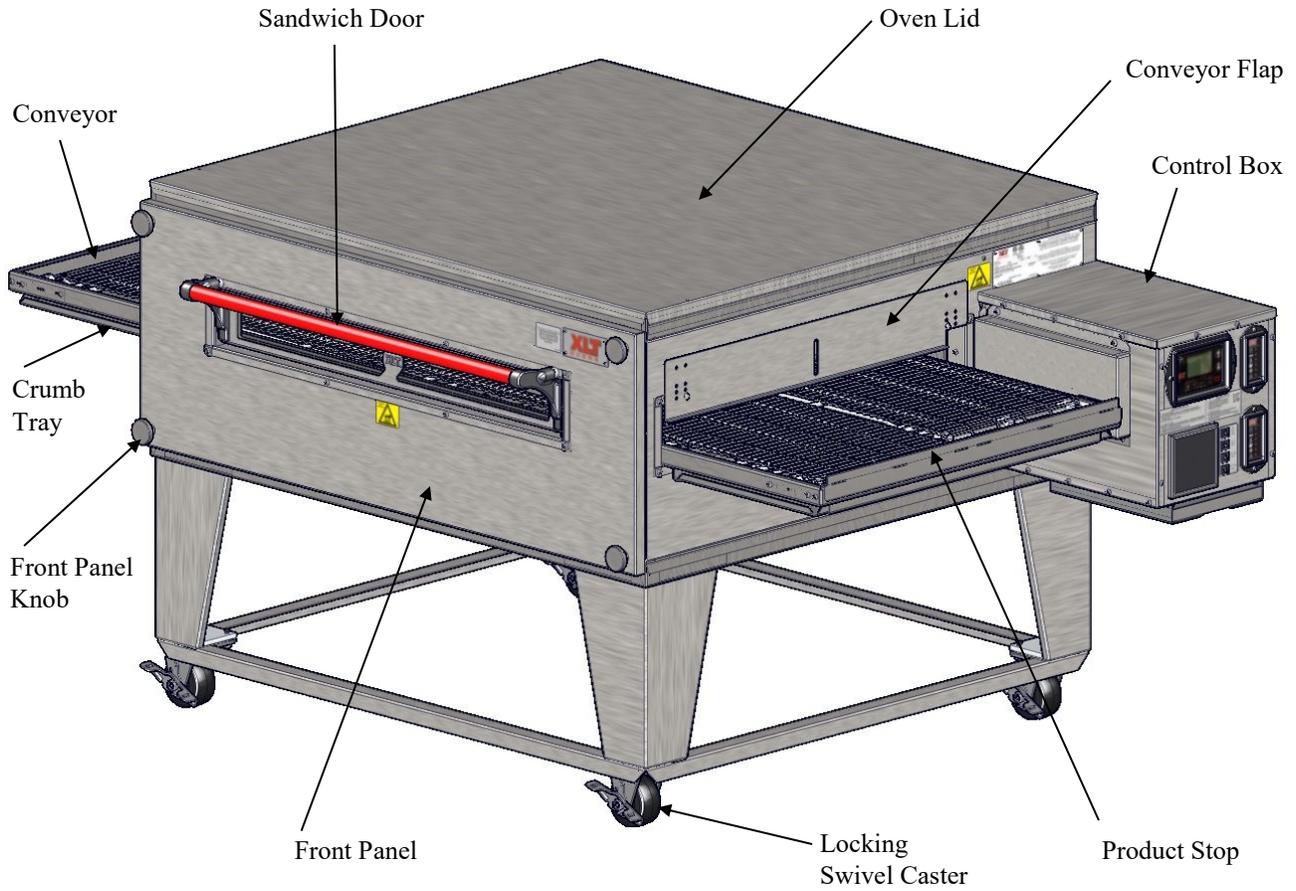


This page is intentionally left blank.

DOMESTIC WOOD CRATES

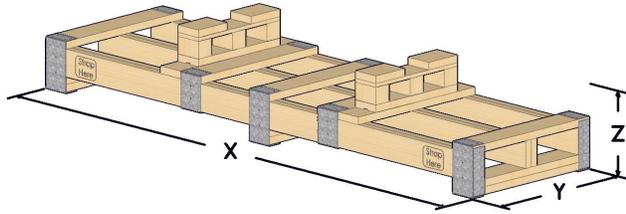


Domestic Wood Crate Dimensions				
Oven Model	Gas Oven			
	X	Y	Z	Z (With Oven)
1832	85 5/8 [2175]	31 1/2 [800]	17 1/2 [445]	60 [1524]
2336	85 5/8 [2175]	31 1/2 [800]	17 1/2 [445]	63 3/4 [1619]
2440	85 5/8 [2175]	31 1/2 [800]	17 1/2 [445]	66 [1676]
3240	85 5/8 [2175]	31 1/2 [800]	17 1/2 [445]	74 [1880]
3255	115 5/8 [2937]	31 1/2 [800]	17 1/4 [438]	73 3/4 [1873]
3270	111 5/8 [2835]	31 1/2 [800]	17 1/4 [438]	73 3/4 [1873]
3855	115 5/8 [2937]	31 1/2 [800]	17 1/4 [438]	79 3/4 [2026]
3870	111 5/8 [2835]	31 1/2 [800]	17 1/4 [438]	79 3/4 [2026]

INTERNATIONAL WOOD CRATES

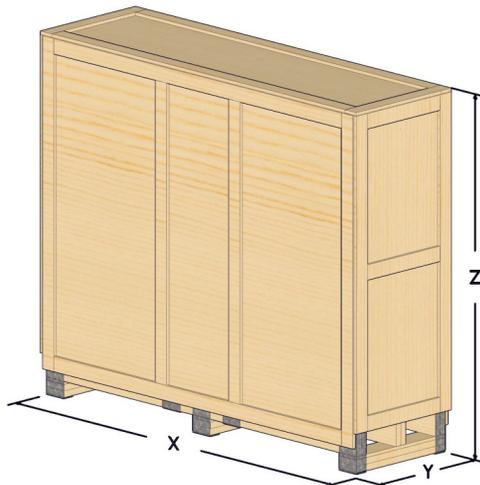

International Wood Crate Dimensions			
Oven Model	Gas Ovens		
	X	Y	Z
1832	76 [1930]	29 3/4 [756]	63 1/2 [1613]
2336	84 [2134]	29 3/4 [756]	69 1/2 [1765]
2440	84 [2134]	29 3/4 [756]	69 1/2 [1765]
3240	84 [2134]	29 3/4 [756]	77 1/2 [1969]
3255	99 [2515]	29 3/4 [756]	77 1/2 [1969]
3270	115 1/2 [2934]	29 3/4 [756]	77 1/2 [1969]
3855	99 [2515]	29 3/4 [756]	83 1/2 [2121]
3870	115 1/2 [2934]	29 3/4 [756]	83 1/2 [2121]


METAL SKIDS (Containers Only)

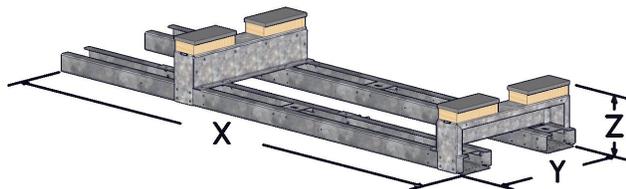

Metal Skid Dimensions				
Oven Model	Gas Oven			
	X	Y	Z	Z (With Oven)
1832	55 [1397]	21 3/4 [552]	9 1/8 [232]	51 5/8 [1311]
2336	59 [1499]	21 3/4 [552]	9 1/8 [232]	55 3/8 [1407]
2440	63 [1600]	21 3/4 [552]	9 1/8 [232]	57 5/8 [1464]
3240	63 [1600]	21 3/4 [552]	9 1/8 [232]	65 5/8 [1667]
3255	78 [1981]	21 3/4 [552]	9 1/8 [232]	65 5/8 [1667]
3270	115 [2921]	21 3/4 [552]	10 1/4 [260]	66 3/4 [1695]
3855	78 [1981]	21 3/4 [552]	9 1/8 [232]	71 5/8 [1819]
3870	115 [2921]	21 3/4 [552]	10 1/4 [260]	72 3/4 [1848]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.

SINGLE STACK

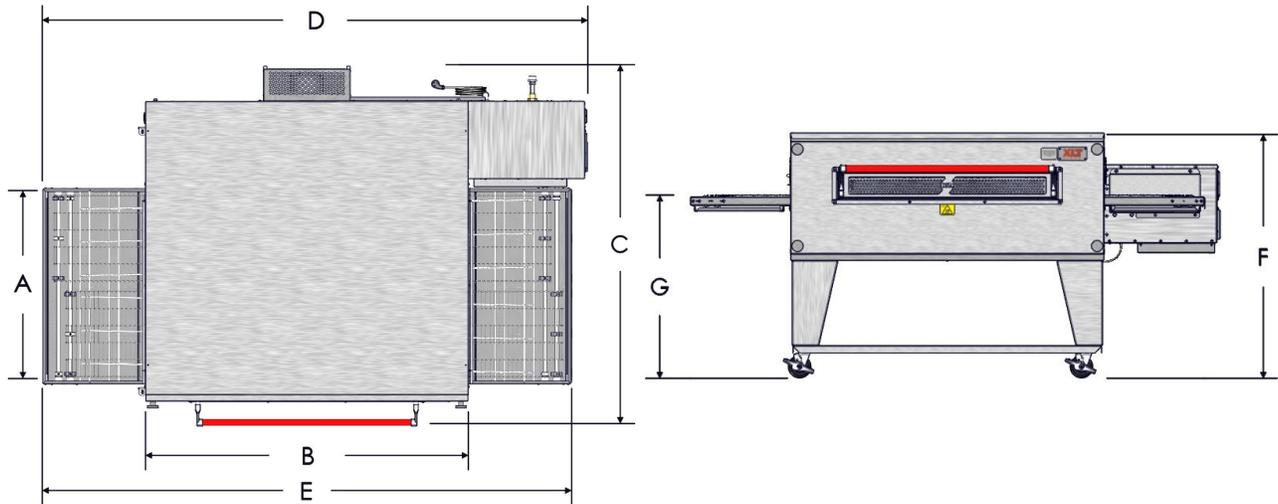


SINGLE OVEN	A	B	C	D	E	F	G	H	J	K	OVEN WEIGHT
1832	18 [457]	32 [813]	48 [1219]	70 1/4 [1784]	67 1/4 [1708]	43 [1092]	32 [813]	N/A	N/A	N/A	560 [254]
2336	23 [584]	36 [914]	51 [1295]	70 1/4 [1784]	65 3/4 [1670]	43 [1092]	32 [813]	N/A	N/A	N/A	623 [283]
2440	24 [610]	40 [1016]	54 [1372]	78 1/4 [1988]	75 1/4 [1911]	43 [1092]	32 [813]	N/A	N/A	N/A	695 [315]
3240	32 [813]	40 [1016]	62 [1575]	78 1/4 [1988]	75 1/4 [1911]	43 [1092]	32 [813]	N/A	N/A	N/A	782 [355]
3255	32 [813]	55 [1397]	62 [1575]	93 1/4 [2369]	90 1/4 [2292]	43 [1092]	32 [813]	N/A	N/A	N/A	941 [427]
3270	32 [813]	70 [1778]	62 [1575]	111 [2819]	105 1/4 [2673]	43 [1092]	32 [813]	N/A	N/A	N/A	1225 [556]
3855	38 [965]	55 [1397]	68 [1727]	93 1/4 [2369]	90 1/4 [2292]	43 [1092]	32 [813]	N/A	N/A	N/A	1013 [459]
3870	38 [965]	70 [1778]	68 [1727]	111 [2819]	105 1/4 [2673]	43 [1092]	32 [813]	N/A	N/A	N/A	1317 [597]

SINGLE OVEN	CRATED WEIGHTS (1 CRATE)		
	DOM. WOOD	INTL. WOOD	METAL SKID
1832	744 [337]	794 [360]	676 [307]
2336	813 [369]	876 [397]	747 [339]
2440	893 [405]	955 [433]	838 [380]
3240	988 [448]	1058 [480]	933 [423]
3255	1196 [542]	1264 [573]	1117 [507]
3270	1509 [684]	1595 [723]	1459 [662]
3855	1275 [578]	1349 [612]	1196 [542]
3870	1610 [730]	1702 [772]	1560 [708]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

DOUBLE STACK

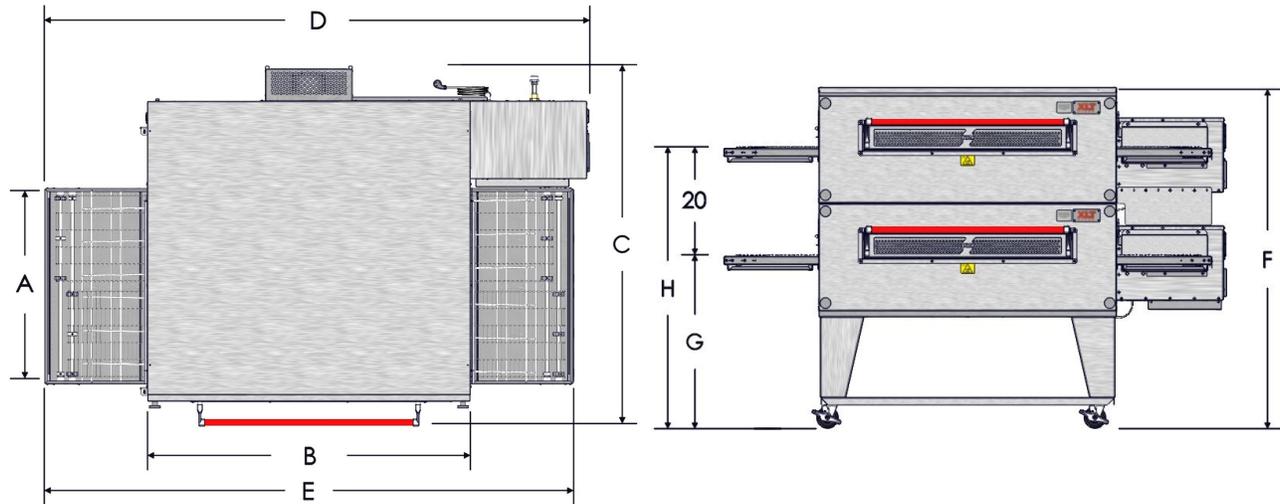


DOUBLE STACK	A	B	C	D	E	F	G	H	J	K	OVEN WEIGHT
1832	18 [457]	32 [813]	48 [1219]	70 1/4 [1784]	67 1/4 [1708]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	1015 [460]
2336	23 [584]	36 [914]	51 [1295]	70 1/4 [1784]	65 3/4 [1670]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	1131 [513]
2440	24 [610]	40 [1016]	54 [1372]	78 1/4 [1988]	75 1/4 [1911]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	1265 [574]
3240	32 [813]	40 [1016]	62 [1575]	78 1/4 [1988]	75 1/4 [1911]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	1424 [646]
3255	32 [813]	55 [1397]	62 [1575]	93 1/4 [2369]	90 1/4 [2292]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	1714 [777]
3270	32 [813]	70 [1778]	62 [1575]	111 [2819]	105 1/4 [2673]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	2255 [1023]
3855	38 [965]	55 [1397]	68 [1727]	93 1/4 [2369]	90 1/4 [2292]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	1845 [837]
3870	38 [965]	70 [1778]	68 [1727]	111 [2819]	105 1/4 [2673]	63 [1600]	32 [813]	52 [1321]	N/A	N/A	2422 [1099]

DOUBLE OVEN	CRATED WEIGHTS (2 CRATES)		
	DOM. WOOD	INTL. WOOD	METAL SKID
1832	1372 [622]	1471 [667]	1236 [561]
2336	1500 [680]	1625 [737]	1368 [621]
2440	1647 [747]	1773 [804]	1537 [697]
3240	1822 [826]	1961 [889]	1712 [777]
3255	2046 [928]	2115 [959]	1967 [892]
3270	2642 [1198]	2728 [1237]	2592 [1176]
3855	2191 [994]	2264 [1027]	2111 [958]
3870	2825 [1281]	2918 [1324]	2776 [1259]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

TRIPLE STACK

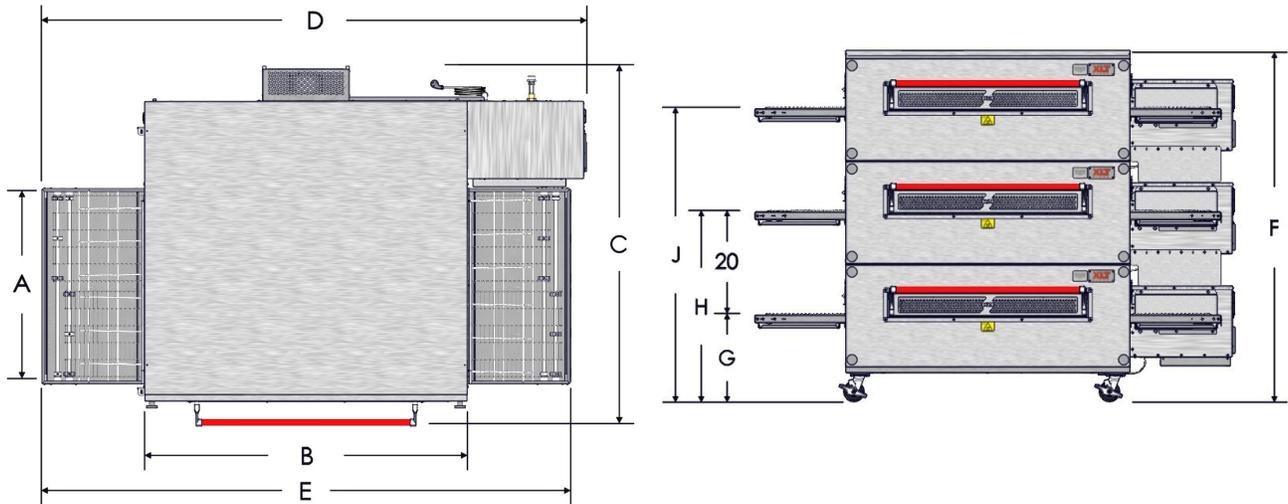


TRIPLE STACK	A	B	C	D	E	F	G	H	J	K	OVEN WEIGHT
1832	18 [457]	32 [813]	48 [1219]	70 1/4 [1784]	67 1/4 [1708]	68 [1727]	17 [432]	37 [940]	57 [1448]	N/A	1392 [631]
2336	23 [584]	36 [914]	51 [1295]	70 1/4 [1784]	65 3/4 [1670]	68 [1727]	17 [433]	37 [941]	57 [1448]	N/A	1635 [742]
2440	24 [610]	40 [1016]	54 [1372]	78 1/4 [1988]	75 1/4 [1911]	68 [1727]	17 [432]	37 [940]	57 [1448]	N/A	1775 [805]
3240	32 [813]	40 [1016]	62 [1575]	78 1/4 [1988]	75 1/4 [1911]	68 [1727]	17 [433]	37 [941]	57 [1448]	N/A	2194 [995]
3255	32 [813]	55 [1397]	62 [1575]	93 1/4 [2369]	90 1/4 [2292]	43 [1092]	32 [813]	37 [940]	57 [1448]	N/A	2607 [1183]
3270	32 [813]	70 [1778]	62 [1575]	111 [2819]	105 1/4 [2673]	43 [1092]	32 [813]	37 [941]	57 [1448]	N/A	3915 [1776]
3855	38 [965]	55 [1397]	68 [1727]	93 1/4 [2369]	90 1/4 [2292]	43 [1092]	32 [813]	37 [940]	57 [1448]	N/A	3267 [1482]
3870	38 [965]	70 [1778]	68 [1727]	111 [2819]	105 1/4 [2673]	43 [1092]	32 [813]	37 [941]	57 [1448]	N/A	4218 [1913]

TRIPLE OVEN	CRATED WEIGHTS (3 CRATES)		
	DOM. WOOD	INTL. WOOD	METAL SKID
1832	1914 [868]	2063 [936]	1710 [776]
2336	2182 [990]	2370 [1075]	1984 [900]
2440	2336 [1060]	2524 [1145]	2171 [985]
3240	2797 [1269]	3005 [1363]	2632 [1194]
3255	3029 [1374]	3097 [1405]	2950 [1338]
3270	4468 [2027]	4554 [2066]	4418 [2004]
3855	3755 [1703]	3828 [1736]	3676 [1667]
3870	4801 [2178]	4893 [2219]	4751 [2155]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

SINGLE STACK

GAS AND ELECTRICAL INLET DIMENSIONS WORLD & AUSTRALIA (230V / 50 Hz)

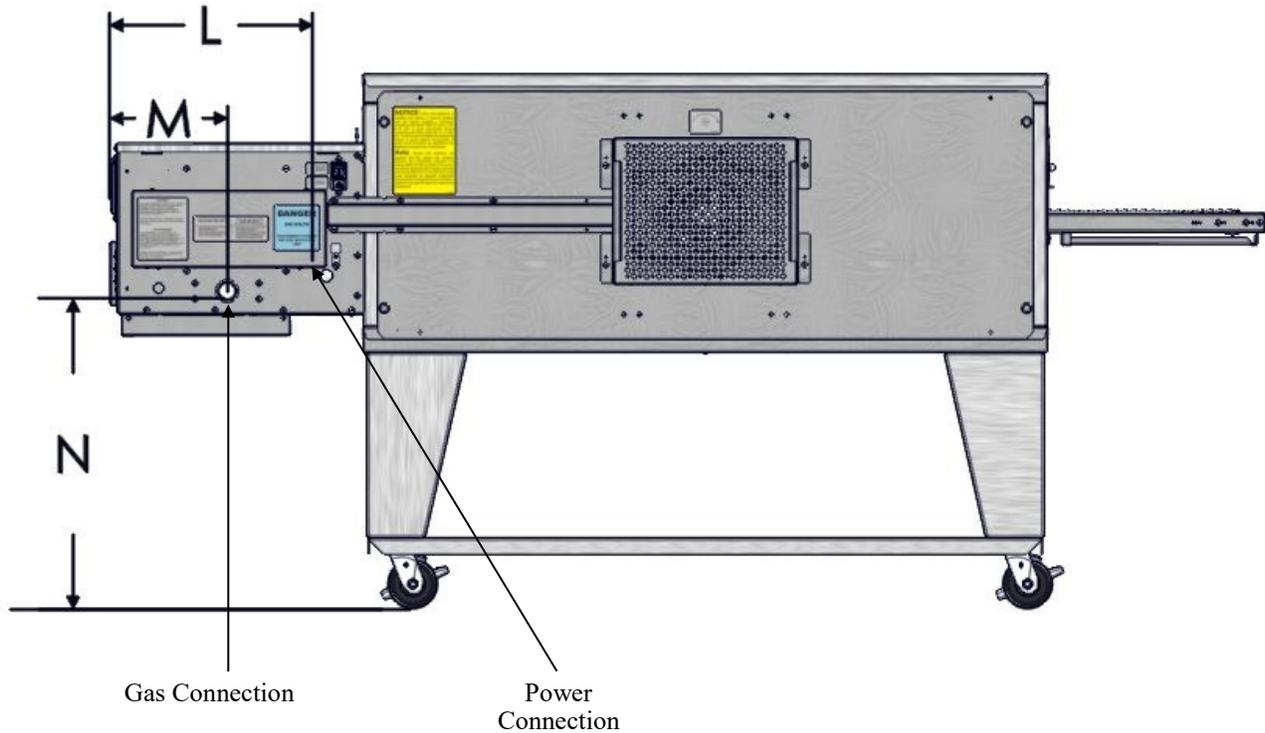


SINGLE OVEN	L	M	N	P	R	S	OVEN WEIGHT
1832	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	568 [258]
2336	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	631 [286]
2440	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	706 [320]
3240	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	791 [359]
3255	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	942 [427]
3270	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	1221 [554]
3855	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	1014 [460]
3870	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	N/A	N/A	N/A	1308 [593]

SINGLE OVEN	CRATED WEIGHTS (1 CRATE)		
	DOM. WOOD	INTL. WOOD	METAL SKID
1832	753 [342]	802 [364]	685 [311]
2336	822 [373]	885 [401]	756 [343]
2440	905 [411]	967 [439]	850 [386]
3240	998 [453]	1067 [484]	943 [428]
3255	1197 [543]	1265 [574]	1118 [507]
3270	1504 [682]	1591 [722]	1455 [660]
3855	1276 [579]	1350 [612]	1197 [543]
3870	1600 [726]	1692 [767]	1550 [703]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

DOUBLE STACK

GAS AND ELECTRICAL INLET DIMENSIONS WORLD & AUSTRALIA (230V / 50 Hz)

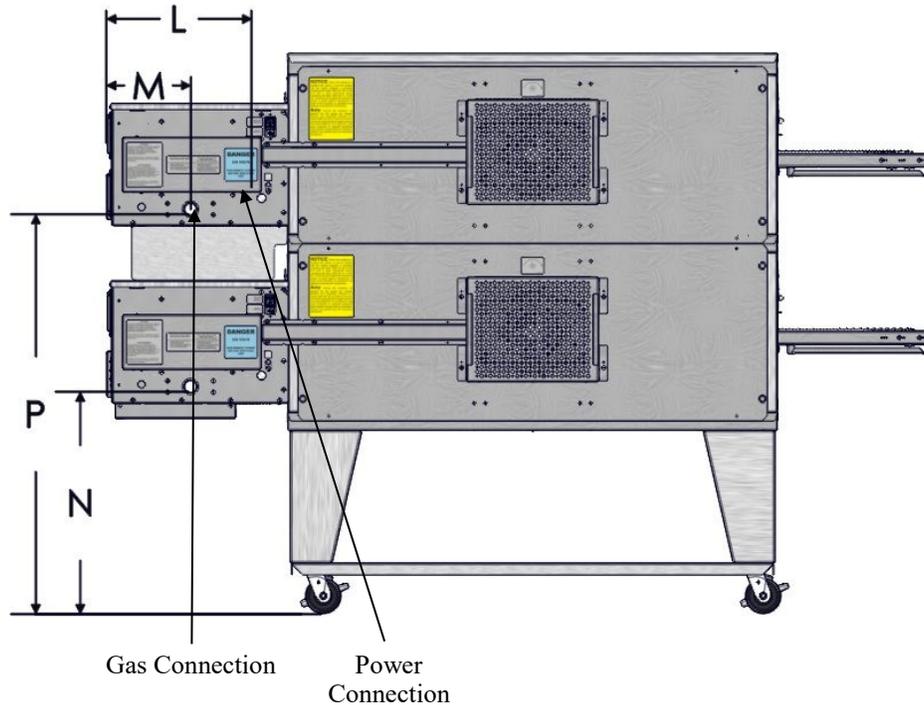


DOUBLE STACK	L	M	N	P	R	S	OVEN WEIGHT
1832	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	1030 [467]
2336	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	1145 [519]
2440	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	1284 [582]
3240	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	1441 [654]
3255	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	1714 [777]
3270	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	2247 [1019]
3855	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	1846 [837]
3870	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	45 1/2 [1156]	N/A	N/A	2404 [1090]

DOUBLE OVEN	CRATED WEIGHTS (2 CRATES)		
	DOM. WOOD	INTL. WOOD	METAL SKID
1832	1261 [572]	1311 [595]	1193 [541]
2336	1388 [630]	1450 [658]	1322 [600]
2440	1540 [699]	1603 [727]	1485 [674]
3240	1713 [777]	1782 [808]	1658 [752]
3255	2046 [928]	2115 [959]	1967 [892]
3270	2633 [1194]	2720 [1234]	2583 [1172]
3855	2192 [994]	2265 [1027]	2112 [958]
3870	2805 [1272]	2898 [1315]	2756 [1250]

NOTE: All dimensions in inches [millimeters], $\pm 1/4$ [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

TRIPLE STACK

GAS AND ELECTRICAL INLET DIMENSIONS WORLD & AUSTRALIA (230V / 50 Hz)

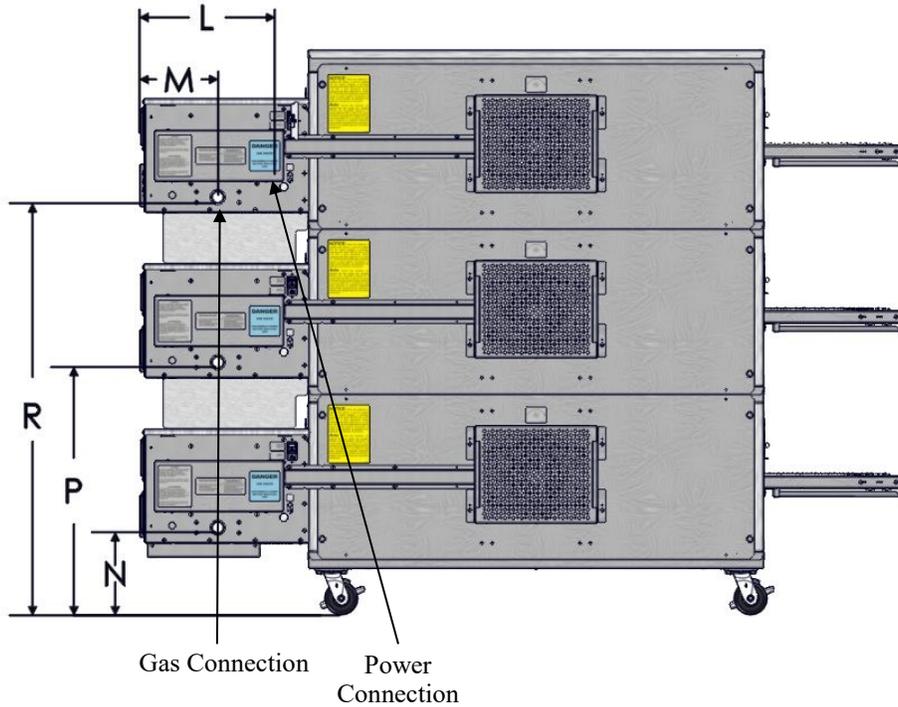

TRIPLE STACK	L	M	N	P	R	S	OVEN WEIGHT
1832	18 1/4 [464]	9 1/2 [241]	10 1/4 [260]	35 1/4 [895]	55 1/4 [1403]	N/A	1403 [636]
2336	18 1/4 [464]	9 1/2 [241]	10 1/4 [260]	35 1/4 [895]	55 1/4 [1403]	N/A	1647 [747]
2440	18 1/4 [464]	9 1/2 [241]	10 1/4 [260]	35 1/4 [895]	55 1/4 [1403]	N/A	1786 [810]
3240	18 1/4 [464]	9 1/2 [241]	10 1/4 [260]	35 1/4 [895]	55 1/4 [1403]	N/A	2207 [1001]
3255	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	35 1/4 [895]	55 1/4 [1403]	N/A	2618 [1188]
3270	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	35 1/4 [895]	55 1/4 [1403]	N/A	4018 [1823]
3855	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	35 1/4 [895]	55 1/4 [1403]	N/A	3339 [1515]
3870	18 1/4 [464]	9 1/2 [241]	25 1/2 [648]	35 1/4 [895]	55 1/4 [1403]	N/A	4336 [1967]

TRIPLE OVEN	CRATED WEIGHTS (3 CRATES)		
	DOM. WOOD	INTL. WOOD	METAL SKID
1832	1671 [758]	1721 [781]	1603 [727]
2336	1940 [880]	2002 [908]	1874 [850]
2440	2093 [949]	2155 [977]	2038 [924]
3240	2556 [1159]	2625 [1191]	2501 [1134]
3255	3041 [1379]	3109 [1410]	2962 [1344]
3270	4581 [2078]	4668 [2117]	4531 [2055]
3855	3834 [1739]	3908 [1773]	3755 [1703]
3870	4931 [2237]	5023 [2278]	4881 [2214]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

All values shown on this page are per each oven

Standard (120V/60Hz) - Gas Oven Heating Values & Orifice Sizes					
Oven Model	Heating Values		Orifice Sizes		
	All Fuels BTU/HR	NAT		LP	
		Inches	MM	Inches	MM
1832	56,000	0.136	3.45	0.084	2.13
2336	71,000	0.152	3.86	0.098	2.49
2440	71,000	0.152	3.86	0.098	2.49
3240	88,000	0.170	4.32	0.104	2.64
3240-HP	122,000	0.196	4.98	0.125	3.18
3255	115,000	0.187	4.75	0.120	3.05
3255-HP	130,000	0.209	5.31	0.130	3.30
3270	190,000	0.176	4.47	0.111	2.82
3270-HP	240,000	0.196	4.98	0.125	3.18
3855	115,000	0.196	4.98	0.123	3.12
3855-HP	148,000	0.218	5.54	0.134	3.40
3870	198,000	0.181	4.60	0.111	2.82
3870-HP	240,000	0.196	4.98	0.125	3.18

Australia & New Zealand (230V/50Hz) - Gas Oven Heating Values & Orifice Sizes						
Oven Model	Heating Values				Orifice Sizes	
	NAT		LP		NAT MM	LP MM
	KW/HR	MJ/HR	KW/HR	MJ/HR		
1832	16.41	59.08	16.41	59.08	3.45	2.13
2336	20.80	74.88	20.80	74.88	3.86	2.49
2440	20.80	74.88	20.80	74.88	3.86	2.49
3240	25.79	92.84	23.44	84.38	4.32	2.64
3240-HP	35.75	128.70	35.75	128.70	4.98	3.18
3255	33.70	121.32	35.16	126.58	4.75	3.05
3255-HP	38.10	137.16	35.46	127.66	5.31	3.30
3270	55.68	200.45	55.68	200.45	4.47	2.82
3270-HP	70.30	253.08	70.30	253.08	4.98	3.18
3855	33.00	118.80	33.70	121.32	4.98	3.12
3855-HP	43.37	156.13	39.85	143.46	5.54	3.40
3870	58.03	208.91	54.22	195.19	4.60	2.82
3870-HP	70.30	253.08	70.30	253.08	4.98	3.18

World (230V/50Hz) - Gas Oven Heating Values & Orifice Sizes								
Oven Model	Heating Values						Orifice Sizes	
	Natural			Butane		Propane	NAT MM	LP MM
	G20		G25	G30	G31			
	KW/HR	MJ/HR	KW/HR	KW/HR	KW/HR	MJ/HR		
1832	16.41	59.08	13.18	18.50	16.41	59.08	3.45	2.13
2336	20.80	74.88	16.99	25.00	20.80	74.88	3.86	2.49
2440	20.80	74.88	16.99	25.00	20.80	74.88	3.86	2.49
3240	25.79	92.85	20.80	25.79	23.44	84.39	4.32	2.64
3240-HP	35.75	128.70	27.98	38.24	35.75	128.70	4.98	3.18
3255	33.70	121.32	26.08	39.56	35.16	126.58	4.75	3.05
3255-HP	38.10	137.16	33.11	39.85	35.46	127.66	5.31	3.30
3270	55.68	200.45	46.30	58.03	55.68	200.45	4.47	2.82
3270-HP	70.30	253.09	55.00	76.78	70.30	253.09	4.98	3.18
3855	33.00	118.80	30.00	38.10	33.70	121.32	4.98	3.12
3855-HP	43.37	156.14	38.00	43.37	39.85	143.46	5.54	3.40
3870	58.03	208.91	54.22	58.03	54.22	195.20	4.60	2.82
3870-HP	70.30	253.09	55.00	76.20	70.30	253.09	4.98	3.18

Korea (220V/60Hz) - Gas Oven Heating Values & Orifice Sizes				
Oven Model	Heating Values		Orifice Sizes	
	NAT	LP	NAT	LP
	KW/HR	KW/HR	MM	MM
1832	16.41	16.41	3.45	2.13
2336	20.80	20.80	3.86	2.49
2440	20.80	20.80	3.86	2.49
3240	25.79	23.44	4.32	2.64
3240-HP	35.75	35.75	4.98	3.18
3255	33.70	35.16	4.75	3.05
3255-HP	38.10	35.46	5.31	3.30
3270	55.68	55.68	4.47	2.82
3270-HP	70.30	70.30	4.98	3.18
3855	33.00	33.70	4.98	3.12
3855-HP	43.37	39.85	5.54	3.40
3870	58.03	54.22	4.60	2.82
3870-HP	70.30	70.30	4.98	3.18

 The HP behind Oven Model stands for High Performance.

NOTE

 The BTU readings listed are maximums that could be reached while climbing to the set point temperature. Once set point is reached the BTU/HR will lower. Readings will vary as oven capacity changes during operation.

NOTE

Gas Oven Fuel Pressure Requirements														
Oven Models	Inlet Pressure Range								Manifold Pressure					
	Standard, World, and Australia							Korea	Natural Gas			LP Gas		
	Natural Gas			LP Gas				Natural Gas	LP Gas	Natural Gas		LP Gas		
	W/C	mbar	kPa	W/C	mbar	kPa	kPa	kPa	W/C	mbar	kPa	W/C	mbar	kPa
All	6-14	15-35	1.50-3.50	11.5-14	27.5-35	2.75-3.50	1.50-2.50	2.30-3.30	3.5	8.75	0.875	10	25	2.5

 **NOTE** If your oven rises above set point, contact XLT for instructions to make bypass orifice adjustments.

Adjustable Bypass Low Flame Pressure Setting	
Gas Types	in. W/C
Natural	0.4
Propane	0.8

	Oven Gas Group								
	Natural Gas					Propane Gas			
Gas Group	I _{2H}	I _{2E}	I _{2ELL}	I _{2E+}	I _{2L}	I ₃₊	I _{3B/P} (30)	I _{3P} (30/37/50)	I _{3B} (37)
Inlet pressure (mbar)	20	20	20/25	20/25	25	28/30/37/50	28-30/37/50	30/37/50	37
Number of injectors	(1) per burner								
Main burner opening size	Fixed								
Ignition	Electric Direct Spark Igniter								
Inlet connection	Standard: 3/4" NPT					World/Korean: BSP 3/4" Female thread			

Gas Matrix by Country									
Country	Symbol	Natural Gas (8.75 mbar manifold)					LP Gas (25 mbar manifold)		
		I _{2H}	I _{2E}	I _{2ELL}	I _{2E+}	I _{2L}	I ₃₊	I _{3B/P}	I _{3P}
Austria	AT	X						X	
Belgium	BE				X		X		
Bulgaria	BG	X						X	
Croatia	HR	X						X	X
Cyprus	CY						X	X	X
Czech Republic	CZ	X					X	X	X
Denmark	DK	X						X	
Estonia	EE	X					X	X	
Finland	FI	X						X	X
France	FR				X		X	X	X
Germany	DE		X	X				X	X
Greece	GR	X					X		X
Hungary	HU	X				X		X	X
Iceland	IS	X							
Ireland	IE	X					X		X
Italy	IT	X					X		
Latvia	LT	X					X	X	
Lithuania	LV	X					X	X	
Luxembourg	LU		X				X	X	X
Malta	MT							X	X
Netherlands	NL		X			X		X	X
Norway	NO	X						X	
Poland	PL		X					X	X
Portugal	PT	X					X		X
Romania	RO	X					X		
Slovakia	SK	X					X	X	X
Slovenia	SI	X						X	X
Spain	ES	X					X		X
Sweden	SE	X						X	
Switzerland	CH	X					X	X	X
Turkey	TR	X						X	X
United Kingdom	GB	X					X		X

Gas Supply Requirements for All Ovens



All installations must conform to local building & mechanical codes.

NOTE


1. The gas supply shall have a gas meter & regulator large enough to handle **ALL** of the gas appliances, such as the furnace, water heater, & ovens in operation at the same time. Add up all of the Btu/kw/MJ ratings to determine the total load.
2. The gas supply shall have a separate gas meter and gas pressure regulator for each occupant. Installations in multiple occupancy buildings, (strip malls) shall not share gas meters and regulators with other occupants.
3. Gas hose assemblies with quick disconnects for each oven deck will be installed at each valve.
4. A sediment trap shall be installed downstream of the equipment shutoff valve as close to the inlet of the appliance as practical at the time of appliance installation. The sediment trap shall be a tee fitting with a capped nipple in the bottom outlet as illustrated (Pg. #21), and in accordance with ANSI Z223.1-2012 and NFPA 54-2012 National Fuel Gas Code, section 9.6.7.
5. A sediment trap shall be installed on the rear of the oven control box before the gas hose. The sediment trap shall be a tee fitting with a capped nipple in the bottom outlet as illustrated (Pg. #35), and in accordance with ANSI Z223.1-2012 and NFPA 54-2012 National Fuel Gas Code, section 9.6.7.
6. The composition of gases varies greatly from time to time and from place to place. For this reason, the material used for the gas lines shall be steel or malleable iron, not copper. ANSI Z83.11-2016 CSA 1.8-2016 Gas Food Service Equipment states: "Copper tubing or semi rigid tubing with internal copper layering, whether internally tinned or not, shall not be used for conveying gases." ANSI Z223.1 NFPA 54 National Fuel Gas Code states: "Copper and brass tubing shall not be used if the gas contains more than an average of 0.3 grains of hydrogen sulfide per 100 scf of gas (0,7 mg/100L)."



CAUTION

Do not use Teflon tape on gas line connections as this can cause gas valve malfunction or plugging of orifices from shreds of tape.

- A minimum of a 1 1/2 supply line is required.

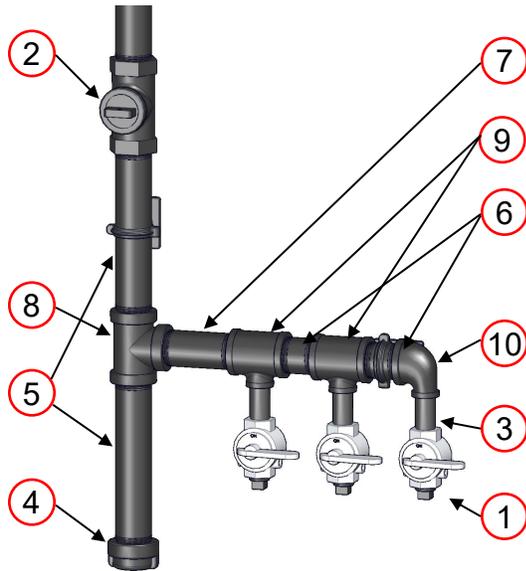

Item#	Description	QTY
1	3/4 Manual Gas Valve	3
2	1-1/2 Ball Valve	1
3	3/4 x 3 Nipple	3
4	1-1/2 Pipe Cap	1
5	1-1/2 x 10 Nipple	2
6	1-1/2 x 3 Nipple	2
7	1-1/2 x 5 Nipple	1
8	1-1/2 Tee	1
9	2-1/2x 3/4 x 1-1/2 Reducing Tee	2
10	1-1/2 x 3/4 Reducing Elbow	1

Gas Supply Testing Requirements

1. The appliance & its individual shutoff valve must be **disconnected** from the gas supply piping system during any pressure testing of that system at test pressures in **excess** of 3.5 kPa or 1/2-psi.
2. The appliance must be **isolated** from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures **equal to or less than** 3.45 kPa or 1/2-psi.

Gas Hose Requirements

- For Australia, if installing with a flexible hose assembly, the assembly must be certified to AS/NZS 1869, & be Class B or D.
- For Standard Ovens, if installing with a flexible gas hose, the installation must comply with either ANSI Z21.69 or CAN/CGA-6.16 & a disconnect device complying with either ANSI Z21.41 or CAN-6.9.
- The installation must conform with local building codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1, latest version, Natural Gas Installation Code, CAN/CGA-B149.1, or the Liquid Petroleum Gas Installation Code, CAN/CGA-B149.2, as applicable.

All values shown this page are per each oven

Gas Oven Electrical Requirements								
Per EACH Oven								
Oven Model	Standard			Australia & World			Korea	
	Volts AC	Amps	Hertz	Volts AC	Amps	Hertz	Volts AC	Watts
1832	120 VAC 1Φ	4.8	50/60	220/230/ 240 VAC 1Φ	3	50/60	220 VAC 1Φ	660
2336		4.8			3			
2440		4.8			3			
* 3240		4.8			3			
* 3255		4.8			3			
* 3270		8.5			7			
* 3855		4.8			3			660
* 3870		8.5			7			1540
*All HP Models Included				Install in accordance with AS/NZS 3000 Wiring				

FOR EACH OVEN:

- A separate 20A circuit breaker must be provided for each oven deck.
- Electrical connections must be accessible when the ovens are in the installed position.
- Electrical connections must meet all local code requirements.

Electrical Grounding Instructions

Standard Ovens

- This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard & should be plugged into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.
- When installed, the appliance must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.2, as applicable.



**HIGH
VOLTAGE**


World Ovens

- This appliance is equipped with a ground lug for your protection against shock hazard & must be properly grounded.
- When installed, the appliance must be electrically grounded in accordance with local codes.

Australian Ovens

- This appliance is equipped with a ground lug for your protection against shock hazard & must be properly grounded.
- The electrical service must be installed in accordance with AS/NZS 3000 Wiring Rules.

These ovens are suitable for installation on either combustible or non-combustible floors, and adjacent to either combustible or non-combustible walls. The motor cover is designed to provide the proper clearance to the back of the oven. The minimum side clearances are 6in. / 150mm, measured from the end of the conveyor.

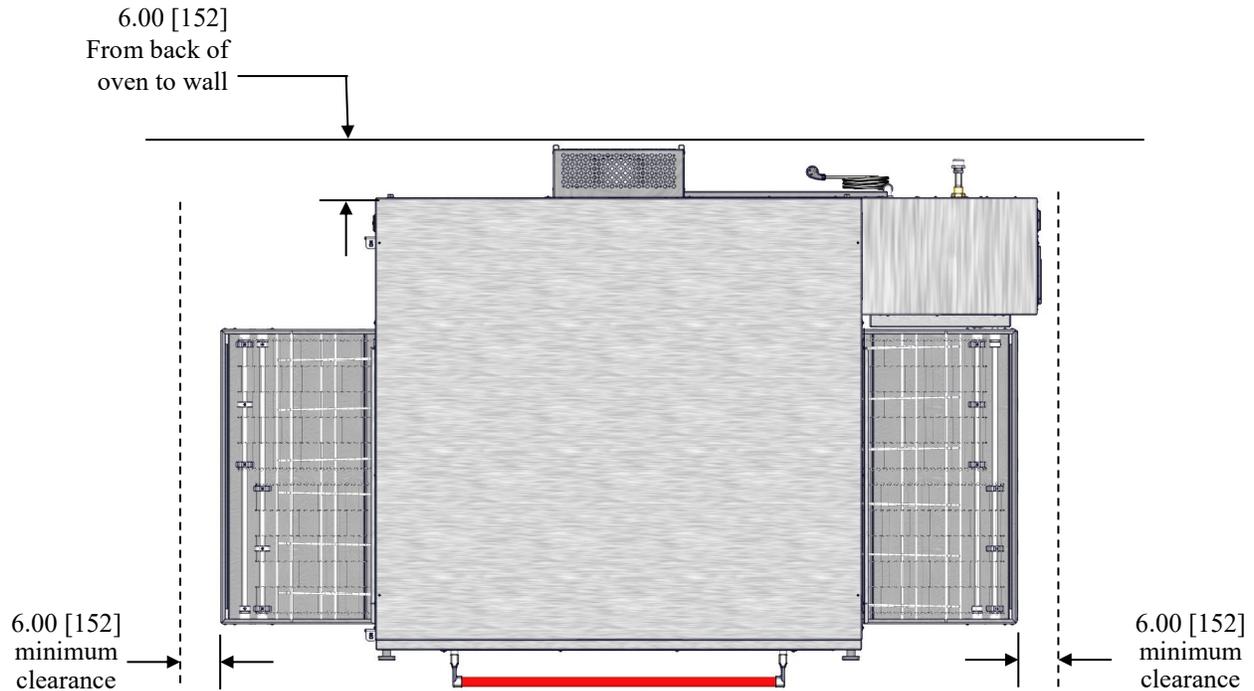

NOTE Utilities must be easily accessible when the ovens are in the installed position. Do not install utilities behind the ovens.

NOTE All installations must conform to local building and mechanical codes. It is required that the ovens be placed under a ventilation hood to provide exhaust ventilation and adequate air supply.


NOTE Equipment must be installed with cord anchorage to relieve strain on conductors, twisting of terminals, and abrasions to insulation.

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.




NOTE

Incoming gas line MUST go beside the oven on the control box side.

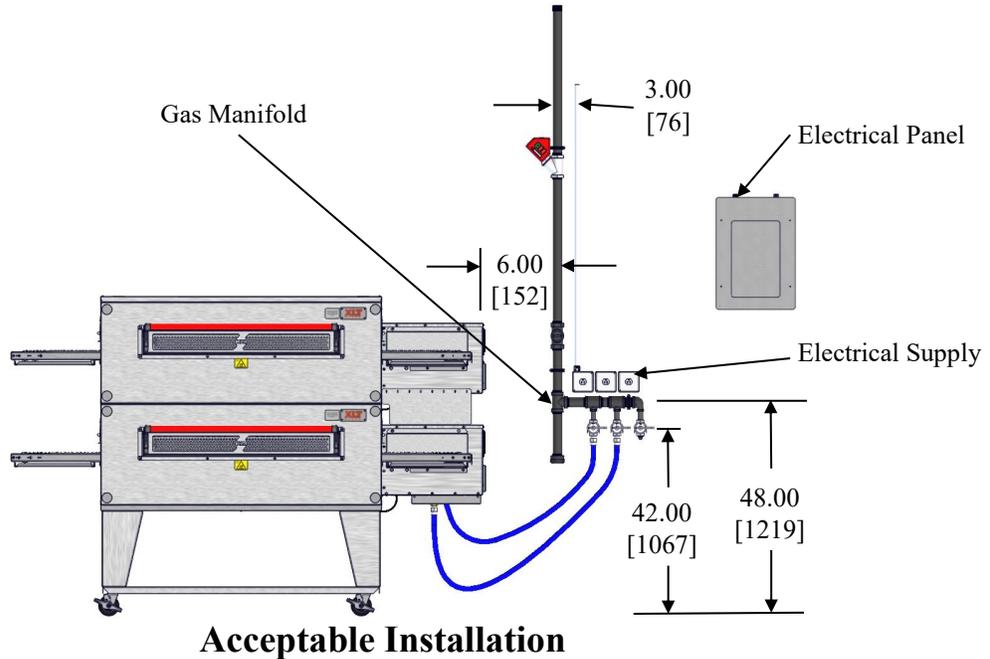

CAUTION

Utilities must be easily accessible when the ovens are in the installed position. Do not install utilities behind the ovens.

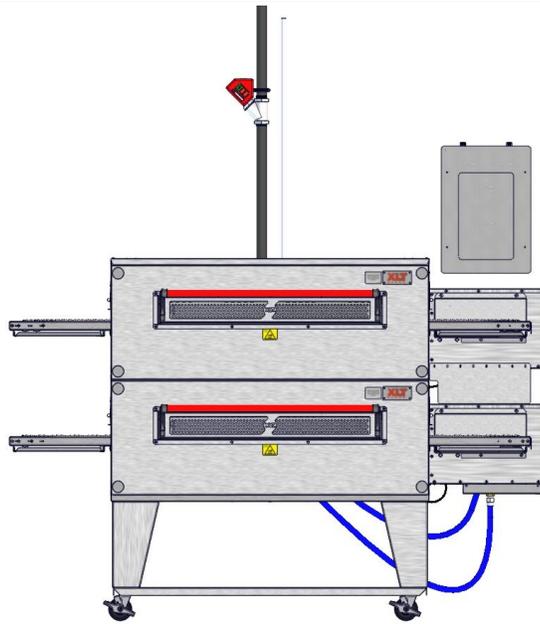

Unacceptable Installation

NOTE: All dimensions in inches [millimeters], $\pm 1/4$ [6], unless otherwise noted.

WARNING & SAFETY INFORMATION

XLT ovens can easily be moved and stacked with the proper lifting equipment. The use of XLT approved lifting equipment is highly recommended. Contact XLT for more information.

**DANGER**

- These ovens are heavy & can tip or fall causing bodily injury.
- NEVER place any part of your body beneath any oven that is suspended by the lifting jacks. A crush hazard exists if the oven falls or slips.
- DO NOT place your hands on the lifting jack vertical pole beneath the jack's winch. As the jack's winch descends when you turn the jack handle, a pinch point is created between the winch & the pole.


**CAUTION**

BE CAREFUL when rolling the oven on the cart, especially when going up or down ramps & over bumps. Leave the straps/banding on until the oven is near the assembly area.


**DANGER**

- Make sure that the notch on tube of the winch assembly is aligned with the pin in the tripod base as shown. These alignments are important and keep the jack aligned properly.
- Check for smooth operation. The cable should not be pinched and should pass smoothly over the pulley on top of the pole assembly.
- Inspect cable prior to each use.
- If cable is frayed or shows signs of excessive wear and tear, DO NOT USE until cable is replaced.
- At a minimum replace the cable annually with wire rope that meets or exceeds the jack manufacturer's specifications.
- Do not exceed the stated capacity of the jack.

Base Assembly - Single & Double Stack

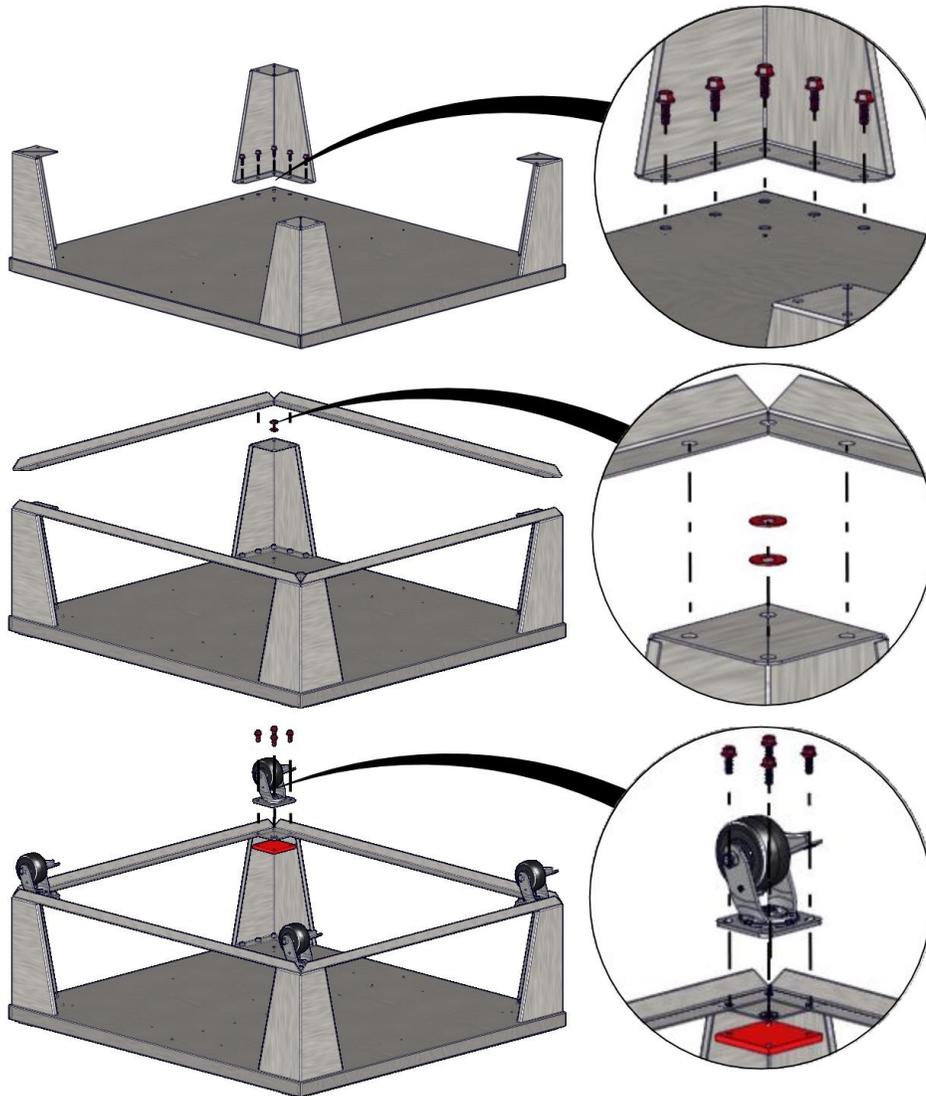



Base Assembly - Triple Stack

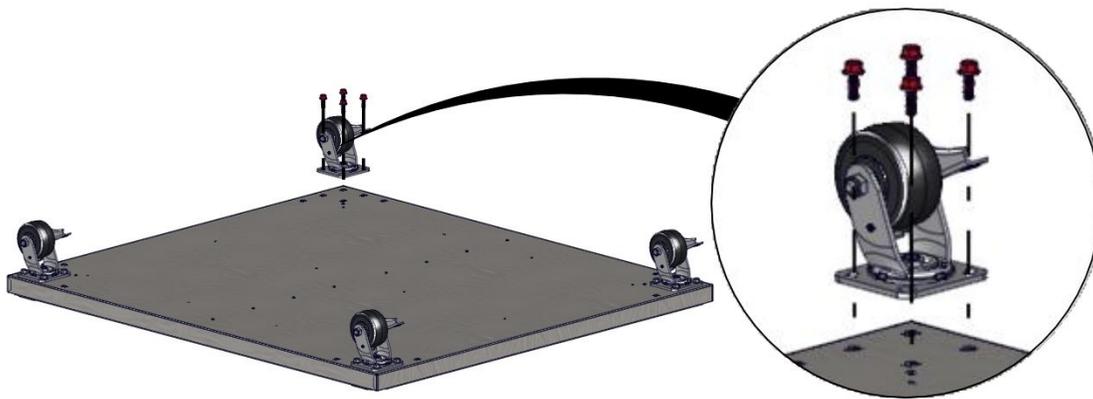




TIP

Read and understand the next six (6) steps first. They illustrate how to stack the ovens and install accessories

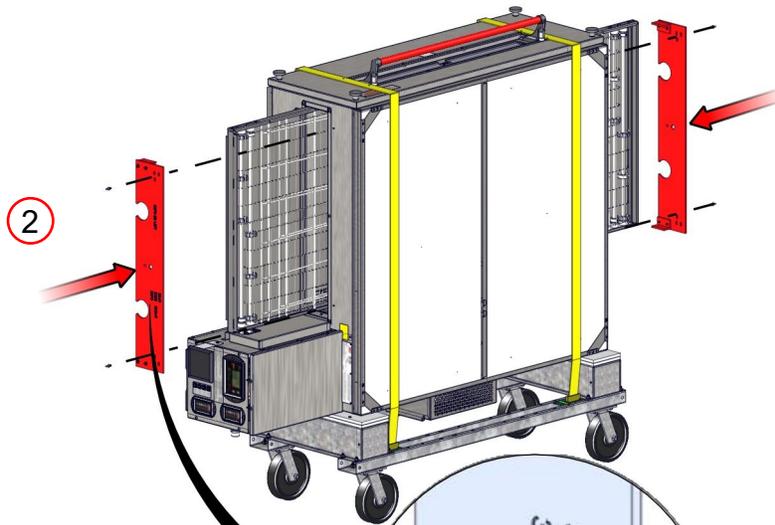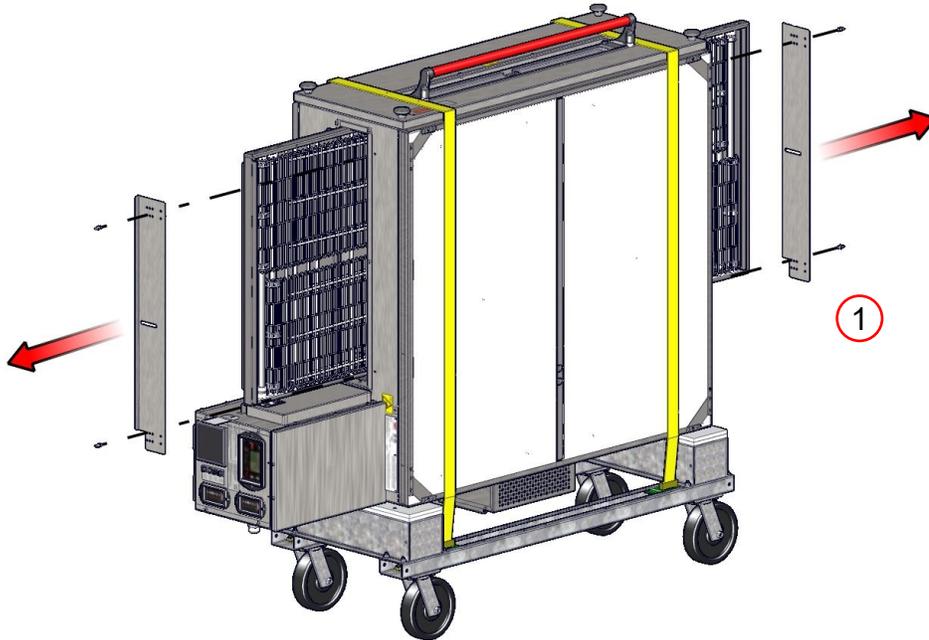

NOTE

The Lifting Pipe hole, marked for the appropriate oven size, must be installed closest to the control box.

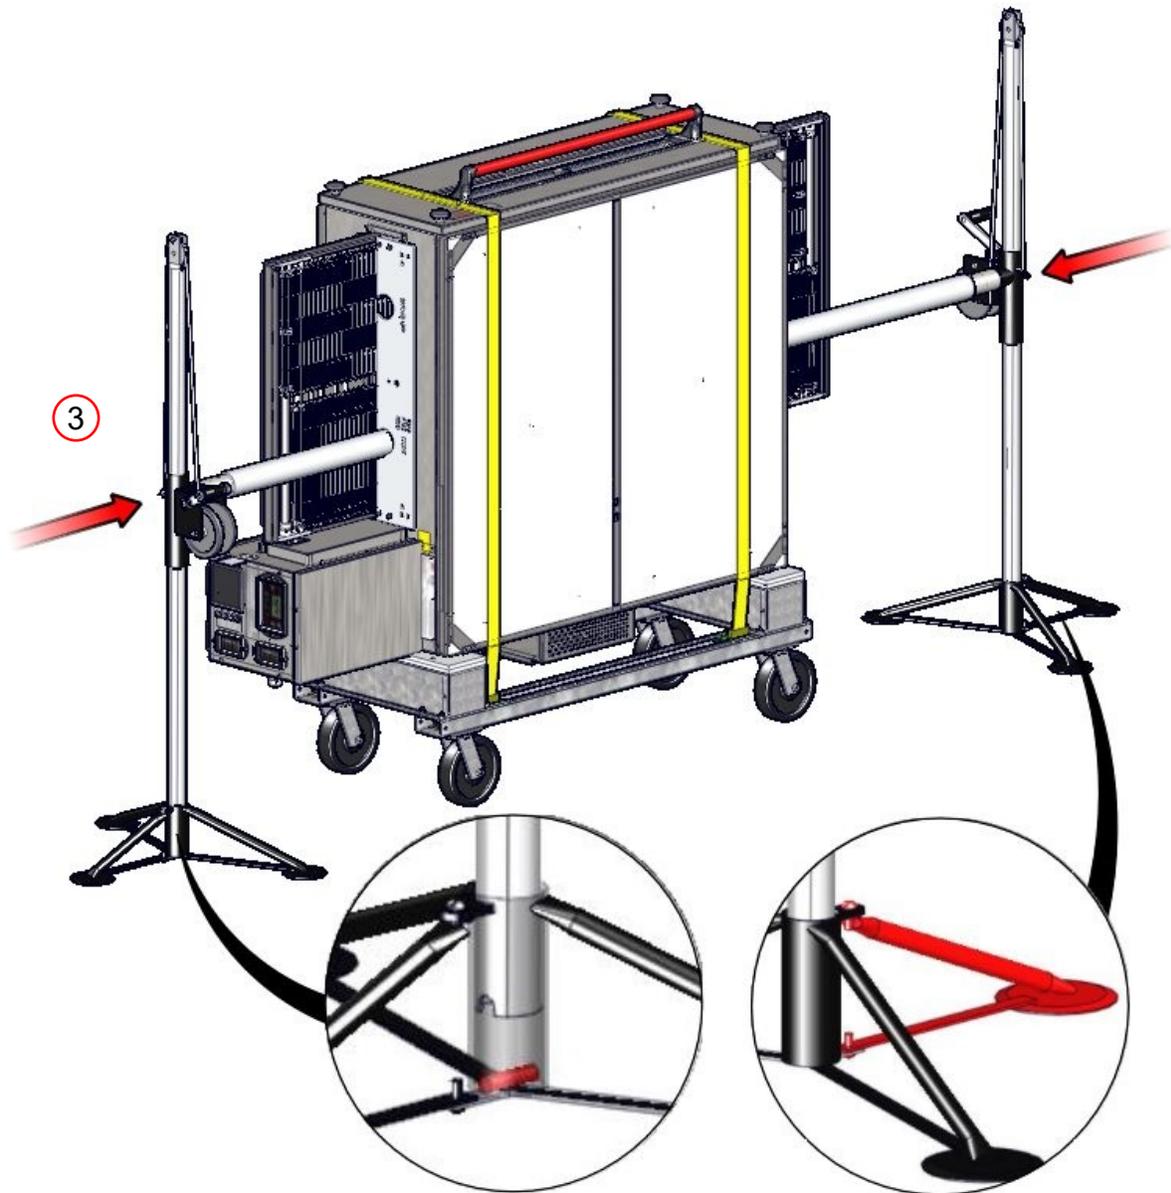

The folding leg of the tripod must be positioned outward from the oven


Stacking the Ovens

**DANGER**

Failure to engage the Lifting Jacks into the Lifting Pipe properly and completely will result in damage, injury, or death from a falling oven.

**DANGER**


- Both jacks should be raised in unison, otherwise they may bind and a dangerous situation will develop.
- Do not put any part of yourself under the oven at any time.
- The oven is top heavy. Be careful.

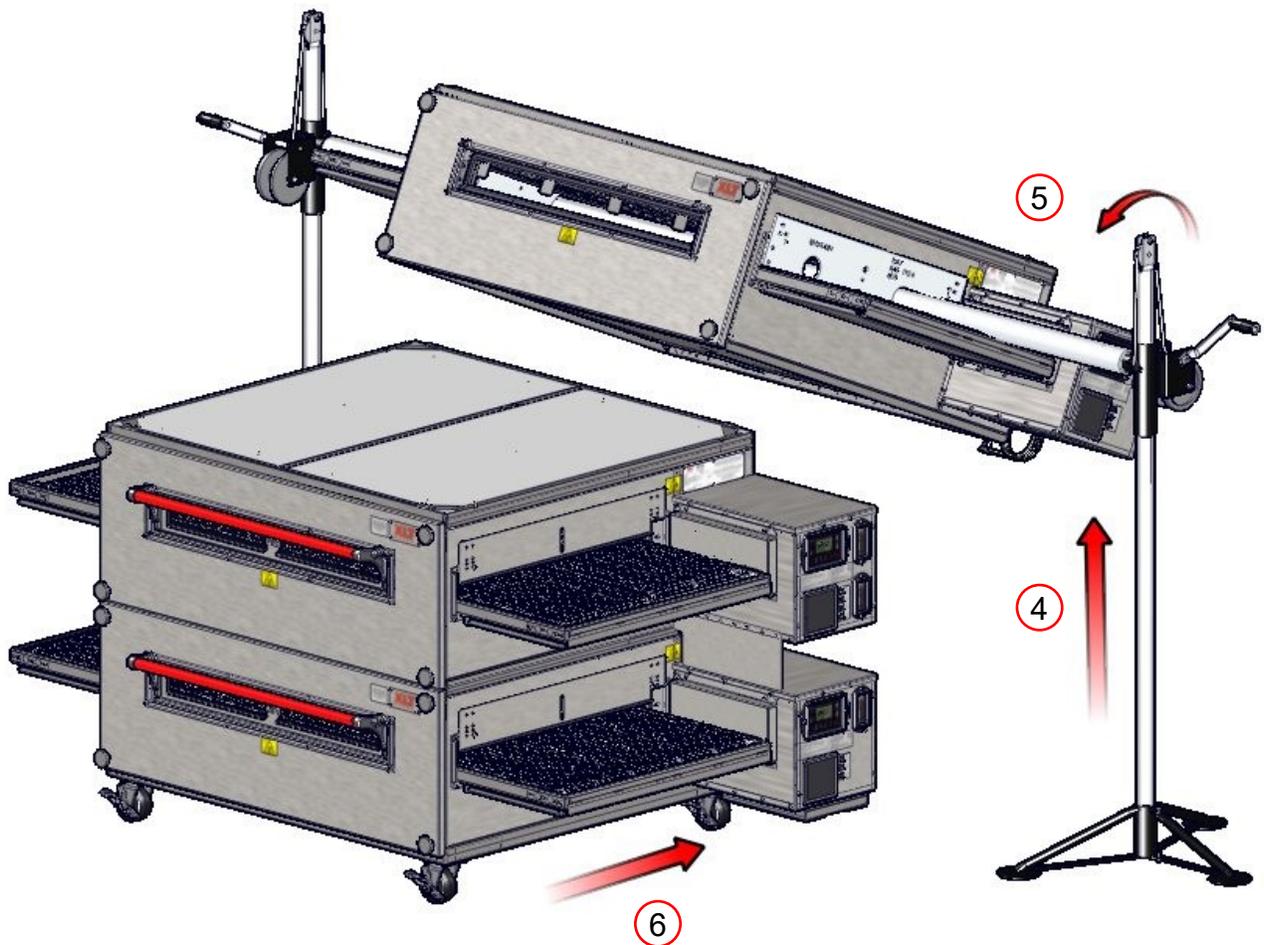

**WARNING**


Individuals with pacemakers or internal medical devices should not handle strong rare-earth magnets. These magnets are found in the sandwich door assembly.



Removing Finger Clips

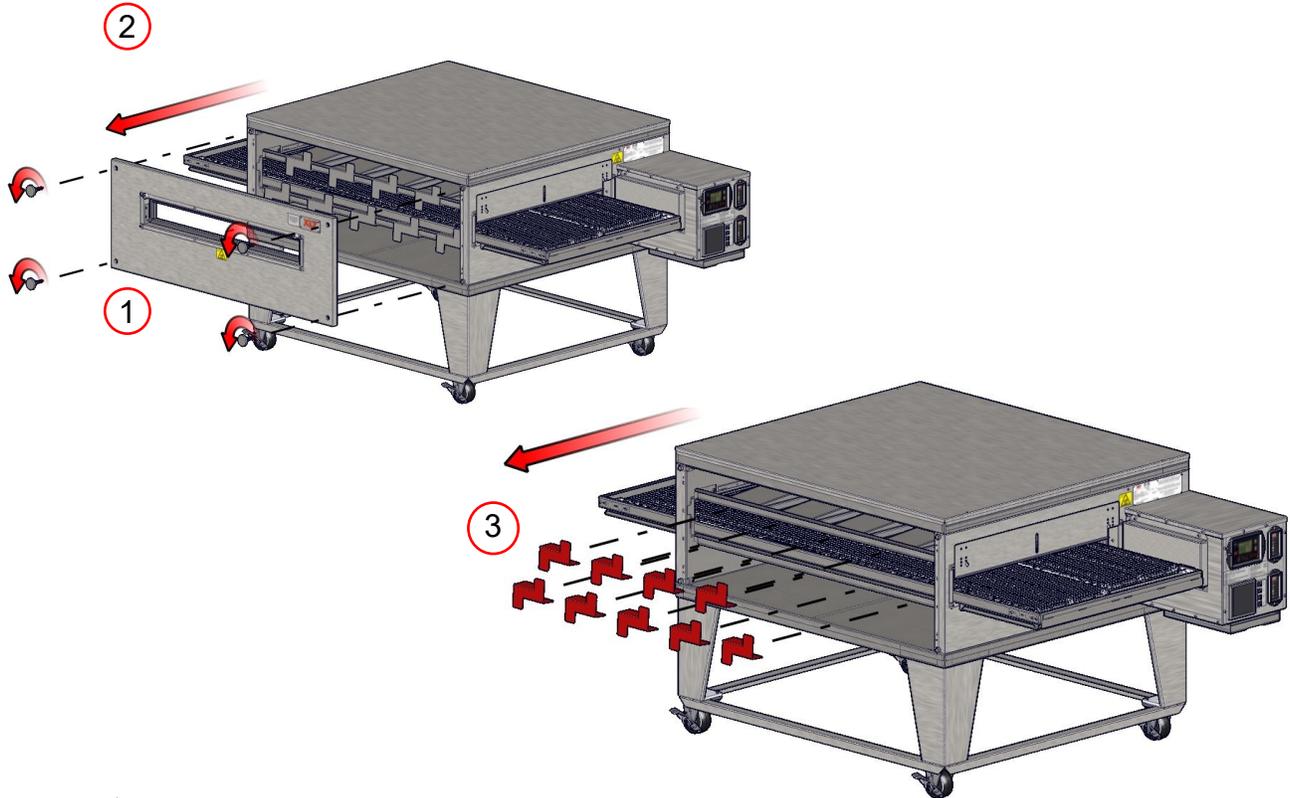**NOTE**

Finger clips for transportation purposes only. Discard once removed.

Installing Sandwich Door

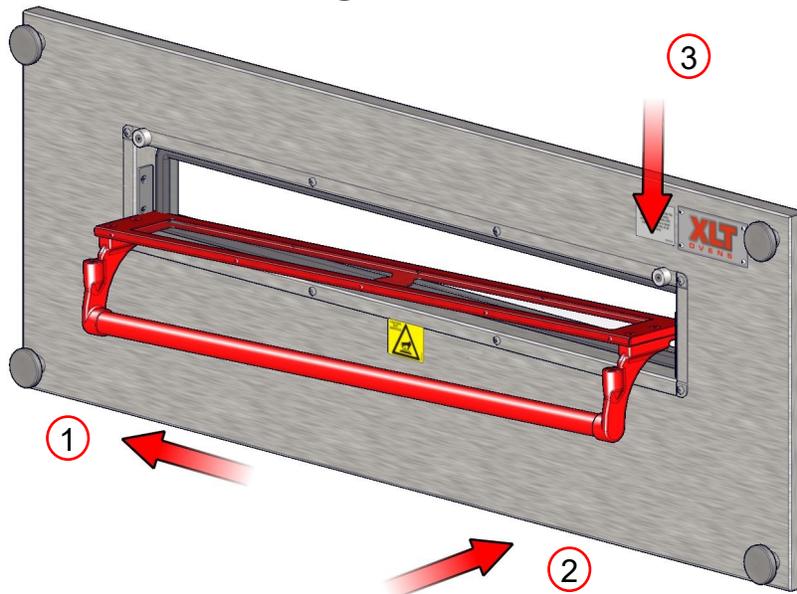

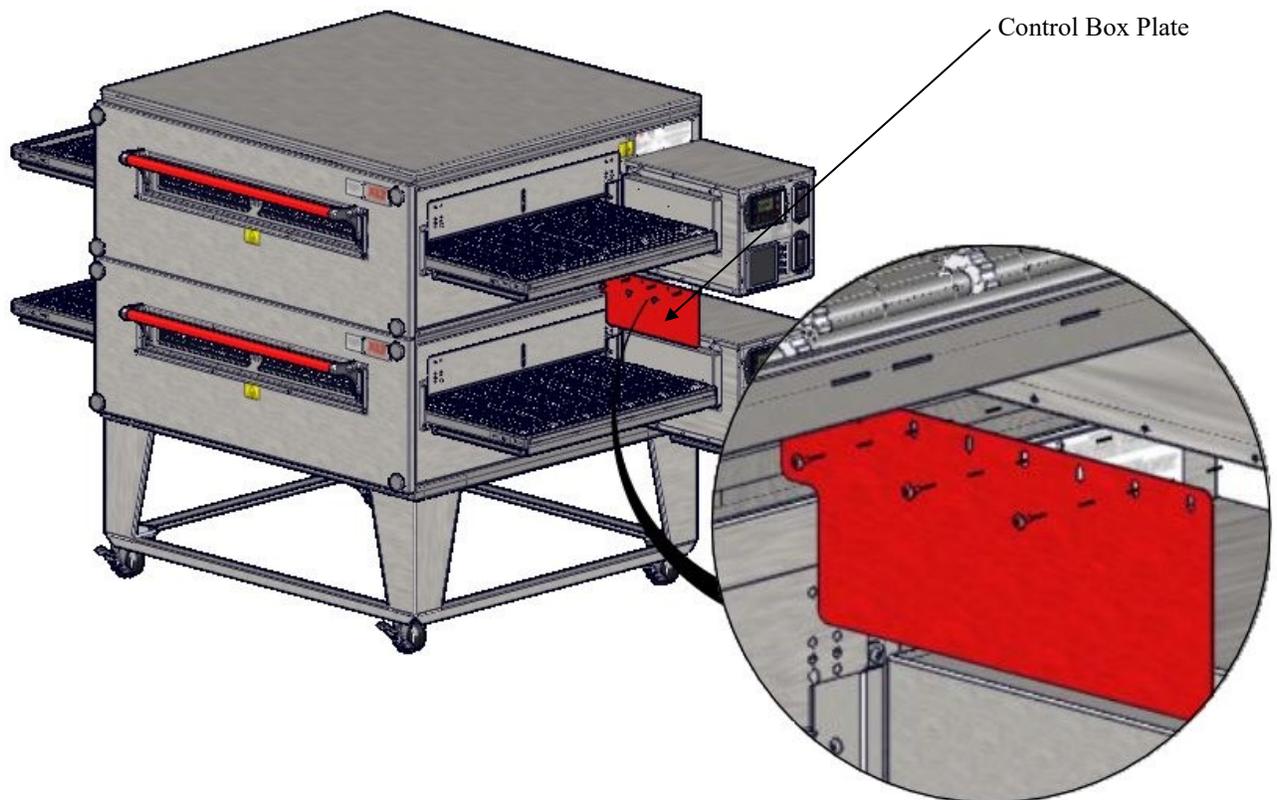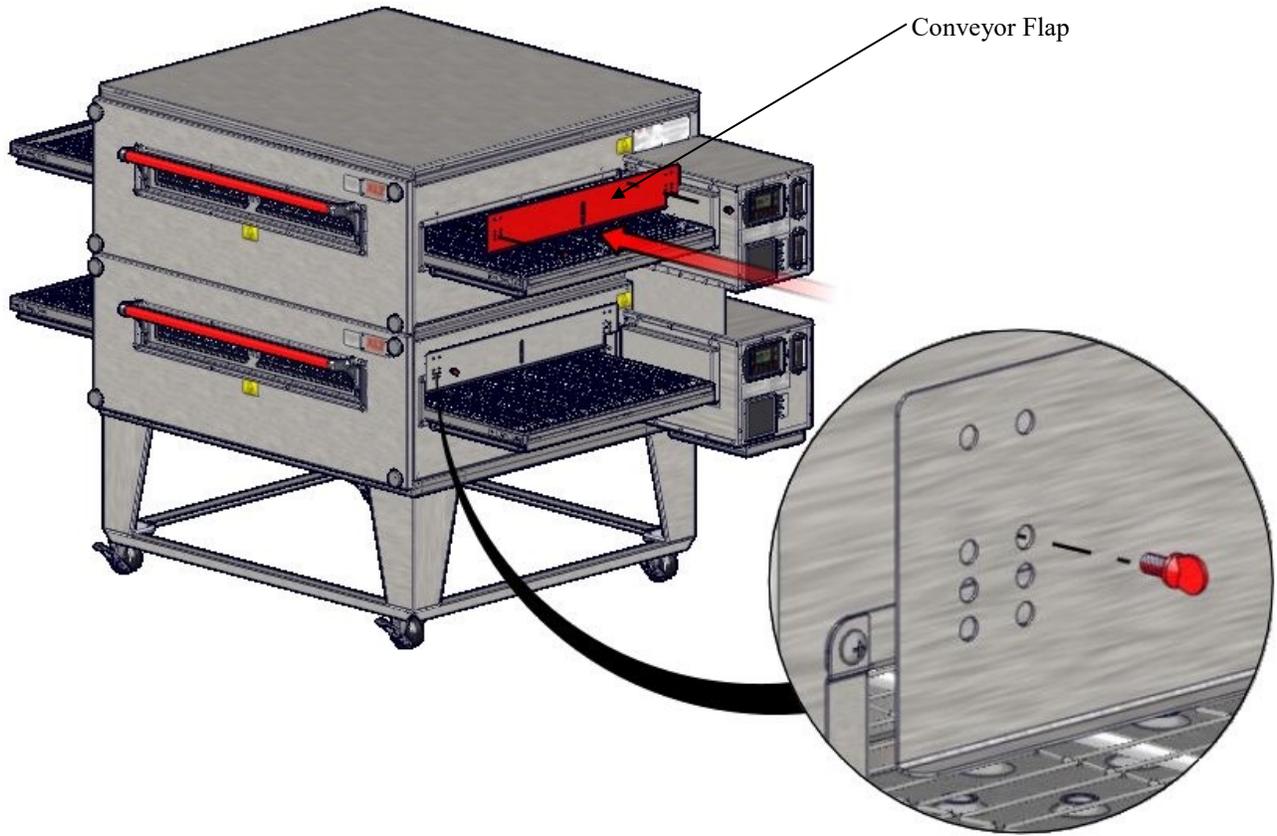

Physical Location & Spacing Requirements

These ovens are suitable for installation on either combustible or non-combustible floors, and adjacent to either combustible or non-combustible walls. The motor cover is designed to provide the proper clearance to the back of the oven. The minimum side clearances are 6in. / 150mm, measured from the end of the conveyor.




NOTE

All installations must conform to local building and mechanical codes. In Australia, install the restraint cable in accordance with AS 5601.

Restraint

Because all ovens are equipped with casters, all installations must be configured with a restraint to limit the movement of the oven without depending on the electric power supply cord or gas hose to limit the oven movement. One (1) restraint kit, which includes one (1) eye bolt, one (1) stainless steel clip & a cable, is required for each oven stack, regardless if used on a single, double, triple, or quad configuration. The clip should be installed in the lowest hole of the back wall on the control end of the lowest oven in the stack. The lag eye bolt must be installed into a structural member of a wall or the floor. It is the owner's responsibility to ensure the restraint is installed correctly.

Upon completion of performing any service or cleaning functions that require removal of the restraint, insure that it is correctly re-attached to the oven.

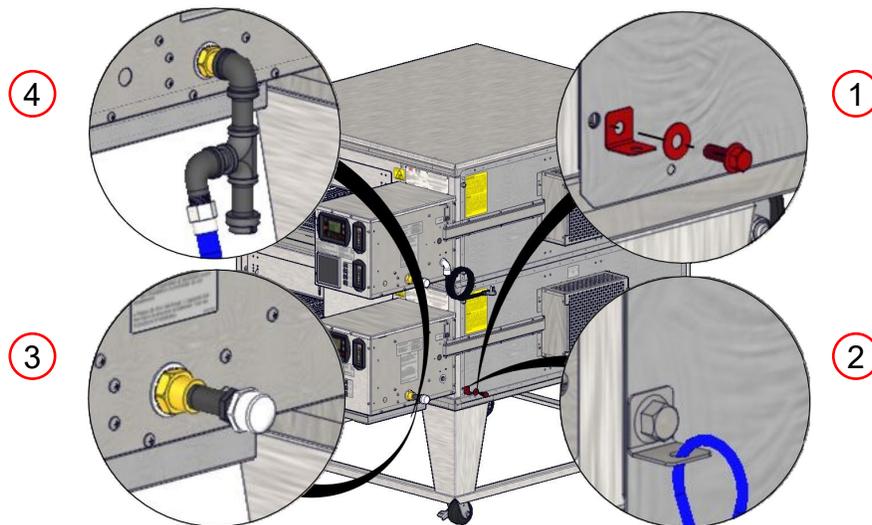

Sediment Trap


Connect sediment trap onto oven before connecting the gas hose. First remove the pipe with white cap from the rear of the control box (item 3 above) and install the supplied sediment trap in its place (item 4 above). Gas hose to hang vertically behind oven. The sediment trap is to be facing in the downward position as in item 4 above. A sediment trap is to be installed on all ovens.



CAUTION

Do not use Teflon tape on gas line connections as this can cause gas valve malfunction or plugging of orifices from shreds of tape.



The requirement for fire suppression systems vary by location and the authority having jurisdiction. If you are required to install fire suppression on your oven, a pre-assembled piping kit is available that utilizes pre-existing holes to simplify installation and future service.

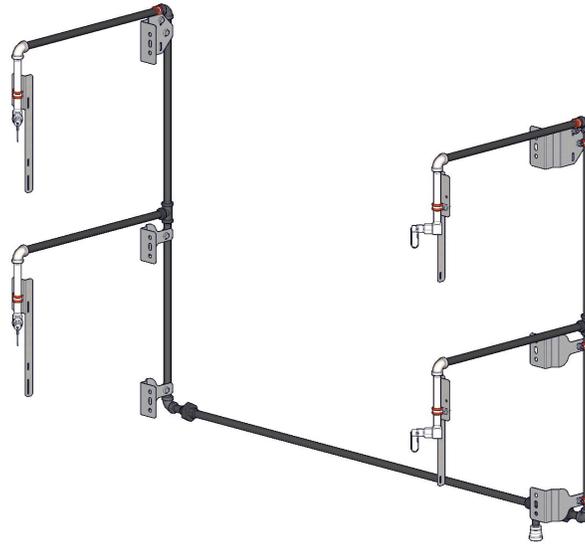

This design has been tested and approved to successfully comply with fire suppression codes. It uses only two (2) nozzles per bake chamber, and allows crumb trays, chain guards, and all other accessories to be easily removed. The kit does not interfere with any operations or maintenance.

For detailed information regarding fire suppression, see manual XD-9011 Fire Suppression Installation for XLT Hoods and XLT Ovens.



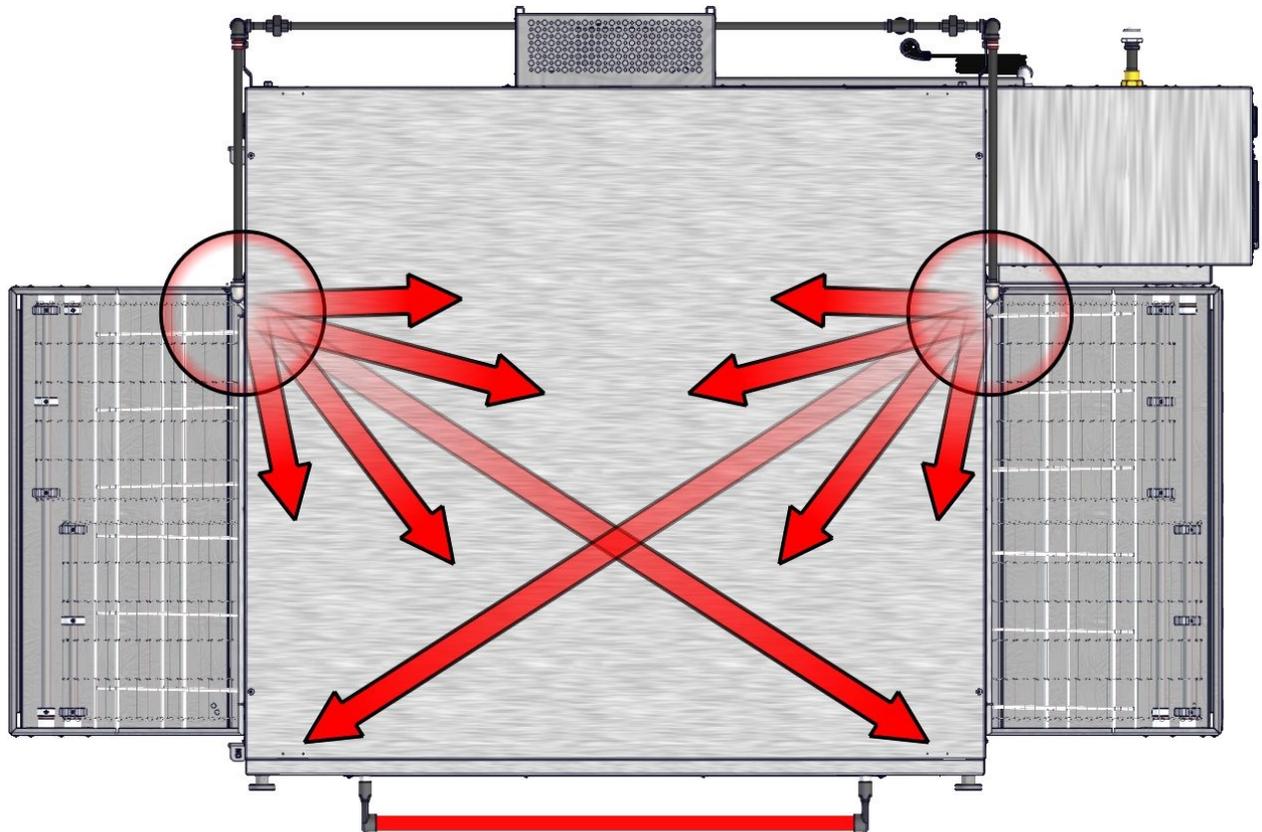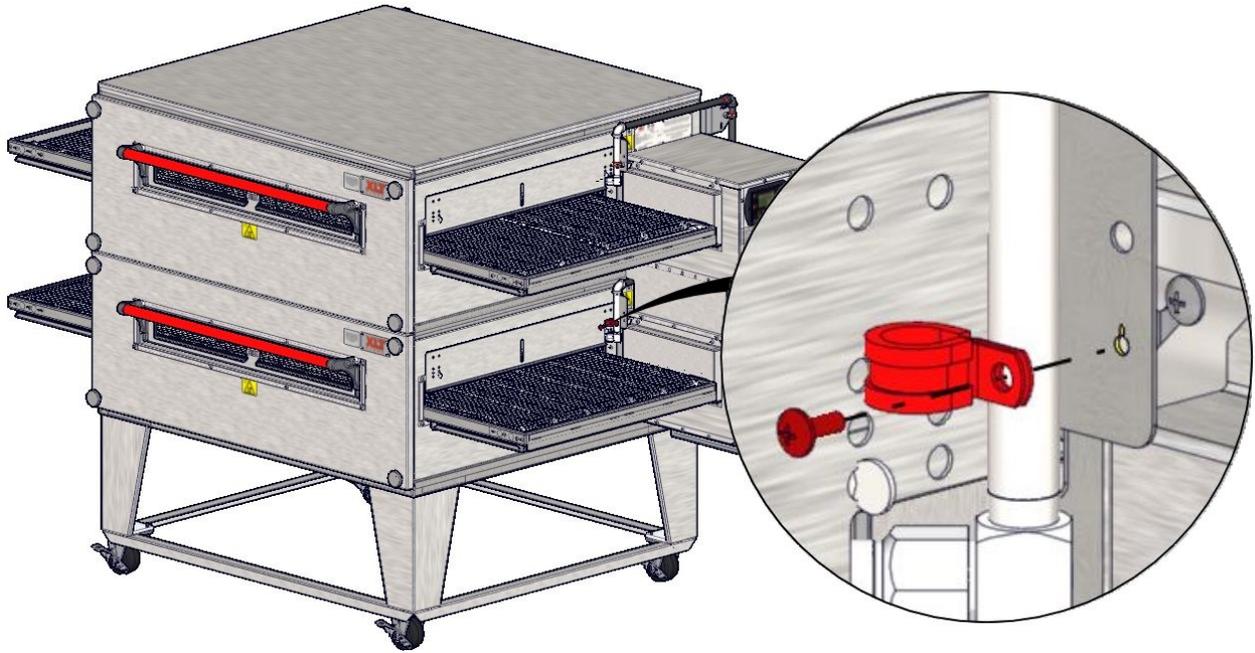

Ventilation Requirements

A powered ventilation hood is required to remove heat and vapors. Some provision must be made to replenish the amount of air that is extracted from the building. The hood and HVAC installation must meet local building and mechanical codes. Requirements vary throughout the country depending upon location. Proper ventilation is the oven owner's responsibility. The XLT hood system is designed to meet all requirements for XLT ovens and it is our recommendation that this system be used.

Ventilation Guidelines

Obtain information from the authority having jurisdiction to determine the requirements for your installation. Your ventilation hood supplier and HVAC contractor should be contacted to provide guidance. An air balance test is highly recommended, and should be performed by a licensed contractor. A properly engineered and installed ventilation hood and HVAC system will expedite approval, reduce all maintenance costs, and provide a more comfortable working environment. XLT also recommends that the operator controls for the ovens and the operator switch for the exhaust fan be interlocked so that the exhaust fan gets energized whenever the ovens are turned on.

Ventilation Performance Test

After the oven and ventilation hood have been installed and are operating, a smoke candle can be used to "see" if the heat and vapors are being completely extracted. The test procedure is outlined below:

- The oven must be operating at 450°-500°F / 232°-260°C.
- The conveyor must be turned off.
- The ventilation hood exhaust fan must be turned on.
- Put a smoke candle in a pan on the conveyor belt at the center of the oven.
- Observe the smoke pattern coming out of the oven.
- Repeat the smoke candle test for each oven, as well as when all ovens are operating.

The ventilation hood must capture all of the smoke from the oven.

After the exhaust fan has been adjusted to completely capture and contain the heat, there needs to be a corresponding amount of make up air (MUA) introduced into the building to offset the amount of air volume being removed. An air balance test can determine the proper amount of make-up air flow rates.

All ovens are tested at the factory for functional operation. Operation is verified and adjustments are made to ensure proper function. However, field conditions are sometimes different than factory conditions. **It is necessary to have an authorized service technician verify operation and make field adjustments if needed.**

The Oven Initial Start-Up Checklist, found at the end of this manual, must be completed (both sides) at time of installation, signed by the Customer and returned to XLT Ovens and the Authorized Distributor to initiate Warranty Policy. **If the Start-Up Checklist is not filled out completely and returned to XLT the warranty will not be honored.**

Start-up Procedure

1. Ensure that all ovens have been installed in accordance with the Installation & Operation Manual and that all utilities are connected to the ovens in compliance with local building codes.
2. Fill out Step 1 on the checklist with all information and print legibly.
3. Place one (1) control box in service position and document incoming gas pressure in Step 2 (Refer to Parts & Service manual for gas valve adjustments). If gas pressure is not within XLT specifications contact gas company to adjust.
4. Place all control boxes in service position and start each oven and complete Step 3.
5. With all appliances running, check the dynamic gas pressure and complete Step 4. If gas pressure is not within XLT specifications contact gas company to adjust.
6. Complete Start-up checklist with owner signature and return to XLT.



CAUTION

Do Not Exceed 65 Hz On VFD Settings.



NOTE


All XLT ovens will come programmed for a bake time of 5:00 minutes and a temperature of 500°F/260°C. End users are responsible for determining oven settings. The tables below indicate minimum and maximum values for bake time and temperature.

Conveyor Belt Times		
Oven Models	MINIMUM	MAXIMUM
1832	1:30	17:00
xx36-xx70	1:30	20:00

Oven Operating Temperature Range		
Oven Models	MINIMUM	MAXIMUM
All	300° F	590° F
	150° C	310° C



This oven is not capable of being safely placed in operation in the event of a power failure. No attempt should be made to operate this oven during power failure.

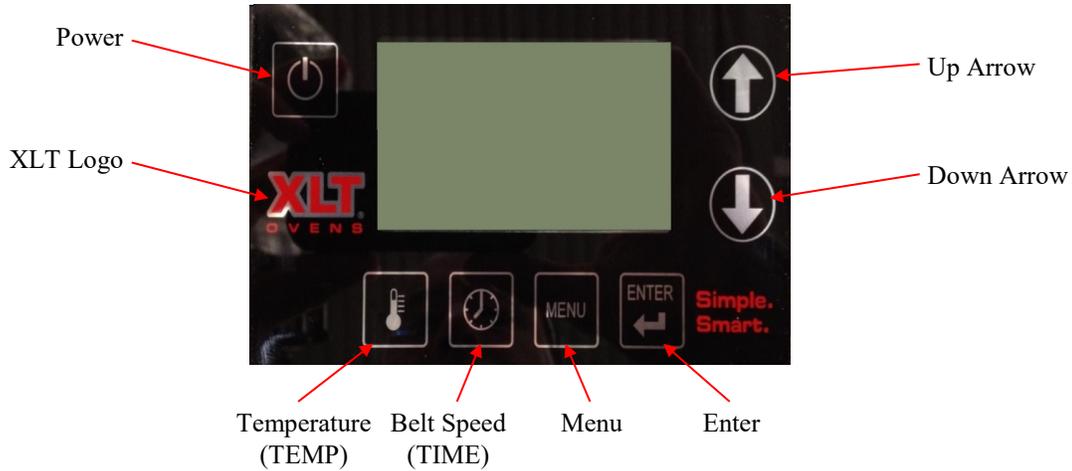

- 1 **TURN ON:** Hold the Power Button for one (1) second. Press the Enter button to confirm oven start up.

Temperature Adjustment



- 2 **TEMPERATURE ADJUST:** Press TEMP button for three (3) seconds. To adjust temperature use either the Up or Down arrow. If double burner press the TEMP button to toggle between burner temps. Press Enter to save.

Belt Time Adjustment




- 3 **BELT TIME ADJUST:** Press TIME button for three (3) seconds. To adjust belt time use either the Up or Down arrow. If split belt, press the TIME button to toggle between belt times. Press Enter to save.

- 4 **TURN OFF:** Hold the Power Button for one (1) second.

Menu Mode (Optional)

Menu Operation

1. To enter Menu Mode press MENU.
2. The number in the lower right hand corner will begin flashing.
3. Scroll through the menus by pressing Up/Down arrows (Max of twelve (12) preset menus).
4. To select desired menu press ENTER. The number should have a solid black box around it.
5. To change to another menu selection press MENU and the solid black box will disappear and the number will start flashing.
6. When the number is flashing pressing MENU will exit Menu Mode.

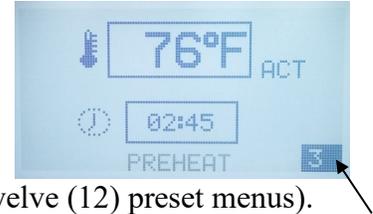

Change Menu Setting

1. To change a setting, when the number is flashing go to desired preset and press ENTER and MENU for three (3) seconds.
2. TEMP should start flashing. Use Up/Down arrows to select temp then press ENTER.
3. TIME should start flashing. Use Up/Down arrows to select time then press and hold ENTER and MENU for three (3) seconds to save preset.

Additional User Options

Lock Settings

1. To lock and unlock oven time and temperature press TIME and ENTER for three (3) seconds till the LUI beeps once.
2. Then press TEMP, TIME, then TEMP within three (3) seconds to lock settings.
3. A lock or unlock symbol will show up in the lower left corner of the LUI.

Fahrenheit To Celsius

1. To change temperature from Fahrenheit to Celsius press and hold TEMP and ENTER for three (3) seconds and the settings will change.

Oven Control LED's




LED's Status

1. Power - Green (Illuminated when oven has power)
2. Conveyor - Green (Illuminated when conveyors are active)
3. Heat - Green (Illuminated when the gas valve receives power)
4. Main Fan - Green (Illuminated when fan is spinning)
5. Cool Down - Green (Illuminated when oven is in cool down mode)
6. Alarm - Red (Illuminated when an alarm is tripped)


(All LED's on for reference)

Split Belt Conveyor Time Controls

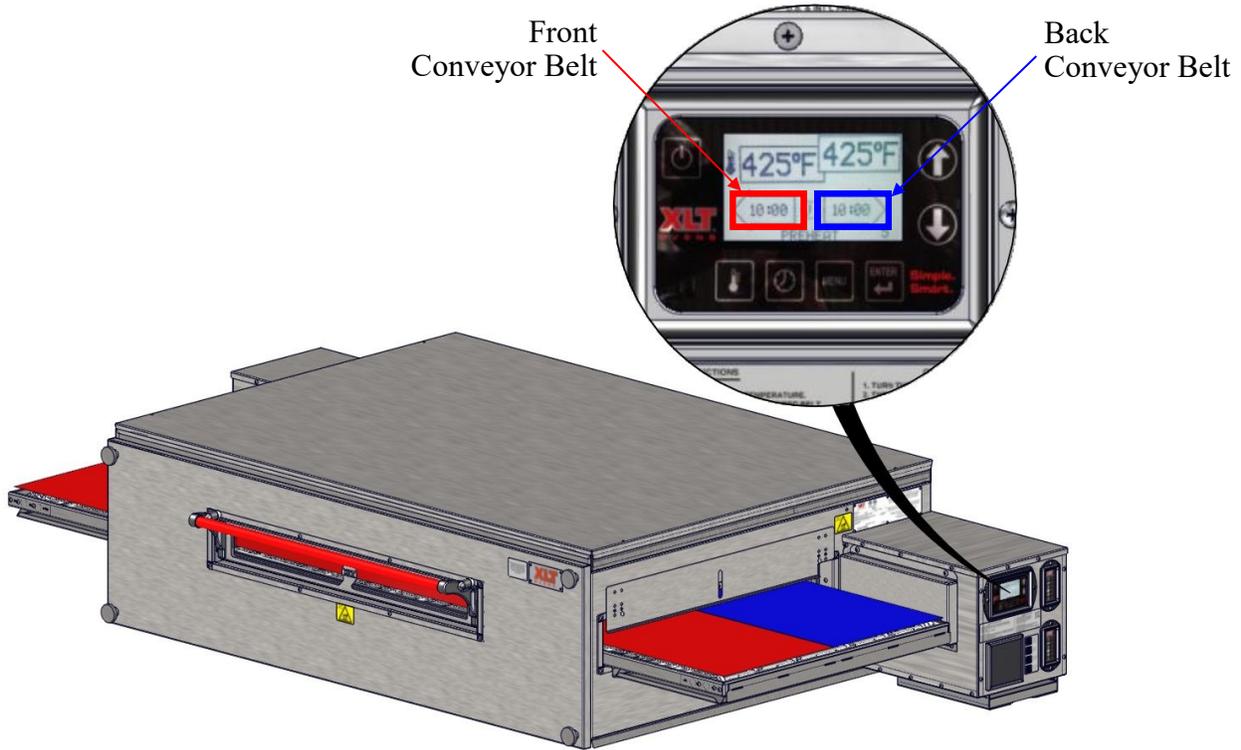

Temperature Controls

3270 and 3870 Only

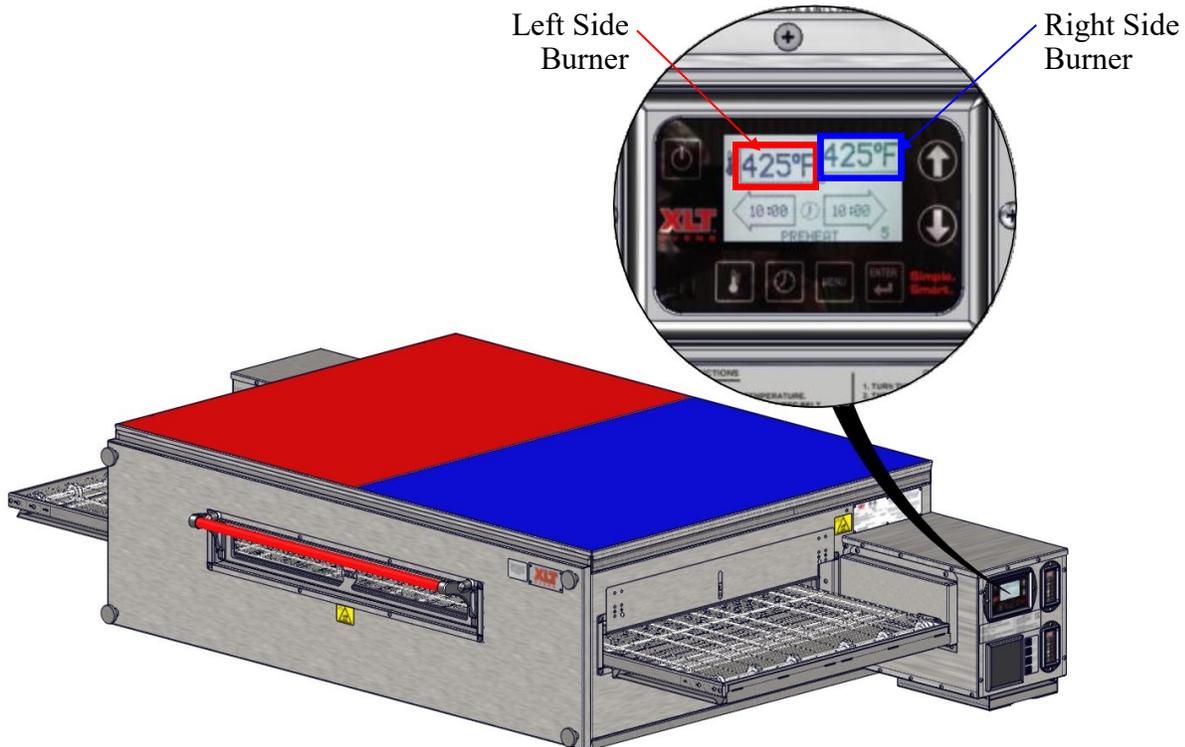


Your XLT oven is constructed of stainless steel. Most commercial cleaning agents may be used safely on all stainless steel surfaces. Check application restrictions on product label prior to usage. Observe recommended precautionary and safety measures as dictated by the product manufacturer. Bleach can cause stainless steel to discolor and corrode and is not recommended for cleaning.

Do not use caustic cleaners on the conveyor bearings as they will cause irreversible damage to the part.

Do not use abrasive cleaners or abrasive pads as they can scratch stainless steel surfaces. Areas with heavy buildup should be sprayed and allowed to soak for up to five (5) minutes prior to wiping clean. Always wipe with the “grain” of the surface to maintain appearance.

Do not use caustic cleaners on the control panel and/or electronic components. Only use cleaners compatible with Lexan® on the face of the conveyor control.

The most critical item to be cleaned is the filter on the fan. The filter is held in place by the stainless steel fan guard/filter mount and can be washed several times. Regular cleaning of the filter is important to maintain air circulation within the control box. Depending upon store conditions, this filter should be cleaned weekly or as it gets clogged with dust. Please contact XLT for replacement parts.

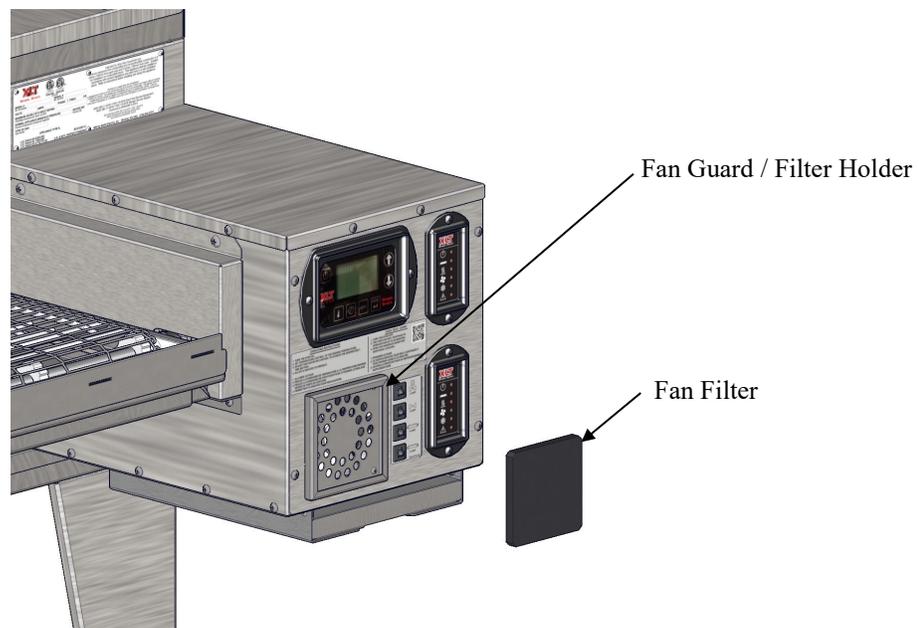

Cooling Filter Maintenance

1. When cooling filters need to be cleaned an alarm will appear on the LUI saying “FILTER”.
2. Press the MENU button to enter the “FILTER RESET” screen.
3. Once the filter is cleaned, press ENTER to reset the filter timer. This will take you to another screen which will show you the timer back at 00:00 and will exit after five (5) seconds.
4. If you wish to bypass alarm press the MENU button and it will clear the alarm for an additional two (2) hours. Then the “FILTER” alarm will appear again.

**DANGER**

Oven must be cool and the electric cord unplugged before any cleaning or maintenance is done


**CAUTION**

If the oven is to be removed from its installed location for cleaning or servicing, the following procedure is to be followed:

1. Shut off main manual gas valve
2. Unplug electric cord
3. Unplug gas line
4. Unlock casters
5. Disconnect restraint
6. Disconnect hood relocation cord (if applicable)
7. When servicing or cleaning is complete, move oven to original location
8. Connect hood relocation cord (if applicable)
9. Connect restraint
10. Lock casters
11. Plug in electric cord
12. Plug in gas line
13. Turn manual gas valve on
14. Follow normal lighting instructions

**TIP**

Read and understand the next thirteen (13) steps first. They illustrate how to remove components from the oven for cleaning.

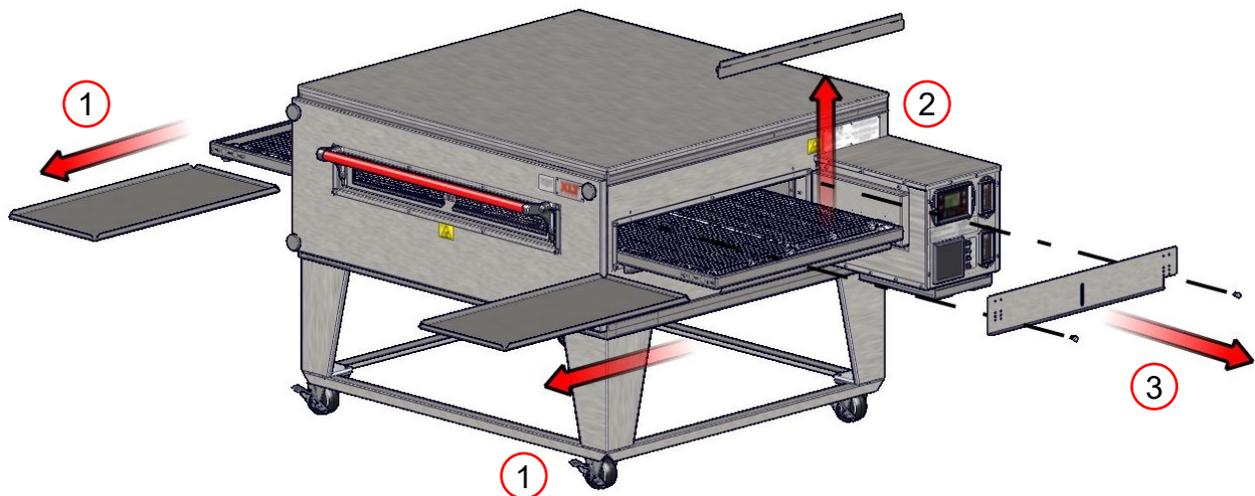



Opening the Sandwich Door will provide a grip location for removing the Front Panel.

TIP




CAUTION




Front Panels can weigh up to 72 lbs. [33 kg]. Use caution when lifting.






WARNING

Individuals with pacemakers or internal medical devices should not handle strong rare-earth magnets. These magnets are found in the sandwich door assembly.

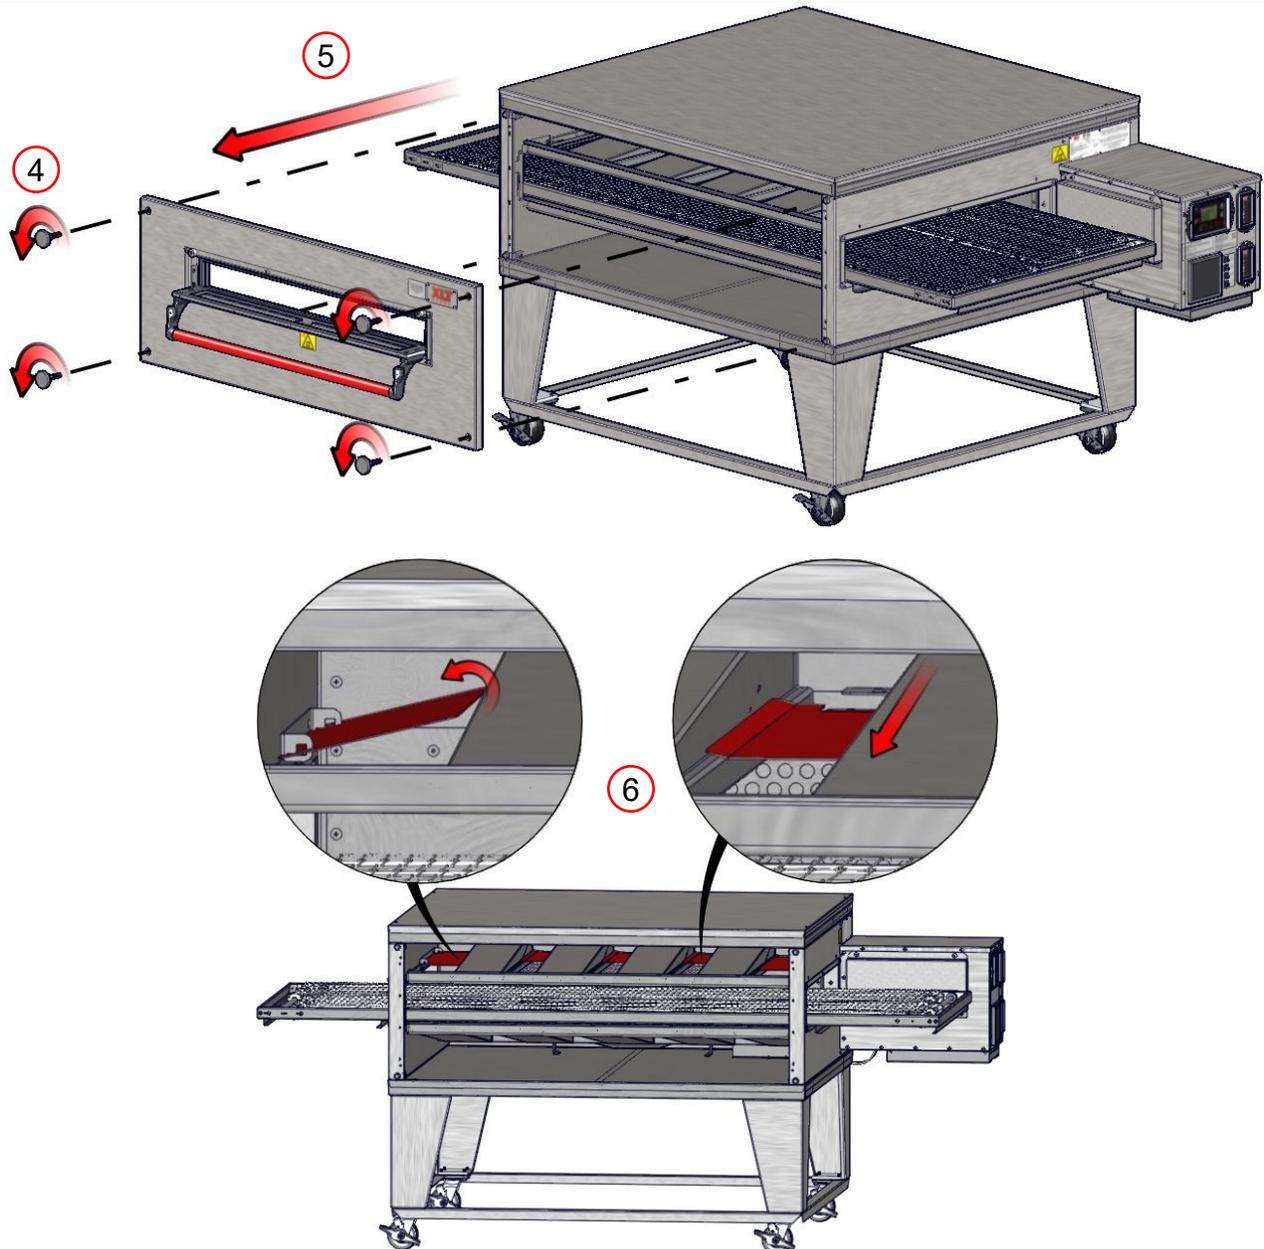

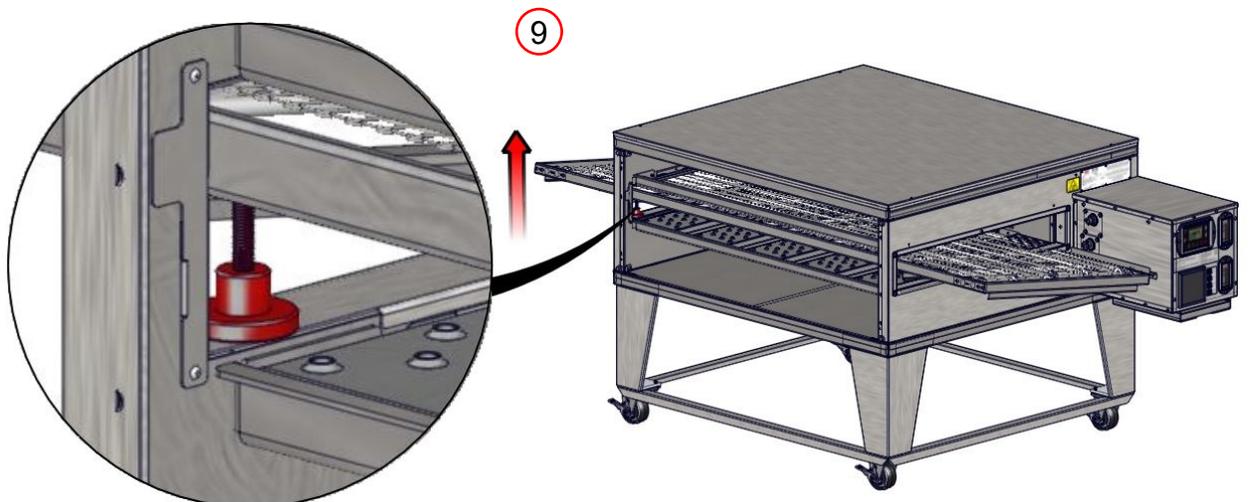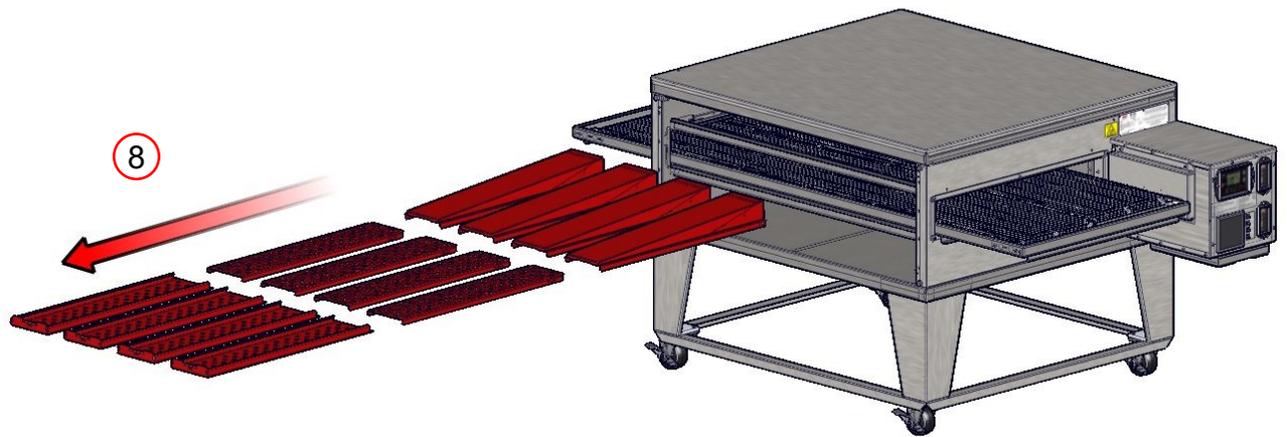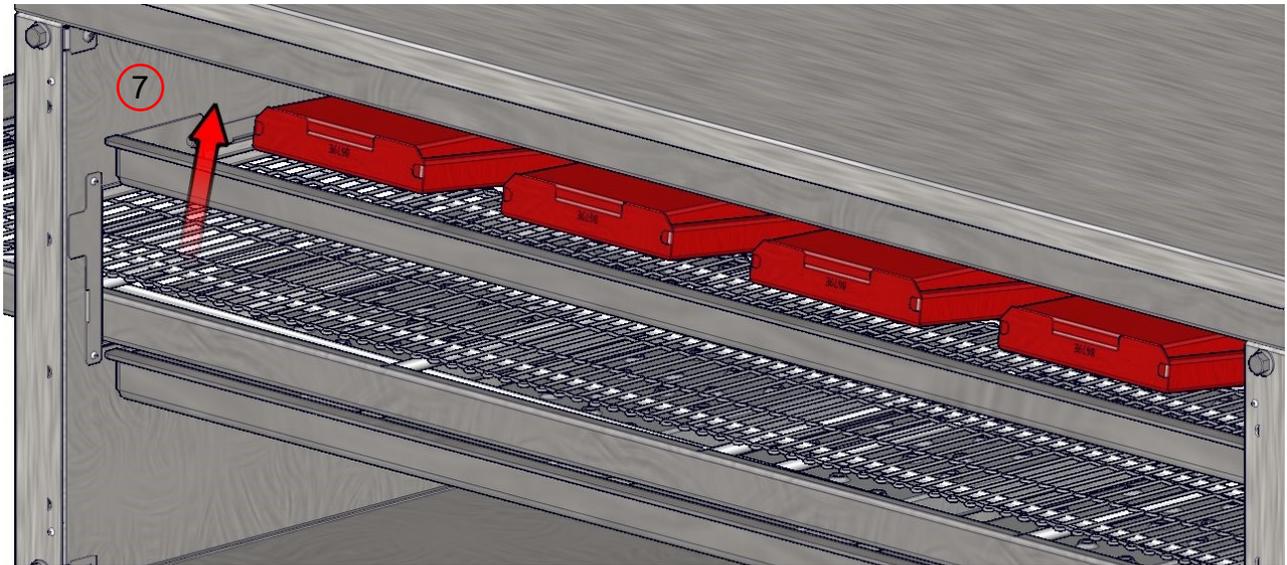

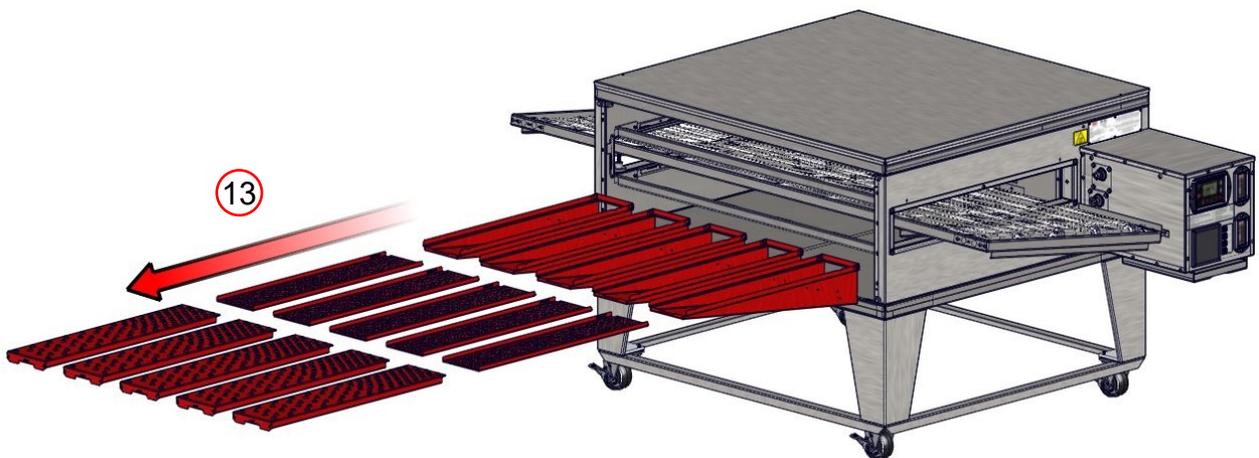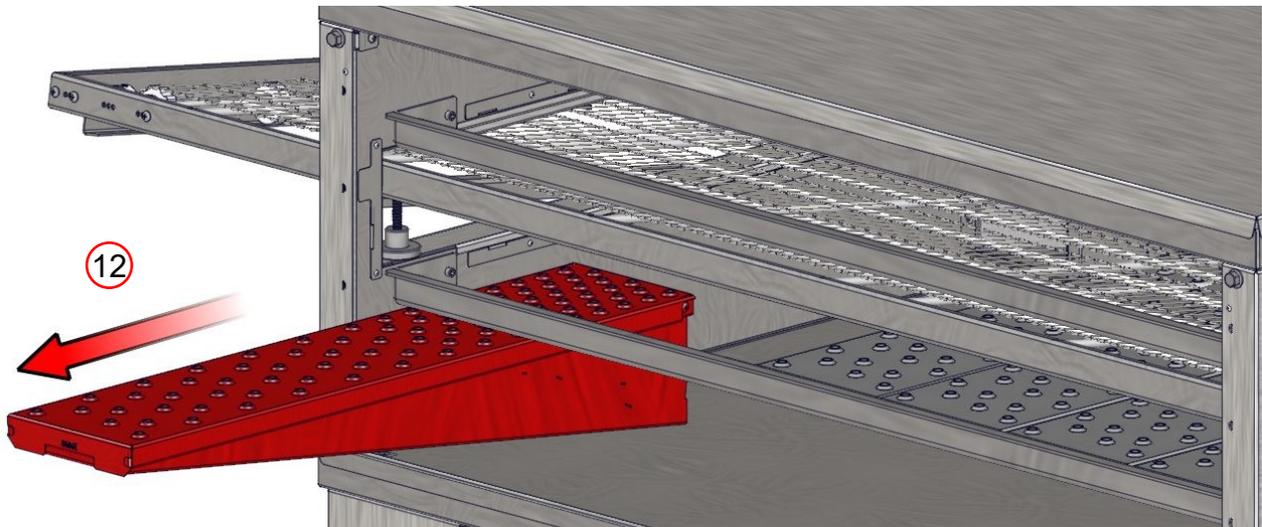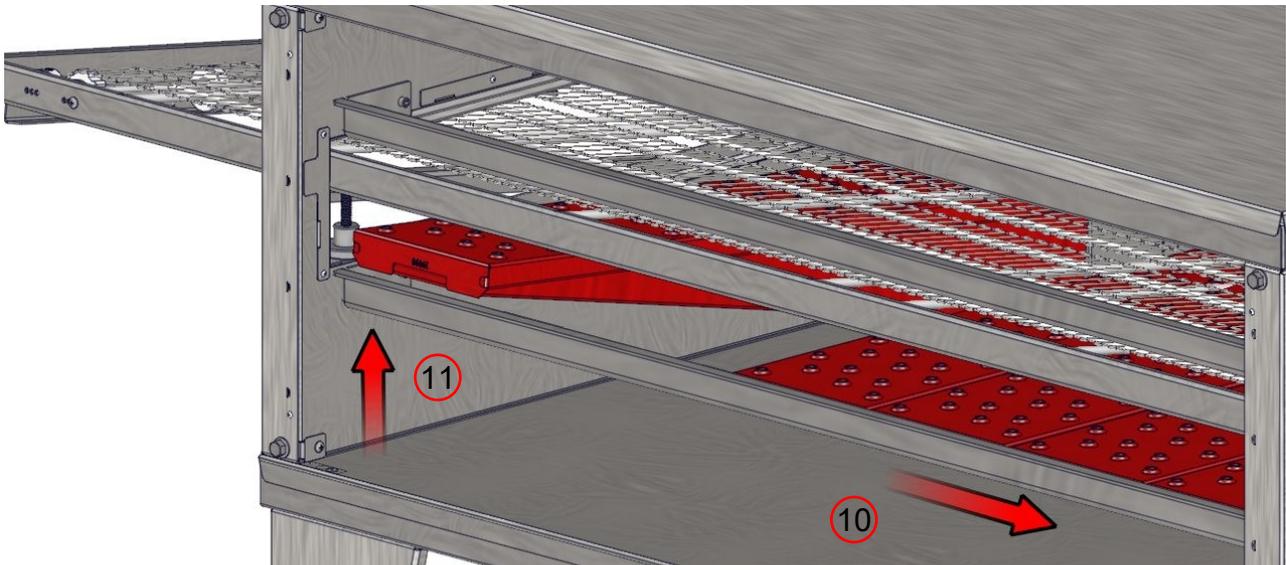**CAUTION**

DO NOT spray liquid cleaning agents in the slots and holes in the rear of control box, underneath the control box, or the main fan motor cover

As with any appliance, periodic maintenance is required. Many factors affect this schedule such as product mix and hours of usage. An example schedule is included.

Oven Maintenance Schedule					
		Daily	Weekly	Monthly	Semi-Annual
Cleaning					
	Empty Crumb Trays	<input type="checkbox"/>			
	Wipe down Front, Sides, & Top	<input type="checkbox"/>			
	Wipe down Control Box & Control Panel *	<input type="checkbox"/>			
	Clean Fan Filters	<input type="checkbox"/>			
	Remove large debris from Conveyor		<input type="checkbox"/>		
	Wipe down Motor Cover		<input type="checkbox"/>		
	Clean Sandwich Window		<input type="checkbox"/>		
	Remove debris from Finger Outers			<input type="checkbox"/>	
	Remove debris from inside Bake Chamber			<input type="checkbox"/>	
	Remove debris from Main Fan Motor			<input type="checkbox"/>	
	Clean Finger Outers				<input type="checkbox"/>
	Clean inside Bake Chamber				<input type="checkbox"/>
	Clean Conveyor Assembly				<input type="checkbox"/>
Inspection					
	Check Fan Filters for dirt	<input type="checkbox"/>			
	Check Conveyor Wire Belt for Stretch		<input type="checkbox"/>		
	Check Conveyor Drive Roller Chain for Stretch			<input type="checkbox"/>	
Adjust					
	Conveyor Wire Belt			<input type="checkbox"/>	
Lubricate					
	Lubrication of Window Pins W/ Food Grade Grease			<input type="checkbox"/>	
	Conveyor Drive Roller Chain				<input type="checkbox"/>
Replace					
	Fan Filters				<input type="checkbox"/>

- Do not use caustic cleaners on the conveyor bearings (refer to Pg. 44)
- Do not use abrasive cleaners or abrasive pads (refer to Pg. 44)
- *Do not use caustic cleaners on the control panel. Only use cleaners compatible with Lexan® on the face of the conveyor control (refer to Pg. 44)
- Do not use high pressure water to clean the oven.

Contact a factory representative or a local service company to perform all other maintenance and repairs.



DANGER

Oven must be cool and the electric cord unplugged before any cleaning or maintenance is performed.

Proper Cooking

Experimentation is about the only way to determine proper time and temperature settings. While a pizza may look perfectly cooked on the outside, the inside may be undercooked. A thermometer is necessary to determine if food items are being properly cooked. Most health departments have rules and regulations that establish minimum temperatures for internal food temperatures. Most operators want to cook foods as fast as possible in order to serve more customers per hour. However, cooking foods slower is the only way to achieve a proper internal temperature. If your food products look acceptable on the outside, but have an internal temperature that is too low, then lowering the temperature and decreasing the belt speed (thereby increasing the cook time), will be necessary.

Several factors may affect the cooking performance and characteristics:

- Oven temperature (generally affects color)
- Conveyor speed (generally affects doneness)
- Finger arrangement
- Altitude
- Pans versus screens
- Dough thickness
- Cheese type
- Raw ingredient temperature (frozen?)
- Quantity of toppings

XLT ovens can be configured to cook a wide variety of food items. This is accomplished by designing a finger group to control the baking characteristics. Generally speaking, most cooking is a “bottom up” process. The hot air from the bottom row of fingers has to go through the conveyor (a distance of about 2” / 50.8mm), heat the pan or screen, and then actually cook the food. The hot air from the top, on the other hand, basically only has to melt and re-heat precooked toppings. Consequently, most operators will use the oven with the fingers arranged so that a lot more air is directed to the bottom of the food than to the top. Finger cover plates are available that have six (6) rows of holes, four (4) rows of holes, two (2) rows of holes, and no holes (or blank cover plates). A typical finger arrangement might have most or even all fingers on the bottom “full open”, that is fingers with all six (6) rows of holes, and only two (2) or three (3) fingers on top with four (4) or six (6) rows of holes. The top fingers can be arranged in a symmetrical pattern or can be shifted asymmetrically to either the entrance or exit end of the conveyor. We encourage you to experiment by trying different finger arrangements, temperatures and belt speeds. XLT can assist you with your oven/product configurations.

Mechanical Function

If your oven does not function properly, please verify the following conditions:

1. Verify that the power cord to the oven is connected and/or plugged in if equipped with a plug and receptacle.
2. Check all circuit breakers on the oven control panel and on the back of the control box to ensure they have not been tripped.
3. Check to see that the circuit breakers in the building electrical service panel have not been tripped or turned off.
4. Check the manual gas valve to verify that it is turned on completely. The handle on the valve should be parallel with the gas piping when the valve is turned on, and the handle will be perpendicular with the gas piping when the valve is turned off. Also remember that anytime the gas hose has been disconnected it will take time to purge the air from the gas train.
5. Verify that oven is supplied with gas by disengaging and reengaging the quick-disconnect fitting on the gas hose.
6. Check to see that the oven is fully assembled. All of the fingers must be properly installed. Incorrect or incomplete finger placement can cause a “windy” condition that can cause the burner not to light.
7. Gas line size and pressure must be adequate to support total BTU requirements with all appliances in store turned on. Refer to the “Oven Gas Requirements” section of this manual.
8. In the case of the oven not lighting properly, turn off the oven and wait approximately thirty (30) seconds or until the fan stops spinning and turn the oven back on.

If your oven still does not function properly, XLT has qualified customer service personnel that can provide assistance on any type of XLT equipment problem you may experience. Customer Service is available 24/7/365 at 888-443-2751, or visit www.xltovens.com.


**DANGER**

Check all local codes prior to installation. Special requirements may be necessary depending upon building material construction. It is the installing contractor's responsibility to ensure that the structure the hood is to be hung from meets all codes and can carry the hood weight.

Purchaser's Responsibility

It is the responsibility of the purchaser:

1. Thoroughly review the floor plans and specifications. The exact location of the oven must be determined before installing the hood.
2. To unload, uncrate, assemble, and install the hood to its intended location.
3. To ensure that electric utilities are installed on site in accordance with local building codes and meet the specifications in this manual.
4. To see that electric utilities are connected properly by a qualified installer using the proper hardware.
5. To ensure a qualified installer has performed an initial start-up procedure.
6. Location should minimize long and twisted duct runs, and make efforts to have a straight clear path to the roof/wall fan curb.
7. All hood supporting structures must be strong enough to support the weight of the hood and shrouds. Refer to the Hood Dimensions & Weights page for weight.
8. Maintain the proper clearances from combustible materials according to International Mechanical code (IMC), and National Fire Protection Agency (NFPA) 96, and local mechanical codes.
9. In Australia, a ventilation hood to be installed in accordance with AS 5601 Gas Installation.
10. To Ensure that the XLT Hood is suspended properly from the ceiling structure.

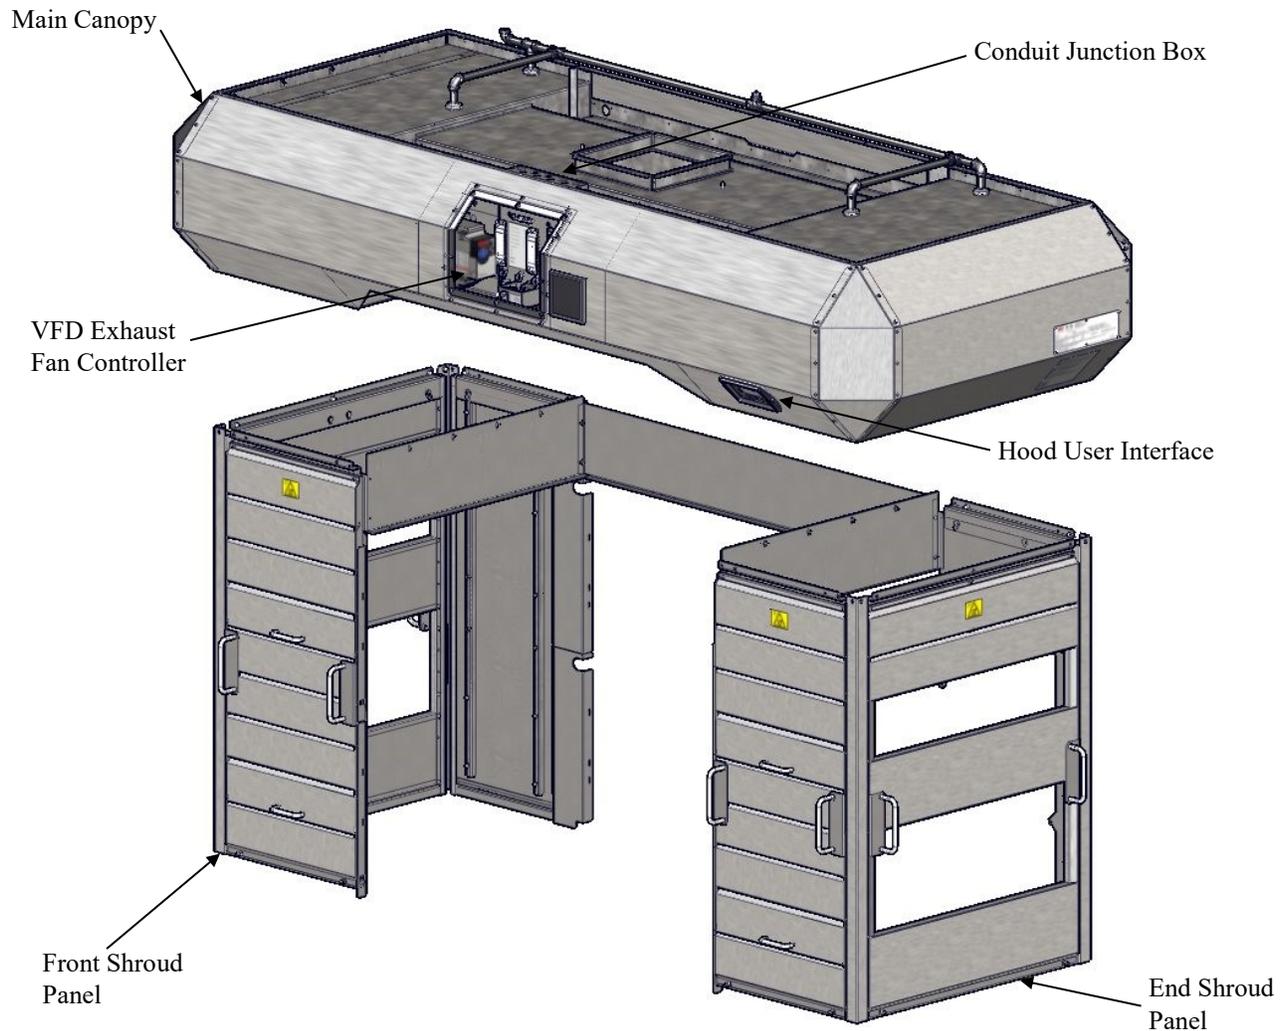

The XLT Hood System consists of three (3) major parts; the Main Canopy, the Shrouds, and the Variable Frequency Drive (VFD) exhaust fan controller.

The Main Canopy serves to collect and transmit heat to the exhaust fan. It houses filters, lights, and the controller. The controller operates both the hood and ovens. The main canopy size is dependent upon oven size.

The Shrouds assist the efficiency of the main canopy by entrapping heat. They are configurable for either front or end loading and front or end unloading, and are easily removable for cleaning and maintenance.


The VFD converts input power to variable frequency three-phase output power to control the speed of the exhaust fan. All electric utilities for the hood and exhaust fan connect through the electrical box located on the front of main canopy. The capacitive touch buttons are located on the Hood User Interface on the front of main canopy, and interlock the function of the hood and oven (s). There are relays that provide interlocks for equipment such as, HVAC dampers, and/or dedicated MUA units and there is a optional relay for fire suppression.

All XLT hoods are available pre-piped for fire suppression, allowing for simple, in-field installations. For fire suppression detailed information see manual XD-9011 Fire Suppression Installation for XLT Hoods and XLT Ovens.

The XLT hood was designed to conform to the requirements of IMC 2015 or current version, which is a Type I hood. It was also designed to have optional fire suppression added to meet requirements of NFPA 96 standard. This was done to allow XLT to better service the requirements of the customer and the associated jurisdictions.


This page is intentionally left blank.

DOMESTIC HOOD CRATES

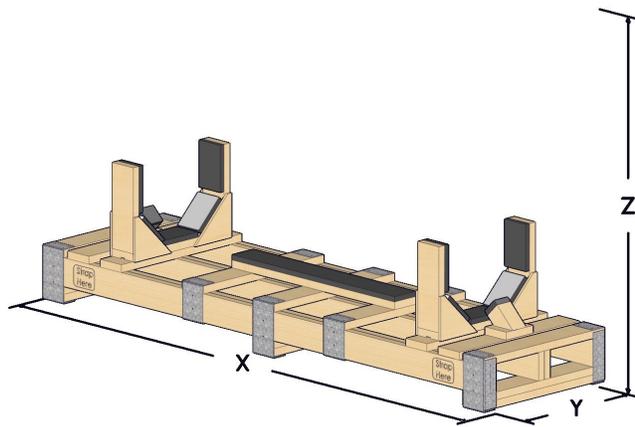


Hood Crate Dimensions			
Oven Model	X	Y	Z (With Hood)
1832	115 3/4 [2940]	31 3/4 [806]	47 1/4 [1198]
2440	115 3/4 [2940]	31 3/4 [806]	53 1/4 [1351]
3240	115 3/4 [2940]	31 3/4 [806]	61 1/4 [1554]
3255	132 3/4 [3372]	31 3/4 [806]	61 1/4 [1554]
3855	132 3/4 [3372]	31 3/4 [806]	67 1/4 [1706]
3270	132 3/4 [3372]	31 3/4 [806]	61 1/4 [1554]
3870	132 3/4 [3372]	31 3/4 [806]	67 1/4 [1706]

INTERNATIONAL HOOD CRATES

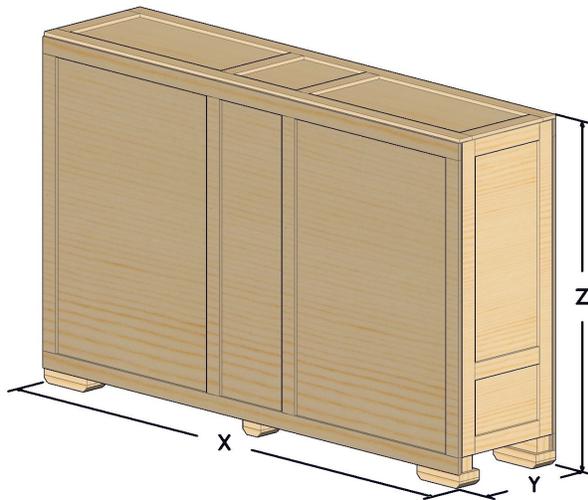

Hood Crate Dimensions			
Oven Model	X	Y	Z
xx32	94 1/4 [2394]	27 [686]	58 3/8 [1483]
xx40	102 1/4 [2597]	27 [686]	64 3/8 [1635]
xx55	117 1/4 [2978]	27 [686]	72 3/8 [1838]
xx70	132 1/4 [3359]	27 [686]	72 3/8 [1838]



SHROUD CRATES

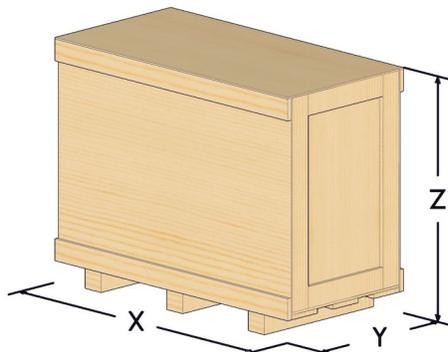

Shroud Crate Dimensions			
Oven Model	X	Y	Z
18xx-1	51 1/4 [1302]	25 1/2 [648]	27 1/2 [699]
18xx-2			
18xx-3	66 1/4 [1683]	25 1/2 [648]	27 1/2 [699]
24xx-1	51 1/4 [1302]	25 1/2 [648]	31 1/2 [800]
24xx-2			
24xx-3	66 1/4 [1683]	25 1/2 [648]	31 1/2 [800]

Shroud Crate Dimensions			
Oven Model	X	Y	Z
32xx-1	51 1/4 [1302]	25 1/2 [648]	39 1/2 [1003]
32xx-2			
32xx-3	66 1/4 [1683]	25 1/2 [648]	39 1/2 [1003]
38xx-1	51 1/4 [1302]	25 1/2 [648]	45 1/2 [1156]
38xx-2			
38xx-3	66 1/4 [1683]	25 1/2 [648]	45 1/2 [1156]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.

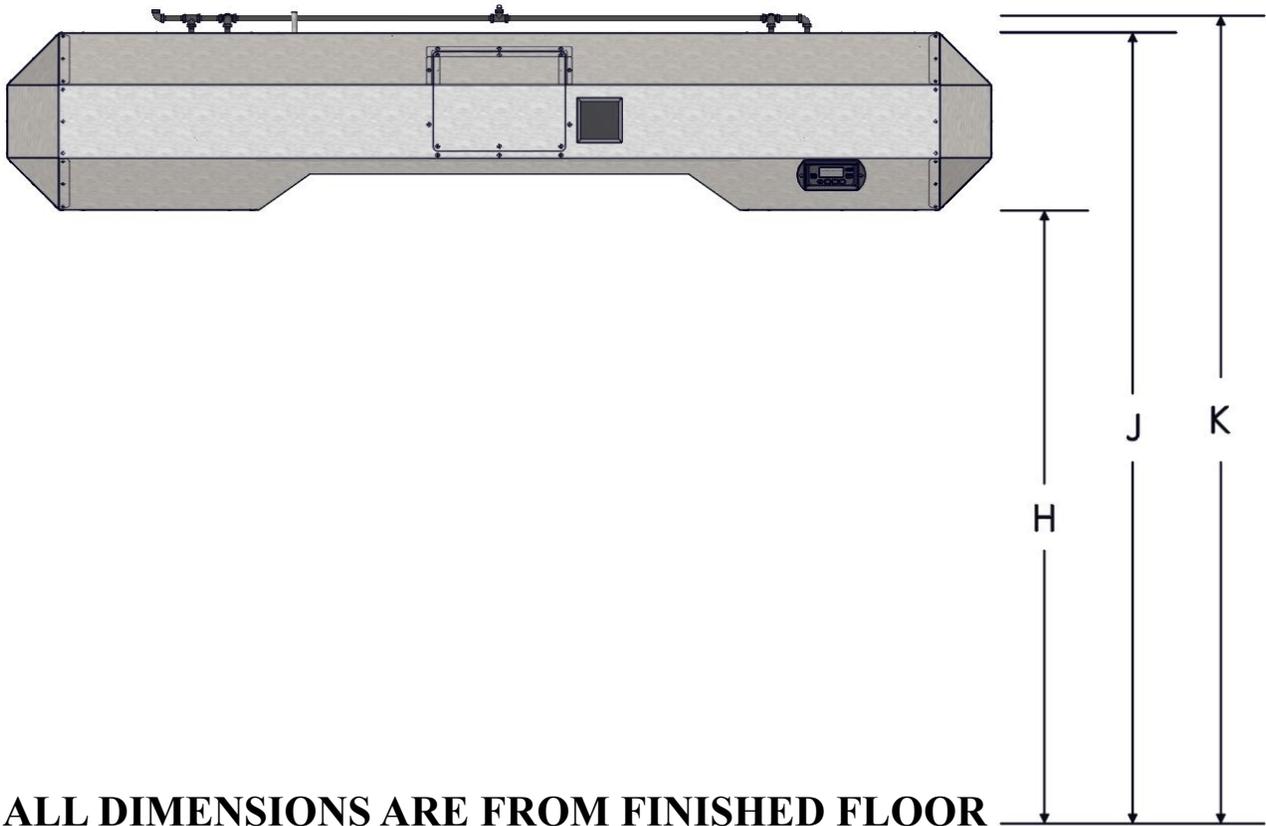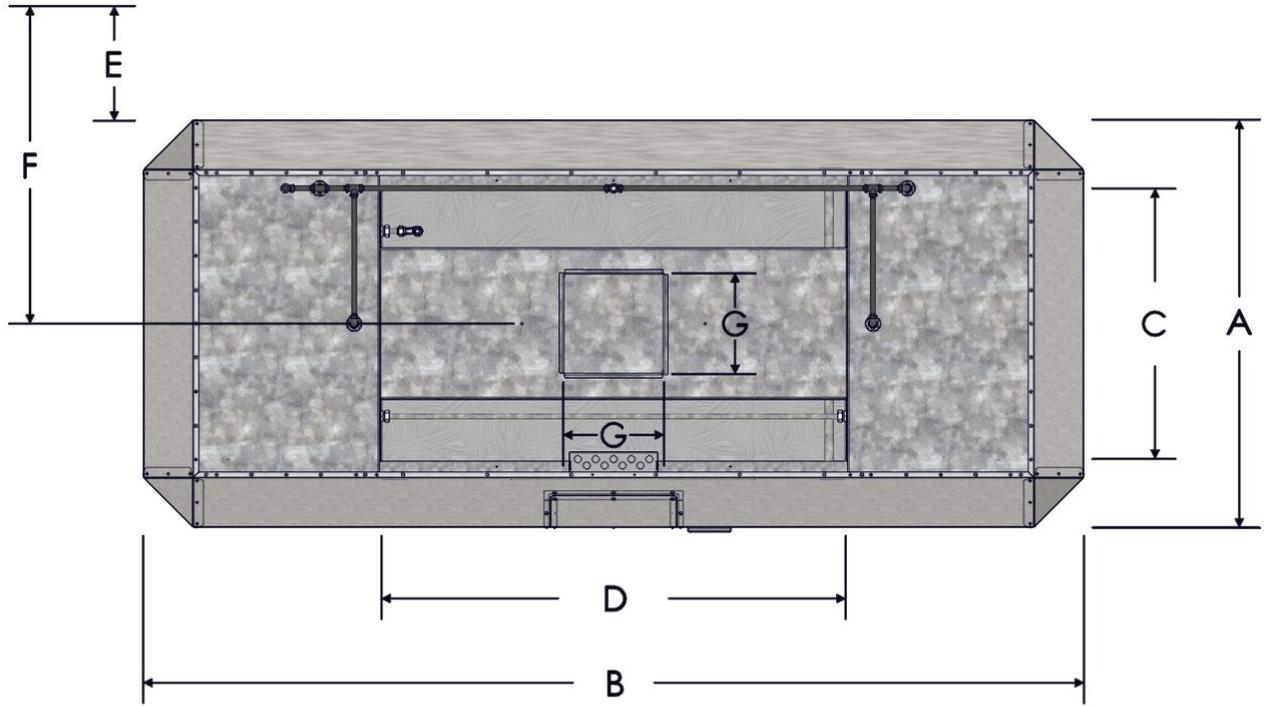

ALL DIMENSIONS ARE FROM FINISHED FLOOR

Oven Model	Hood Dimensions										Hood Weights			Crated Weight (2 Crates)			
	A	B	C	D	E*	F*	G	H	J	K	Single	Double	Triple	Hood	Single	Double	Triple
1832	34 3/8 [873]	88 5/8 [2251]	18 [457]	32 [813]	13 1/2 [343]	30 5/8 [778]	12	69 5/8 ±1/8	89 7/8	91 7/8	506 [230]	495 [225]	495 [225]	523 [237]	310 [141]	264 [120]	304 [138]
2440	40 3/8 [1026]	96 5/8 [2454]	24 [610]	40 [1016]		33 5/8 [854]					590 [268]	565 [256]	560 [254]	610 [277]	339 [154]	281 [127]	322 [146]
3240	48 3/8 [1229]	96 5/8 [2454]	32 [813]	40 [1016]		37 5/8 [956]					685 [311]	640 [290]	660 [299]	661 [300]	373 [169]	304 [138]	333 [151]
3255	48 3/8 [1229]	111 5/8 [2835]	32 [813]	55 [1397]		37 5/8 [956]					735 [333]	680 [308]	700 [318]	724 [328]	385 [175]	310 [141]	333 [151]
3270	48 3/8 [1229]	126 5/8 [3216]	32 [813]	70 [1778]		37 5/8 [956]					760 [345]	705 [320]	737 [334]	782 [355]	391 [177]	304 [138]	328 [149]
3855	54 3/8 [1381]	111 5/8 [2835]	38 [965]	55 [1397]		40 5/8 [1032]					795 [361]	730 [331]	745 [338]	764 [347]	408 [185]	310 [141]	339 [154]
3870	54 3/8 [1381]	126 5/8 [3216]	38 [965]	70 [1778]		40 5/8 [1032]					825 [374]	770 [349]	770 [349]	828 [376]	419 [190]	322 [146]	345 [156]

Exhaust Fan And Curb Dimensions			Crated Weight (Stacked)
31 [787]	31 [787]	67 [1702]	185 [84]



* E and F are the minimum distances from a non combustible wall structure.

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.
All weights in pounds [kilograms] unless otherwise noted.

Exhaust Flow Rates VOLUME (min. recommended)								
		Ovens On			18xx	24xx	32xx	38xx
		Top	Middle	Bottom				
Single	X				500	500	500	500
					[14.16]	[14.16]	[14.16]	[14.16]
Double	X				500	500	500	500
					[14.16]	[14.16]	[14.16]	[14.16]
				X	506	644	828	966
					[14.33]	[18.24]	[23.45]	[27.35]
	X			X	506	644	828	966
					[14.33]	[18.24]	[23.45]	[27.35]
Triple	X				500	500	500	500
					[14.16]	[14.16]	[14.16]	[14.16]
		X			506	644	828	966
					[14.33]	[18.24]	[23.45]	[27.35]
				X	766	975	1254	1463
					[21.69]	[27.61]	[35.51]	[41.43]
	X	X			506	644	828	966
					[14.33]	[18.24]	[23.45]	[27.35]
	X			X	766	975	1254	1463
					[21.69]	[27.61]	[35.51]	[41.43]
	X	X		766	975	1254	1463	
				[21.69]	[27.61]	[35.51]	[41.43]	
X	X	X		766	975	1254	1463	
				[21.69]	[27.61]	[35.51]	[41.43]	

**NOTE**

All values are CFM [M3/Min] unless otherwise noted. Figures represent TOTAL VOLUME measured at the duct.

In accordance with mechanical codes, make up air must be supplied. For commercial kitchen make up air, the amount is determined by the exhaust hood flow rate requirements & all other exhaust flow rate requirements in the kitchen.

At a minimum, smoke candles must be used for a Capture & Containment (C&C) test. Refer to the Ventilation Requirements disclosed in the Oven section in this manual.

A Test & Balance (TAB) report is recommended after installation has been completed. Below are the minimum items to be included in this report:

- Total airflow on all A/C, Make-Up Air (MUA), & exhaust systems.
- Airflow on each supply & exhaust grille.
- Airflows on exhaust hoods compared to design specifications.

A final air balance report, with any corrections of issues found in the report, will help to insure that your building systems are functioning properly & efficiently.

[Refer to “Oven Ventilation Requirements & Guidelines”](#)

Exhaust Flow Rates VELOCITY (min. recommended)							
Ovens On				18xx	24xx	32xx	38xx
Top	Middle	Bottom					
Single	X			187.5	187.5	93.75	93.75
				[57.15]	[57.15]	[28.58]	[28.58]
Double	X			187.5	187.5	93.75	93.75
				[57.15]	[57.15]	[28.58]	[28.58]
	X		X	189.75	241.5	155.25	181.125
				[57.84]	[73.61]	[47.32]	[55.21]
Triple	X			187.5	187.5	93.75	93.75
				[57.15]	[57.15]	[28.58]	[28.58]
	X	X		189.75	241.5	155.25	181.125
				[57.84]	[73.61]	[47.32]	[55.21]
	X		X	287.25	365.625	235.125	274.3125
				[87.55]	[111.44]	[71.67]	[83.61]
	X	X		189.75	241.5	155.25	181.125
				[57.84]	[73.61]	[47.32]	[55.21]
X		X	287.25	365.625	235.125	274.3125	
			[87.55]	[111.44]	[71.67]	[83.61]	
X	X	X	287.25	365.625	235.125	274.3125	
			[87.55]	[111.44]	[71.67]	[83.61]	



NOTE

All values are FPM [M/Min] unless otherwise noted. Figures represent VELOCITY measured at the Grease Filter.



NOTE

Verify through building codes what the minimum required CFM velocity is and that it is greater than the values listed in the above table for the size and quantity of ovens below the hood.

The VELOCITY readings above are obtained by holding an anemometer 3” away from the Grease Filter. Take several readings in different locations across the filters and average the results.

Inputs into Electrical

XLT Hood Electric Utility Specifications			
	# of Circuits	Rating	Purpose
Standard	1	208/240 VAC, 1 Phase, 60 Hz, 6 Amp	VFD Controller
	up to 3	120 VAC, 1 Phase, 60 Hz, 20 Amp	Ovens
World	1	230 VAC, 1 Phase, 50 Hz, 6 Amp	VFD Controller
	up to 3	230 VAC, 1 Phase, 50 Hz, 10 Amp	Ovens




CAUTION


Do not connect to 3 Phase power. 1 Phase Only.

Outputs from Electrical

The XLT Hood system provides:


- Up to three (3) switching outputs for HVAC damper and/or dedicated unit.
- One (1) 230 VAC, 10 Amp, variable frequency, three phase power output for the ventilation exhaust fan.
- Up to three (3) receptacles for ovens.
- One (1) 24 VDC fire alarm signal.
- Relocation cord will physically connect into oven.

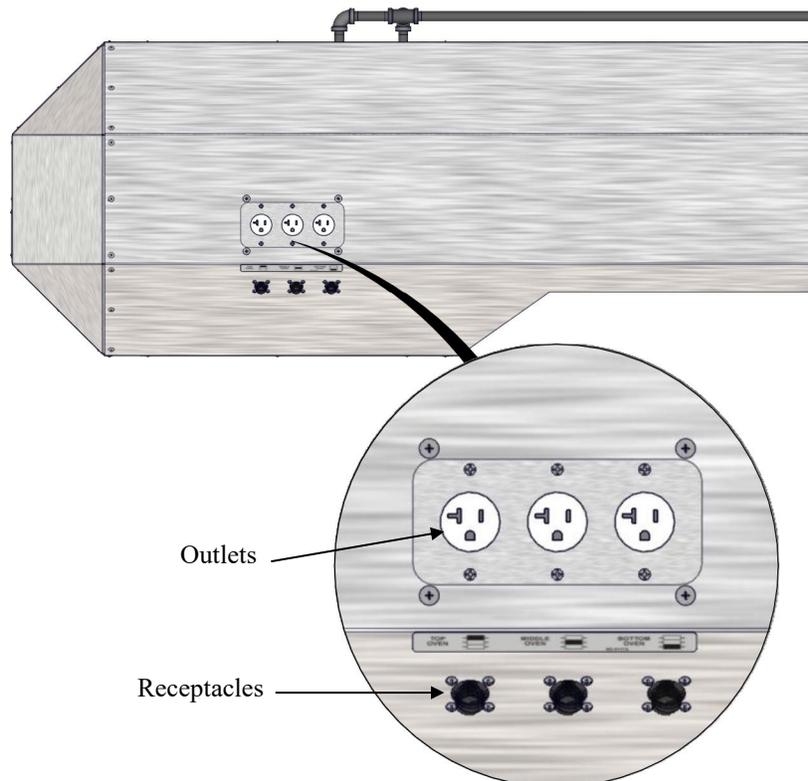

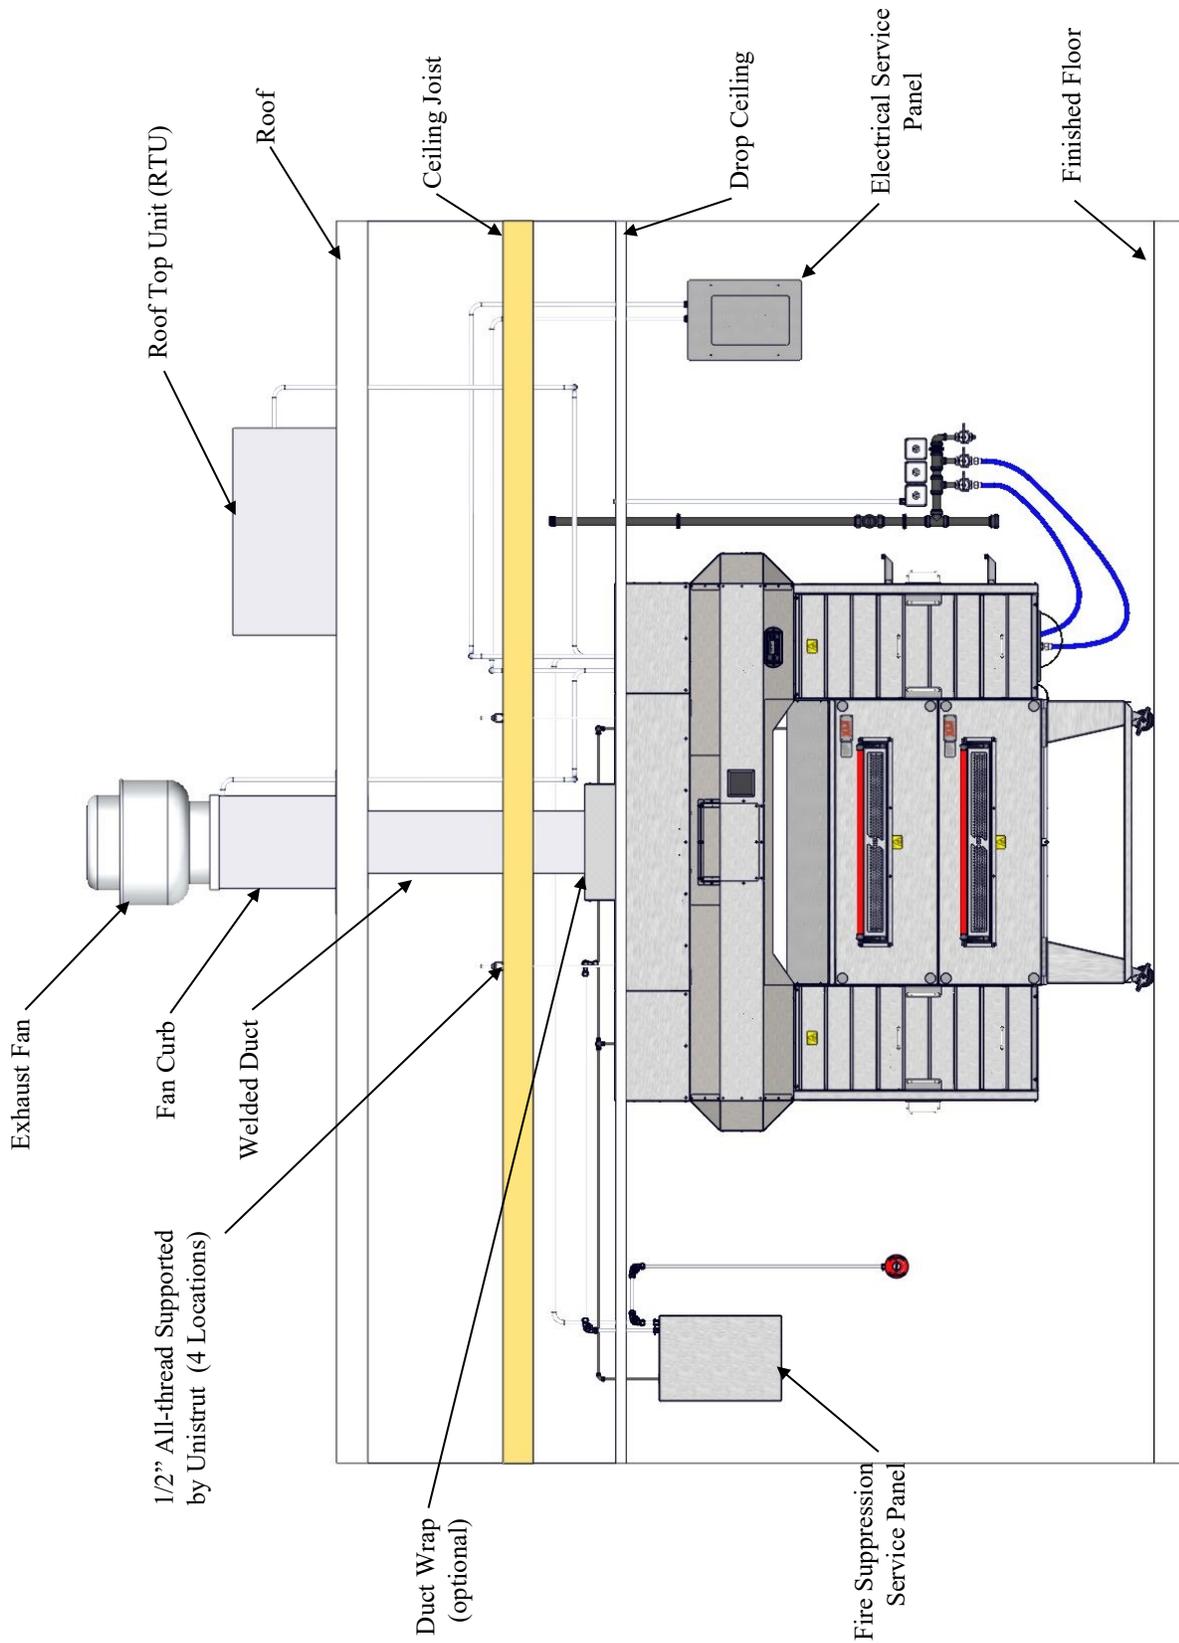


All structural members, electrical & fire suppression equipment shown for reference only.

VFD Control Box

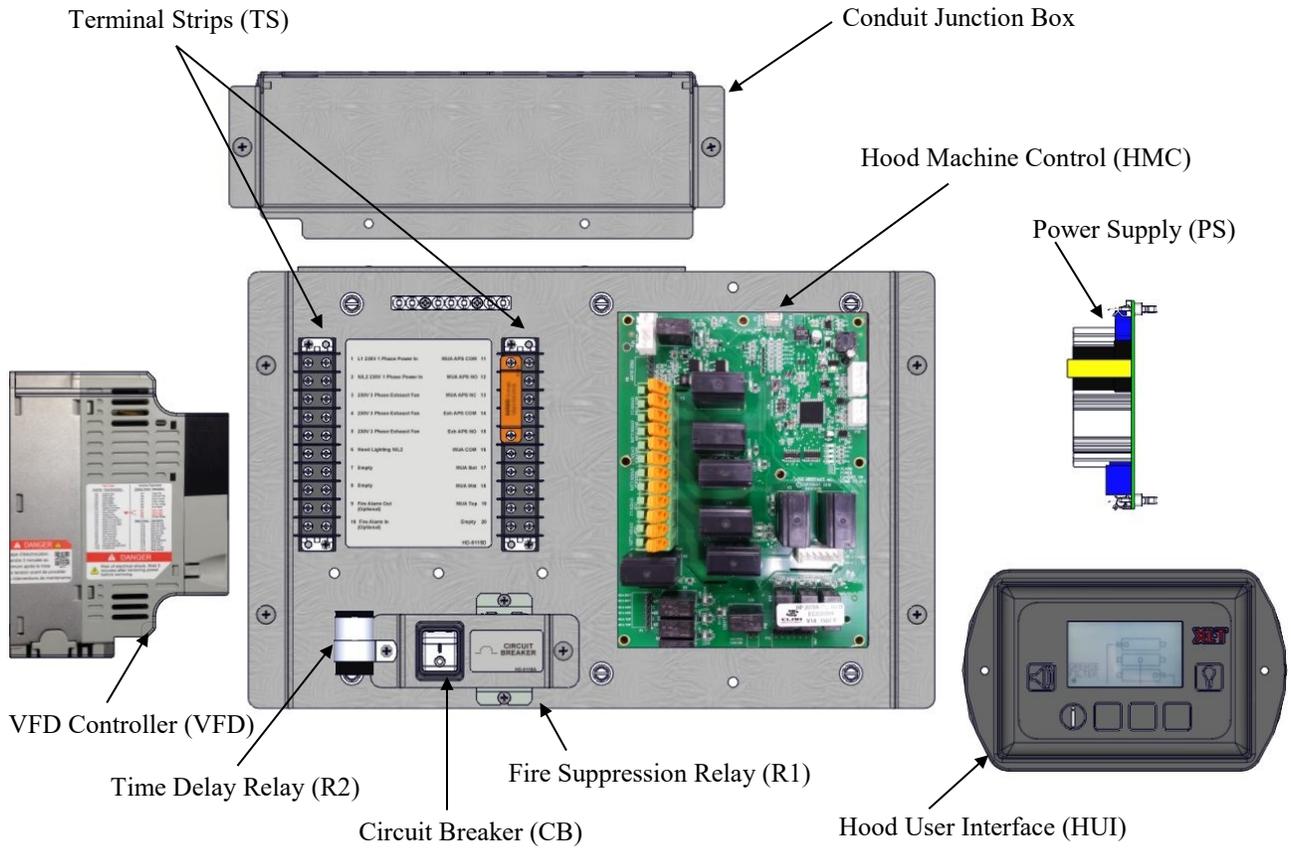


VFD Control Box (Cover removed)

Non VFD Control Box

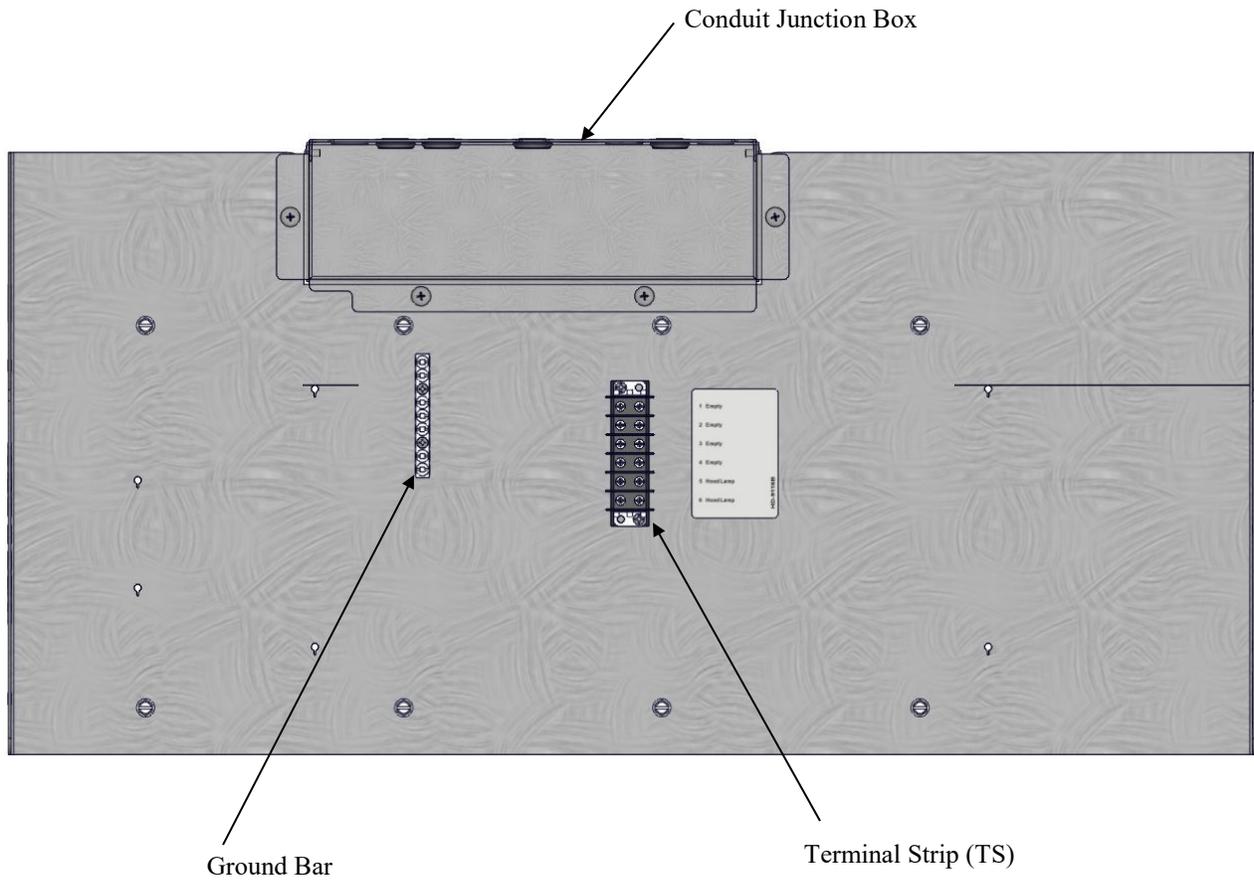


This page is intentionally left blank.

Non VFD Control Box - Input Power To Lights

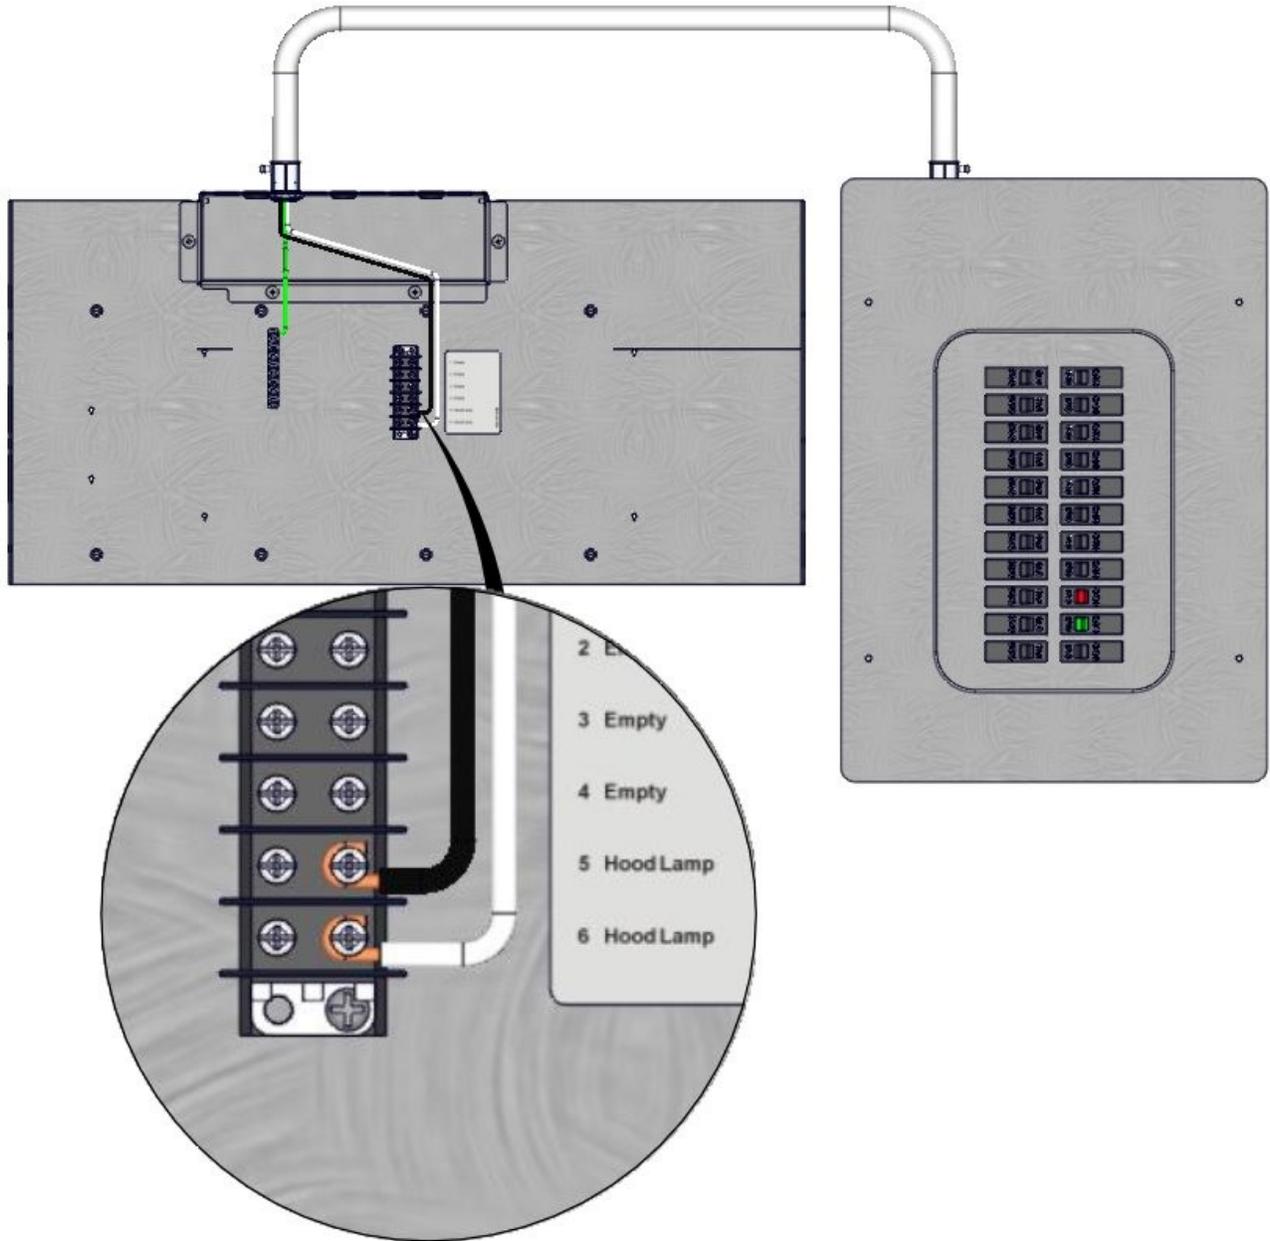


HOOD ELECTRICAL CONNECTIONS

Input Power to Ovens - Standard (120V / 60Hz)

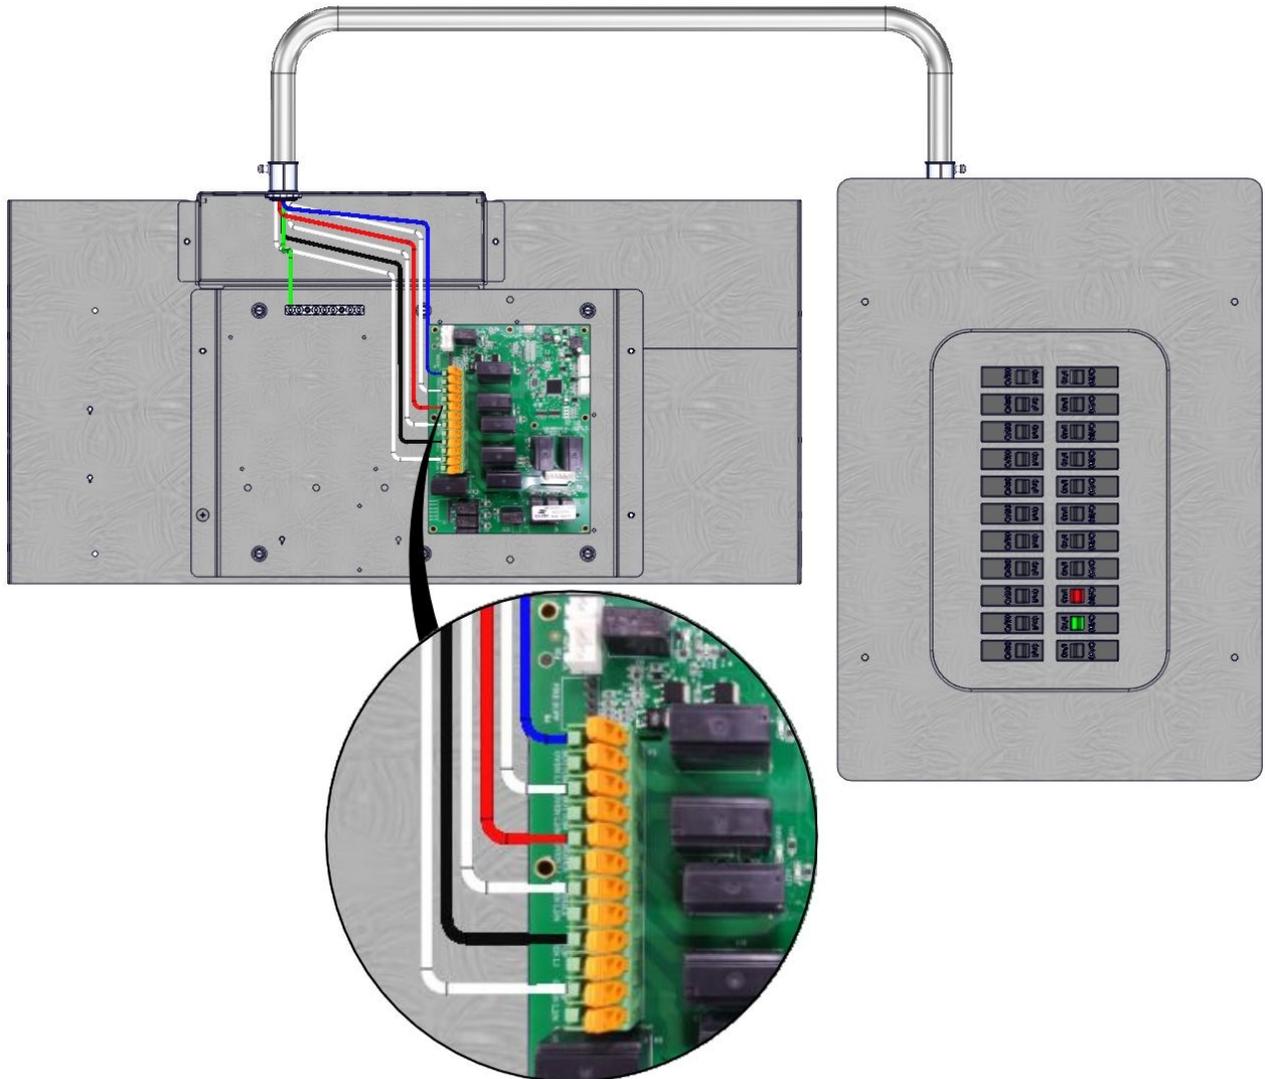**NOTE**

Each oven will have its own 120V and Neutral wire.

Input Power to Ovens - World (230V / 50Hz)

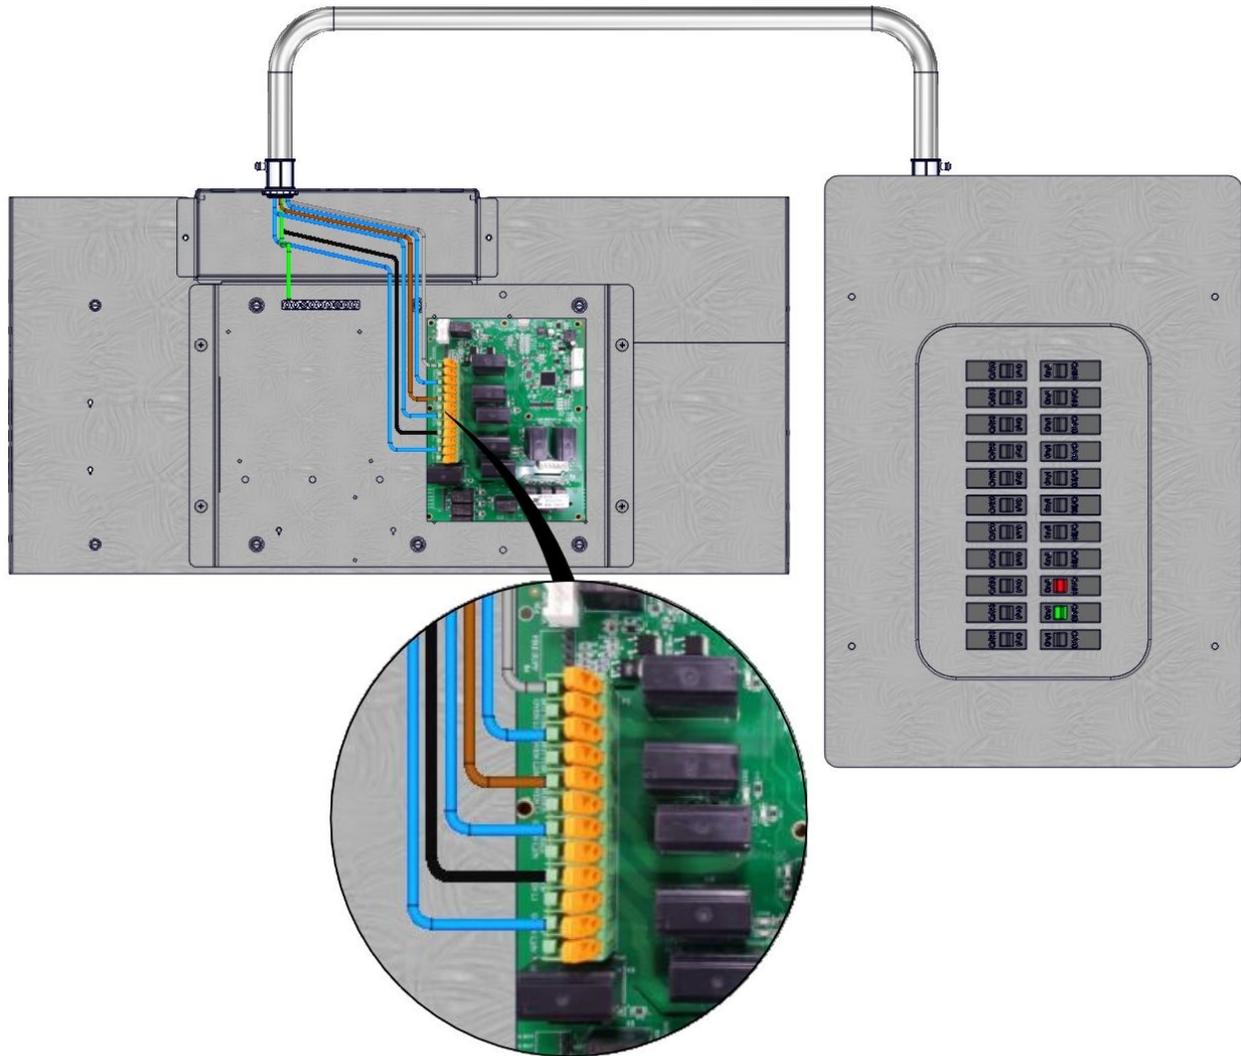


NOTE


Each oven will have its own 230V and Neutral wire.

HOOD ELECTRICAL CONNECTIONS


Input Power to the Hood– 208/240V Single Phase

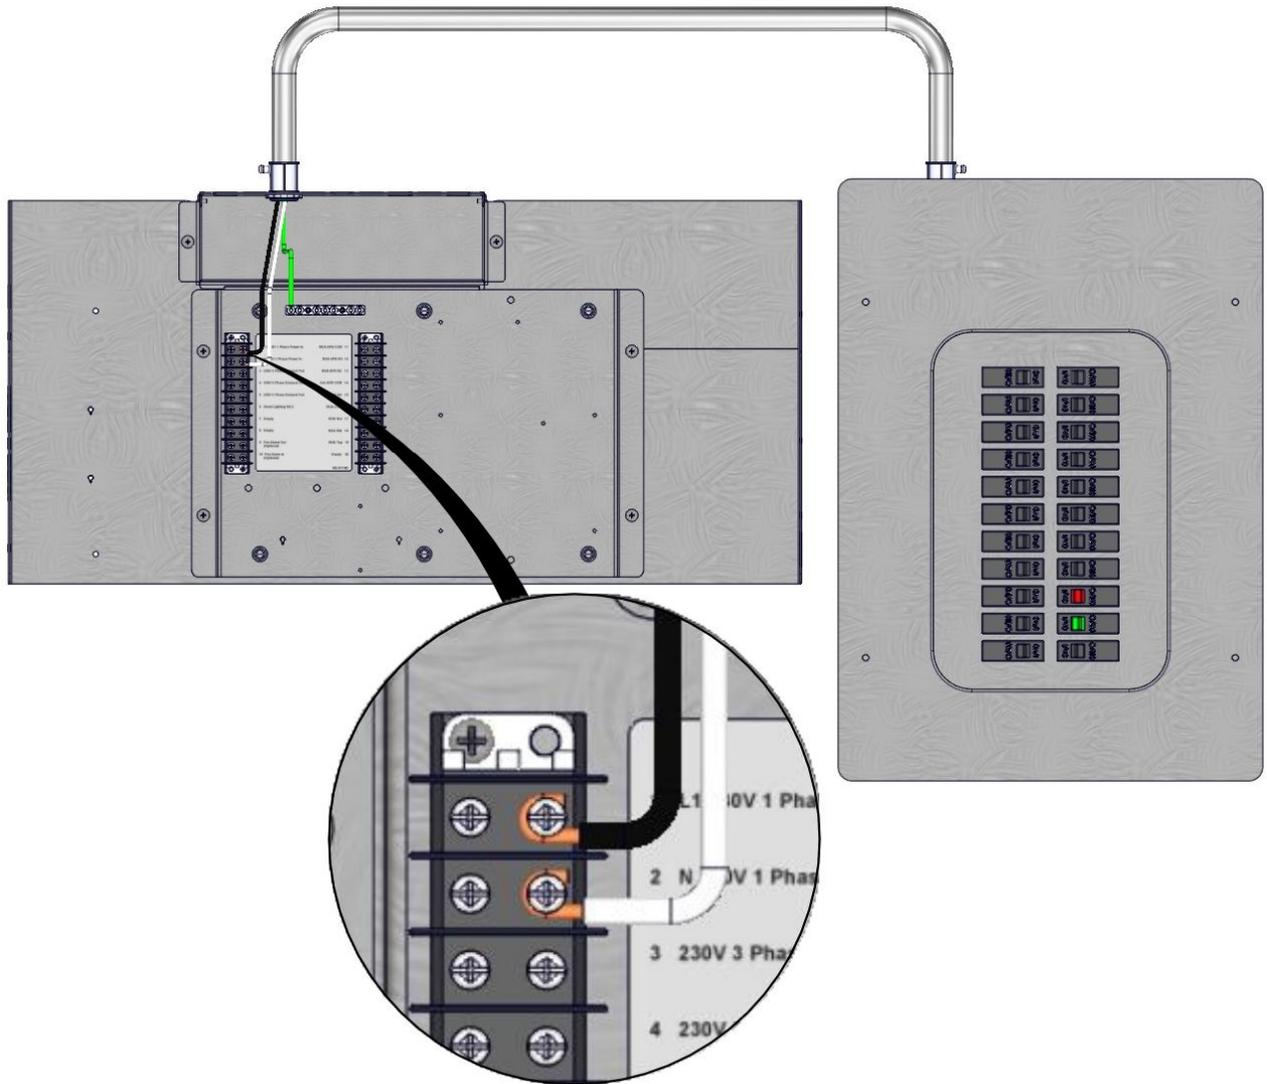


Input Power to the Hood - World (230V / 50Hz)

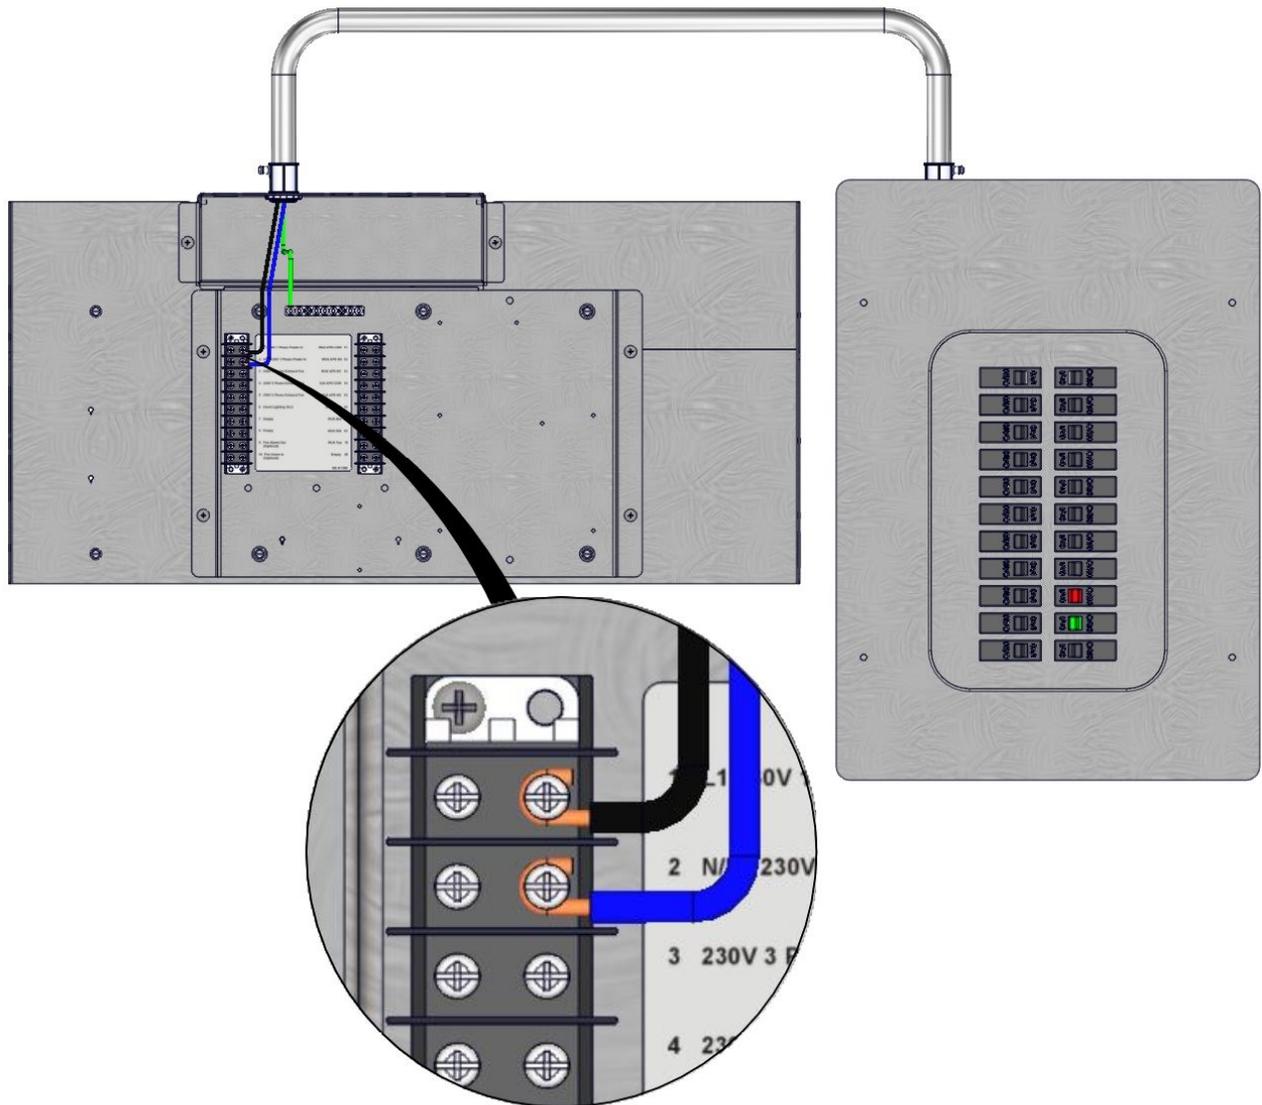

Output Power from VFD to Exhaust Fan - Standard

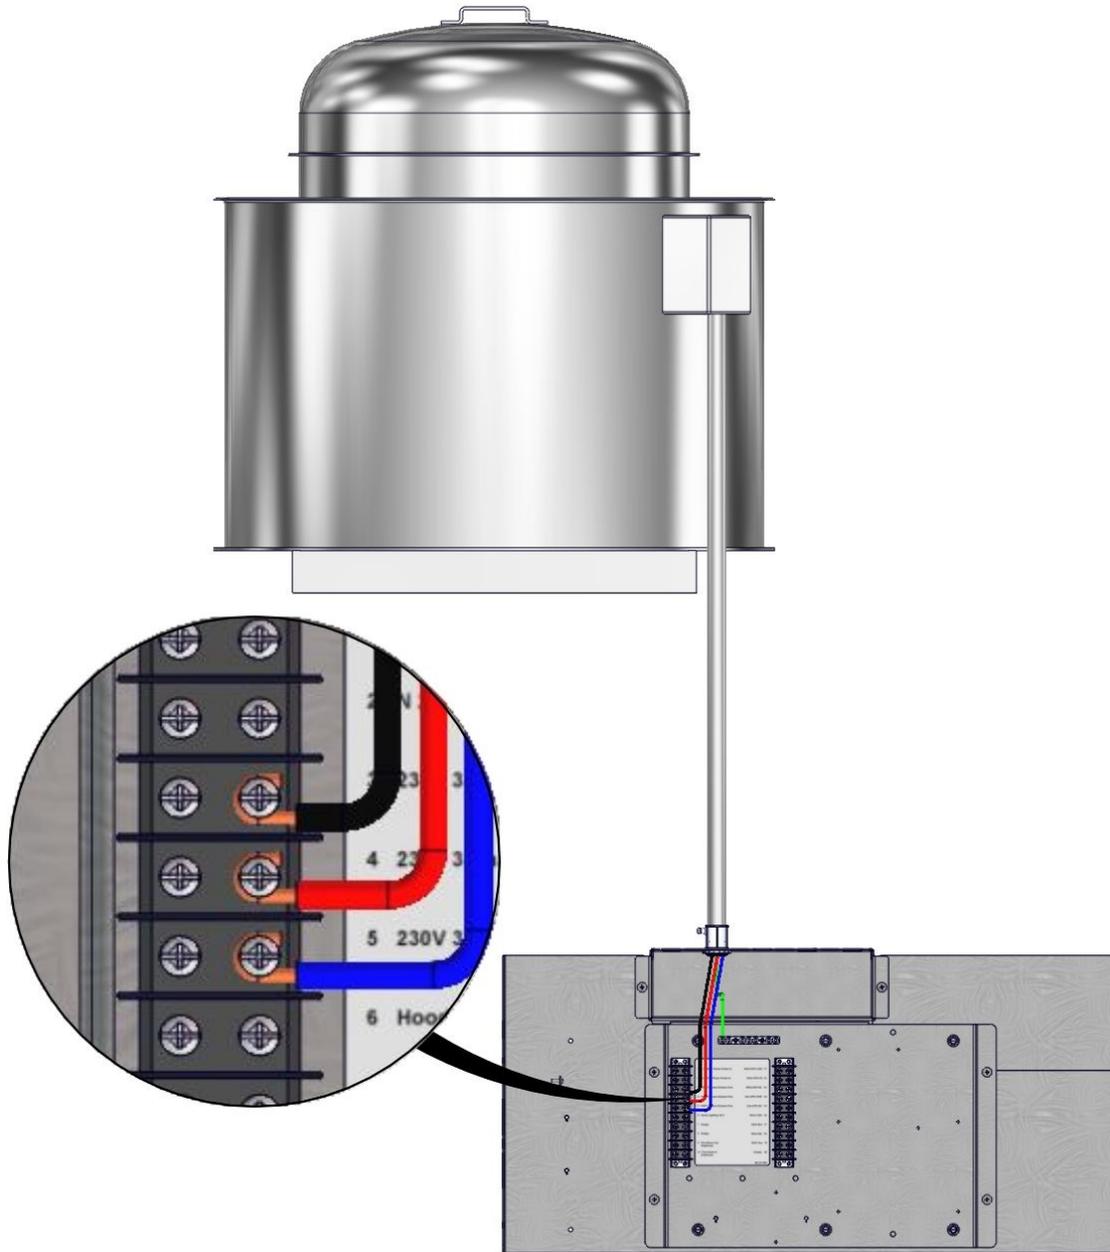


MUA Damper Relays - Single Output - Voltage & Frequency

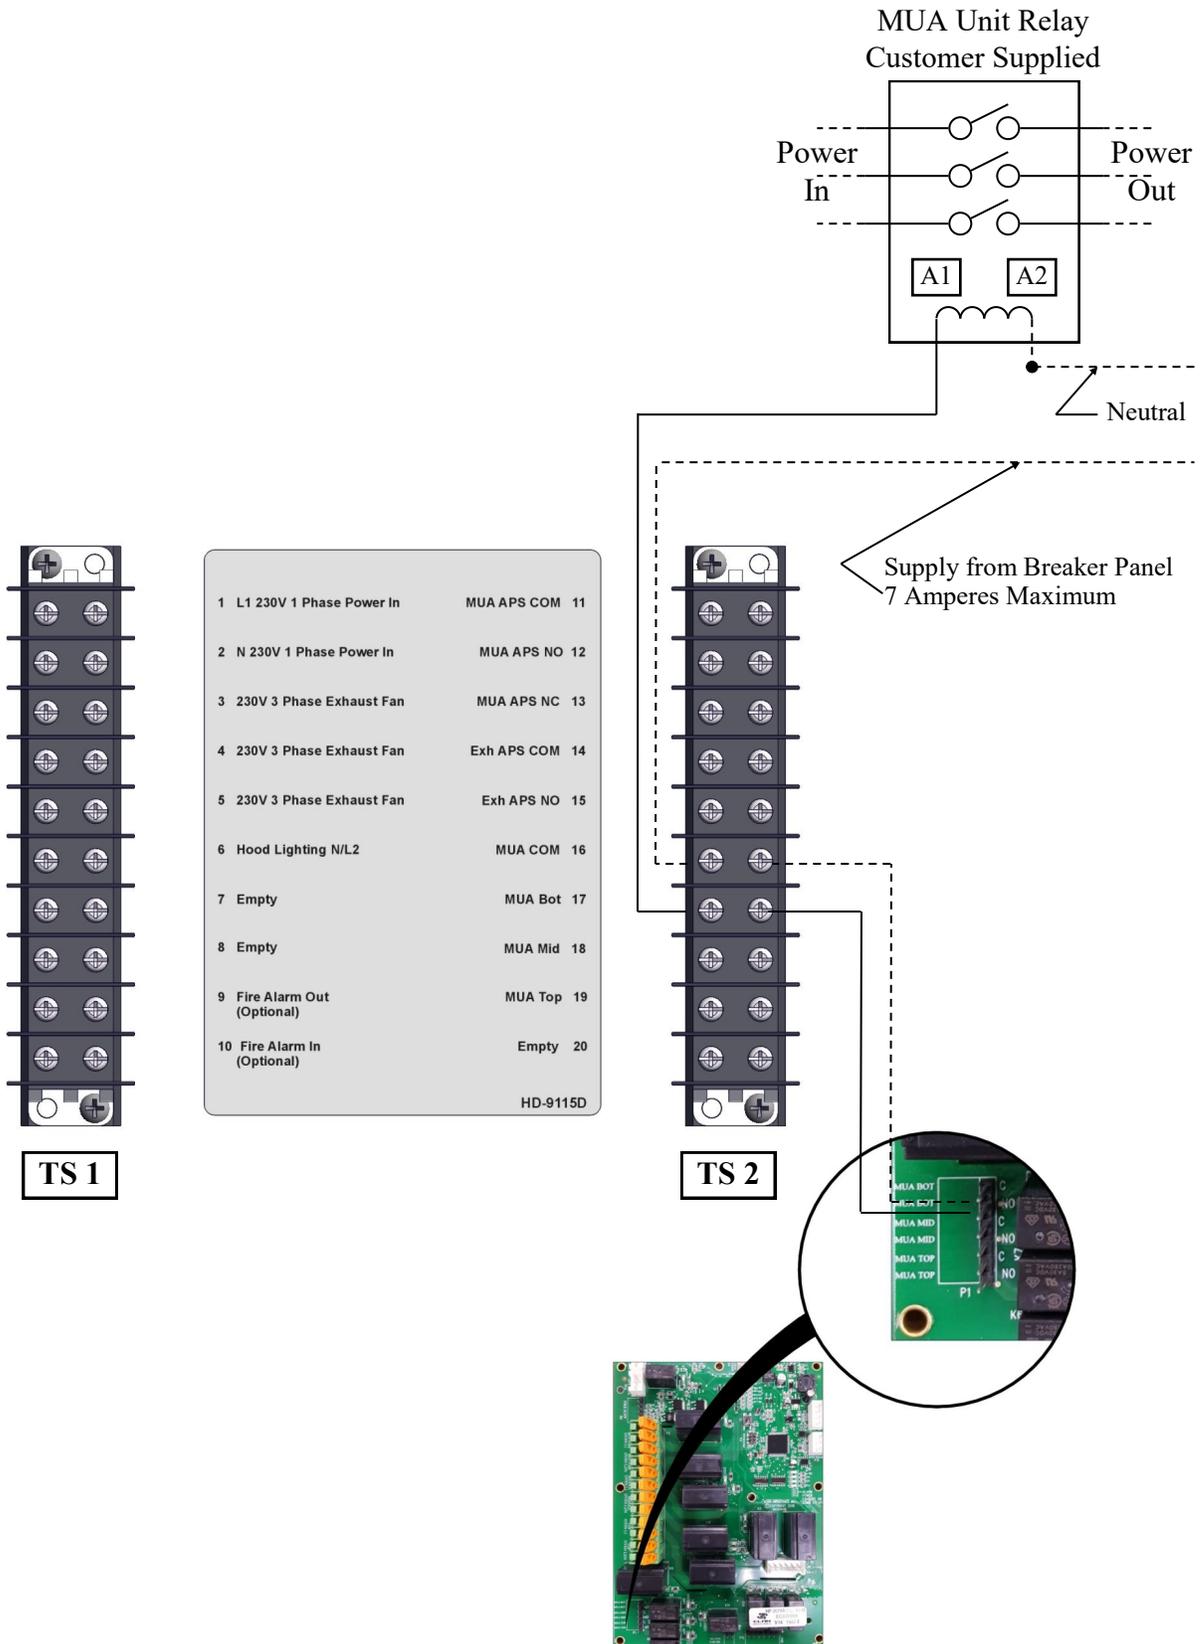


Some wiring removed for clarity. See schematic for details.

MUA Damper Relays - Multiple Output - Voltage & Frequency

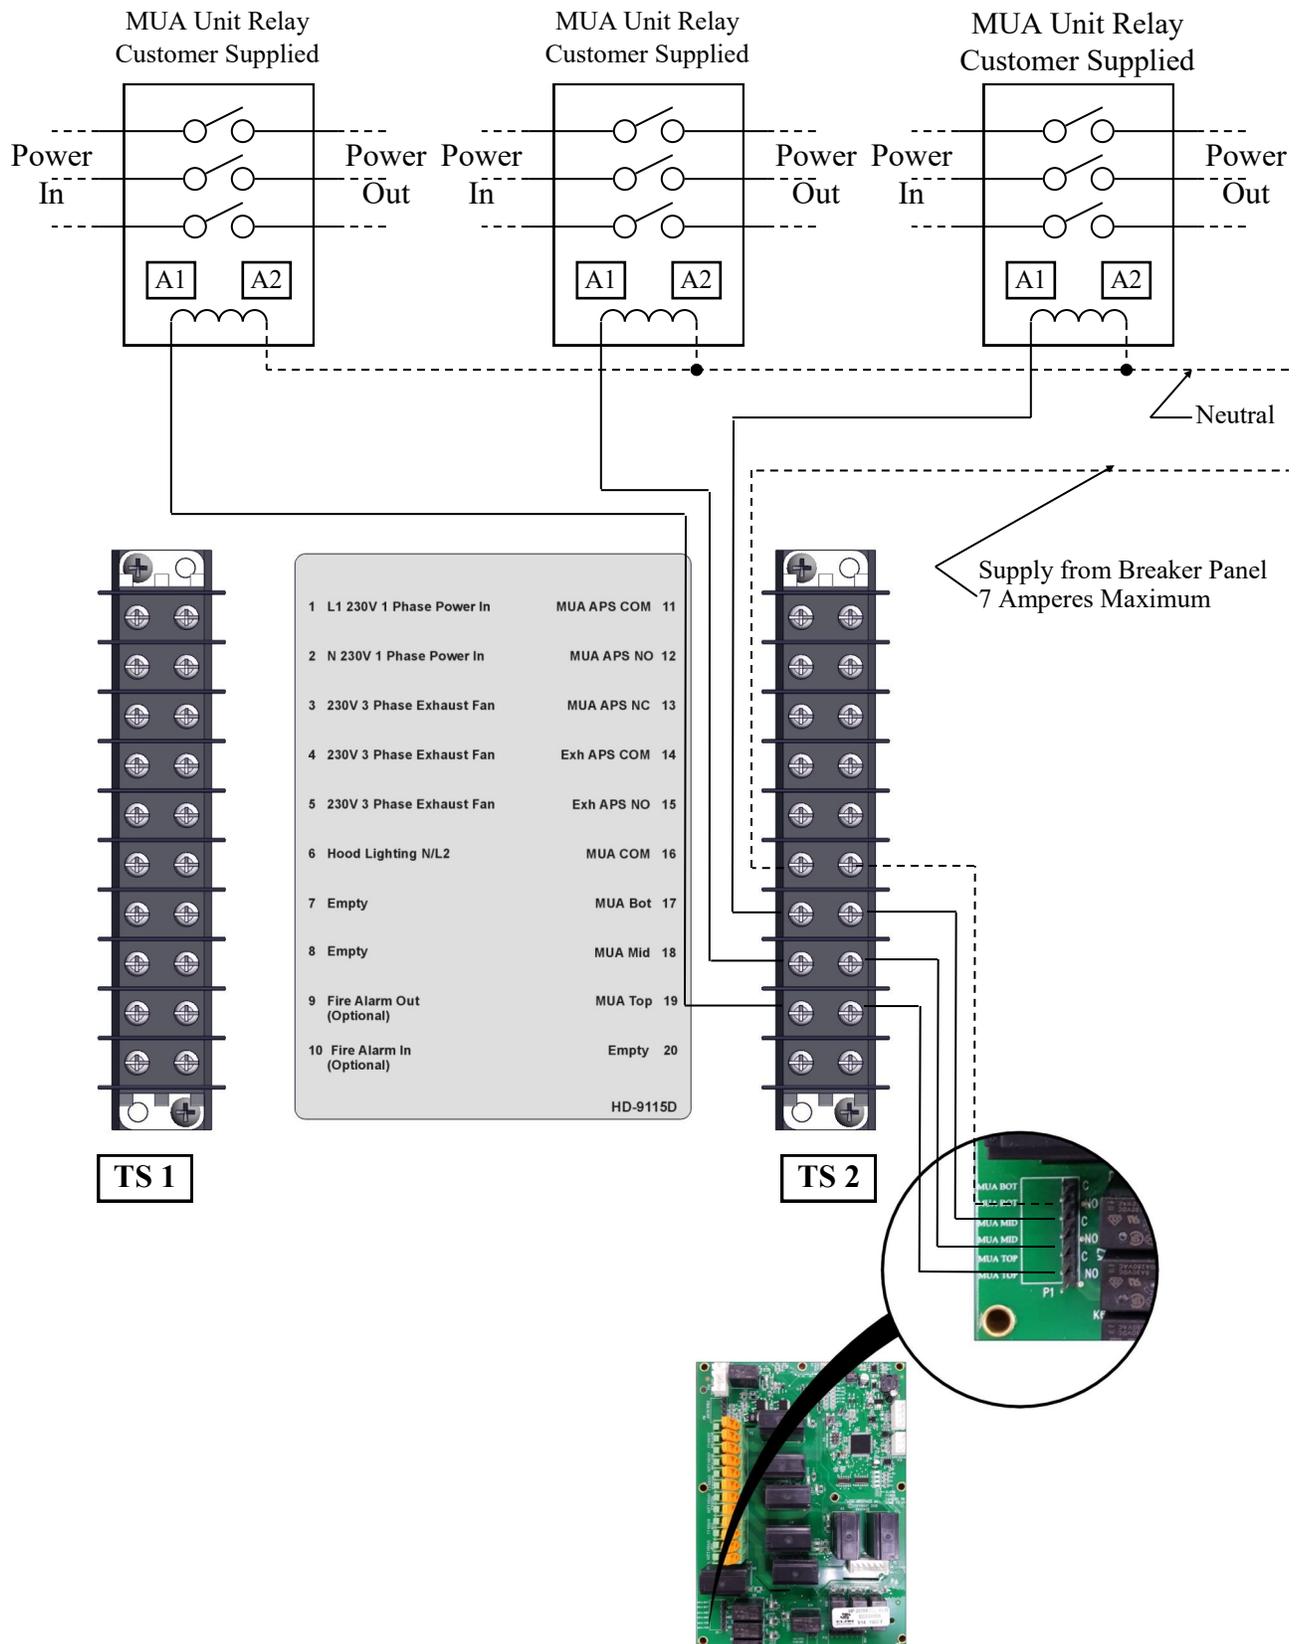

Some wiring removed for clarity. See schematic for details.

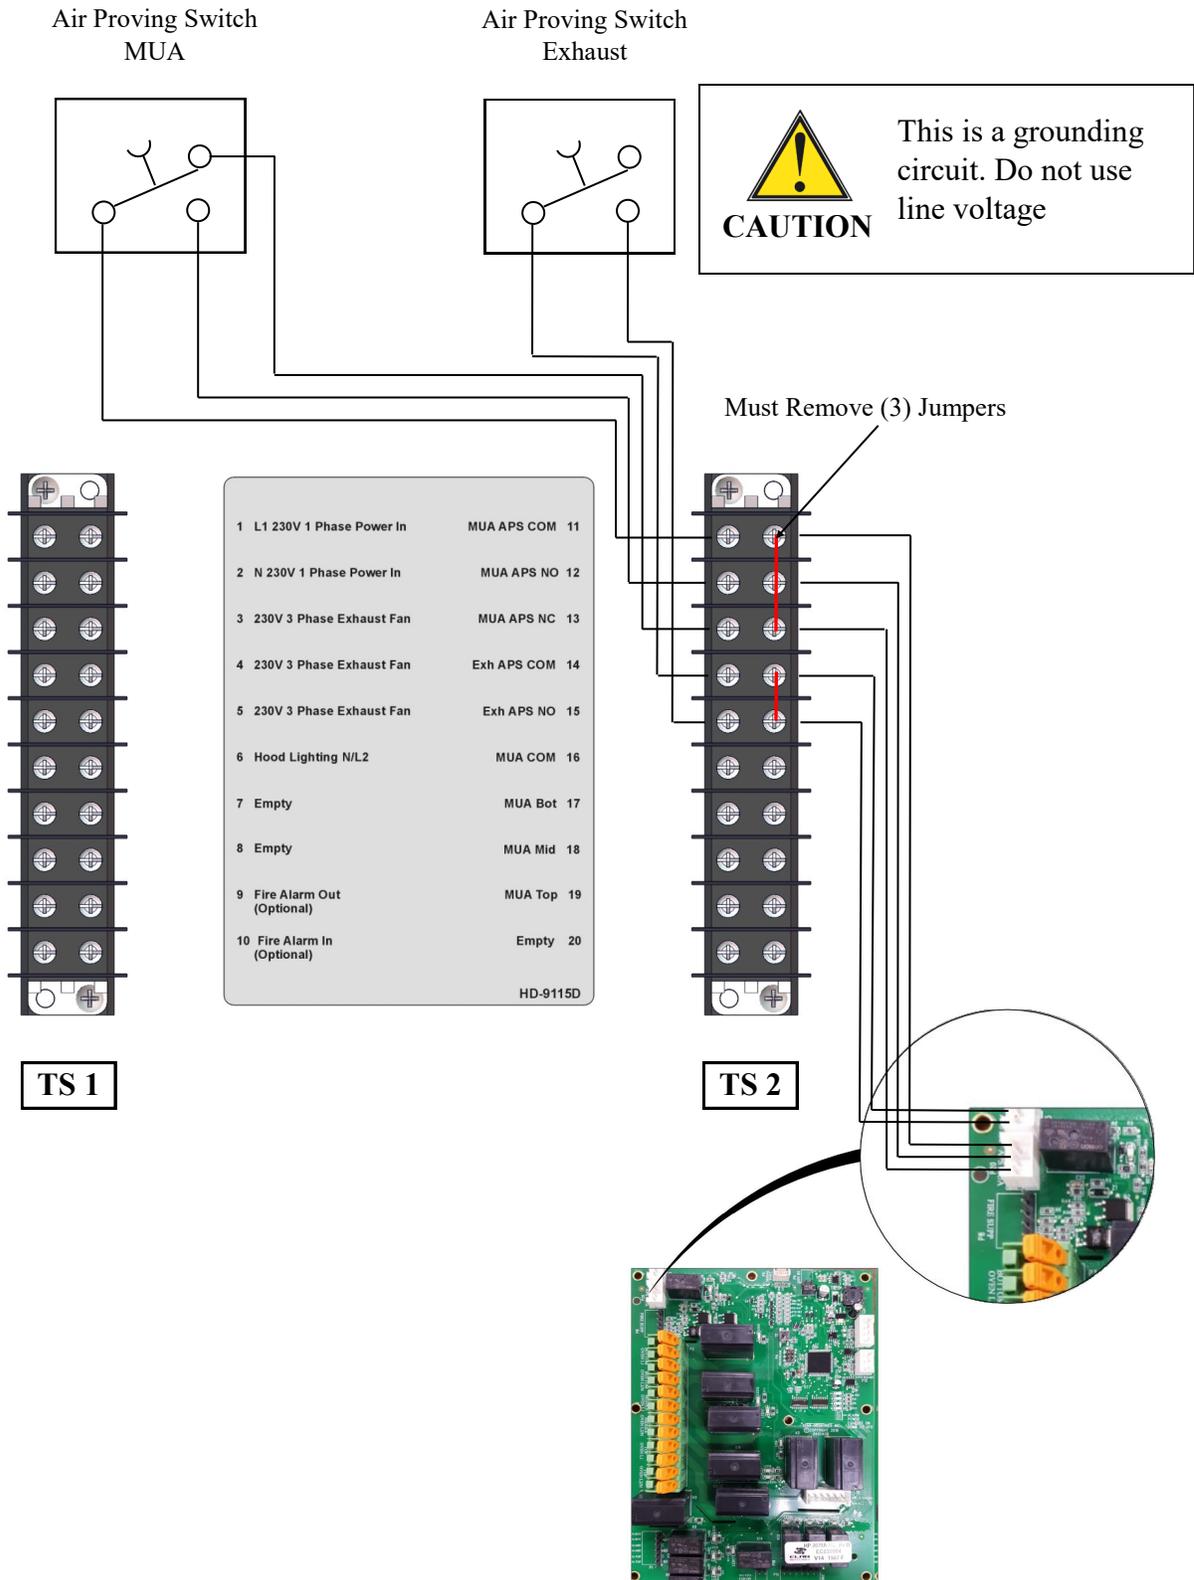


Some wiring removed for clarity. See schematic for details.

Fire Alarm Relay - Voltage & Frequency



Connect wires from the Junction Box to the Normally Open (NO) contacts in the Fire Suppression cabinet.

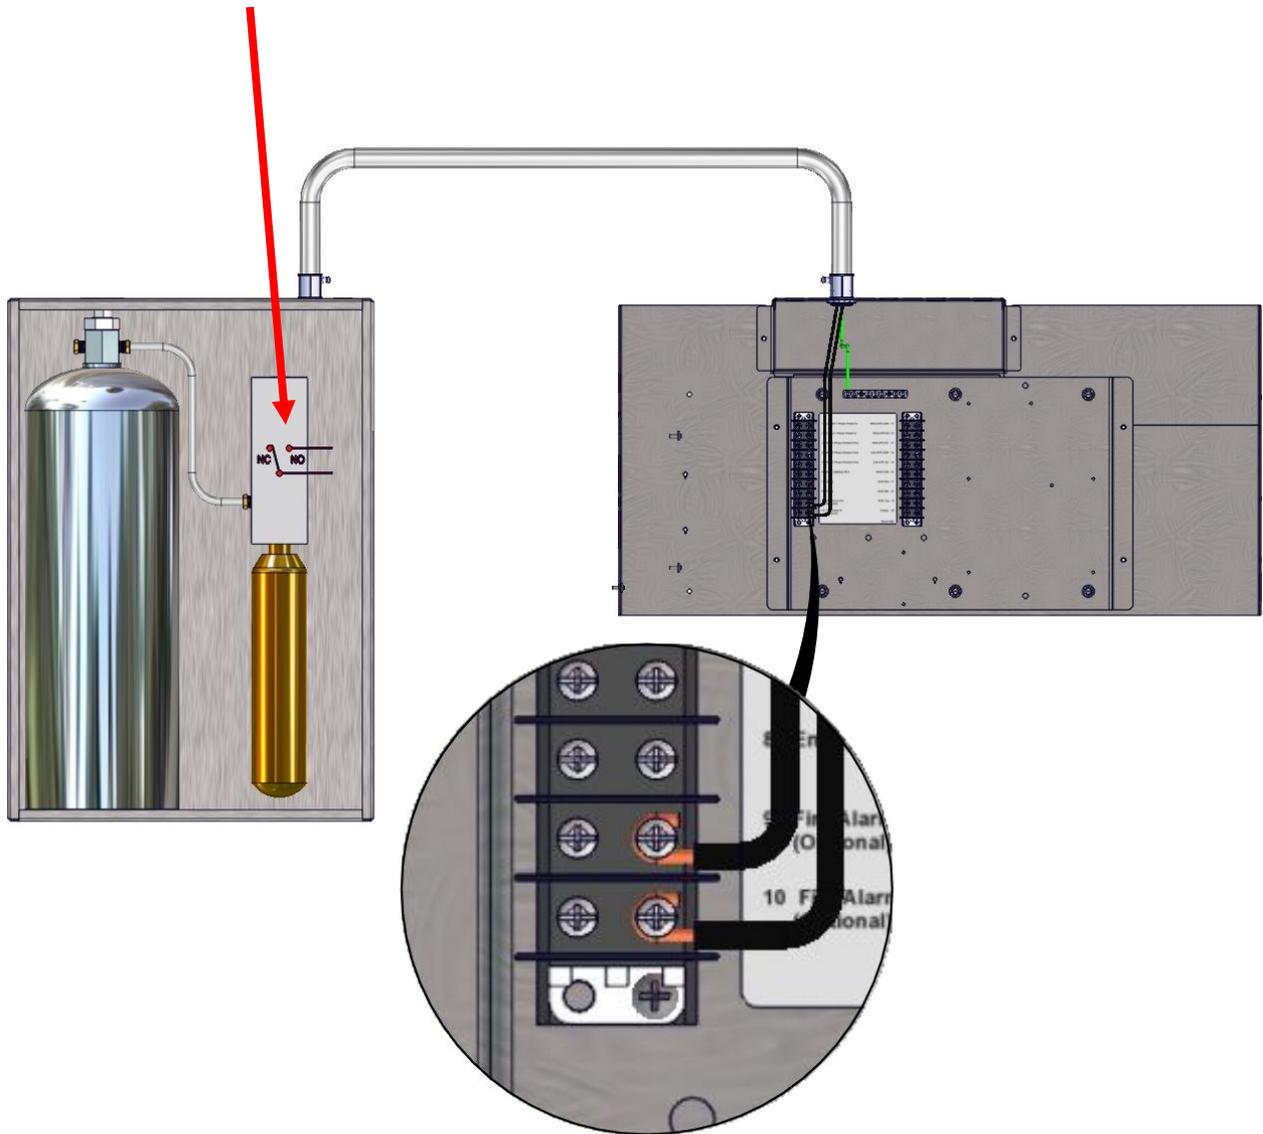

TS1-10R will only have voltage when the Fire Suppression system has been activated.

**DANGER**

Oven must be cool and the electric cord unplugged before hood assembly begins.

**CAUTION**


If the oven is to be removed from its installed location for hood assembly and installation, the following procedure is to be followed:

1. Shut off main manual gas valve
2. Unplug electric cord
3. Unplug gas line
4. Unlock casters
5. Disconnect restraint
6. When hood assembly is complete, move oven to original location
7. Connect restraint
8. Lock casters
9. Connect Relocations cord (if applicable)
10. Plug in electric cord
11. Plug in gas line
12. Turn manual gas valve on
13. Follow normal lighting instructions


**TIP**

Read and understand the next seventeen (17) pages first. They illustrate how to install the components of the hood and shroud.

Prepare Ovens - Remove Lid Screws - Two (2) Only

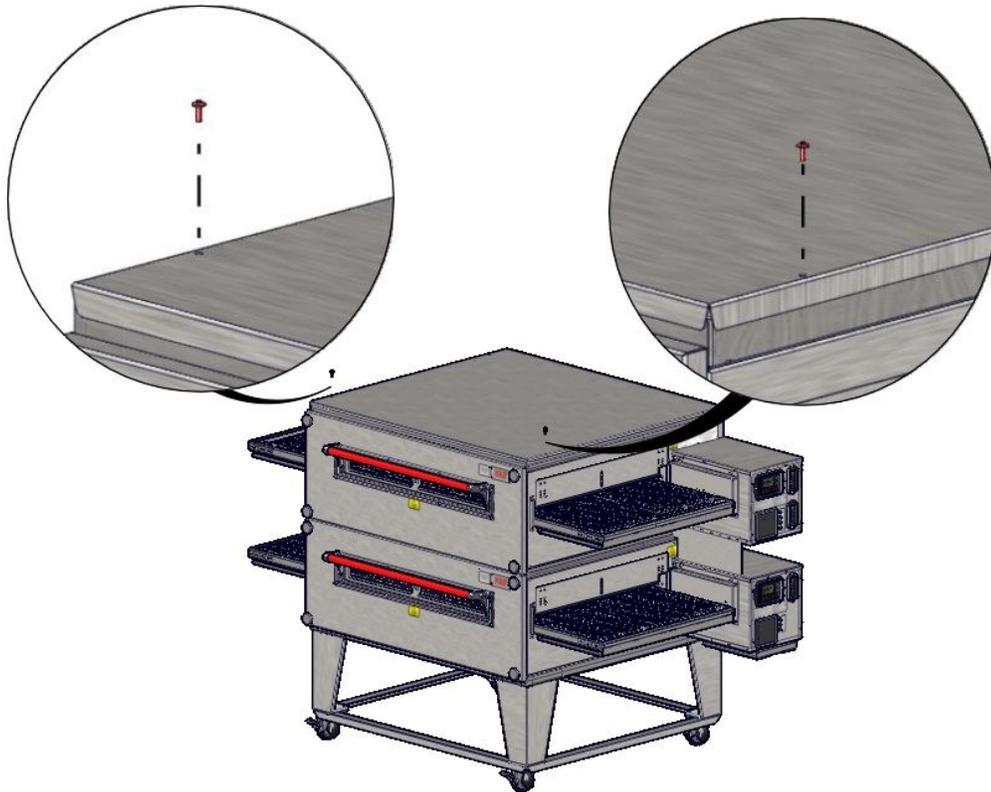

Prepare Ovens - Control Box Closeout Bracket

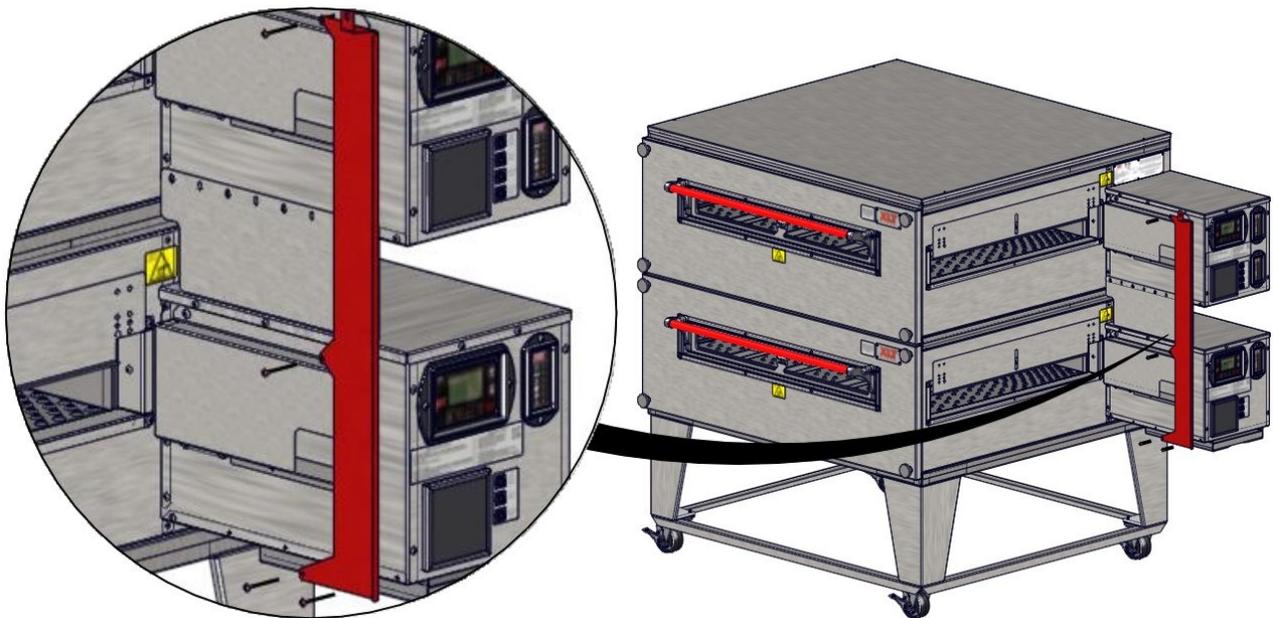


Conveyors have been removed for clarity


NOTE

Prepare Ovens - Front Shroud Brackets


Right Hand Side

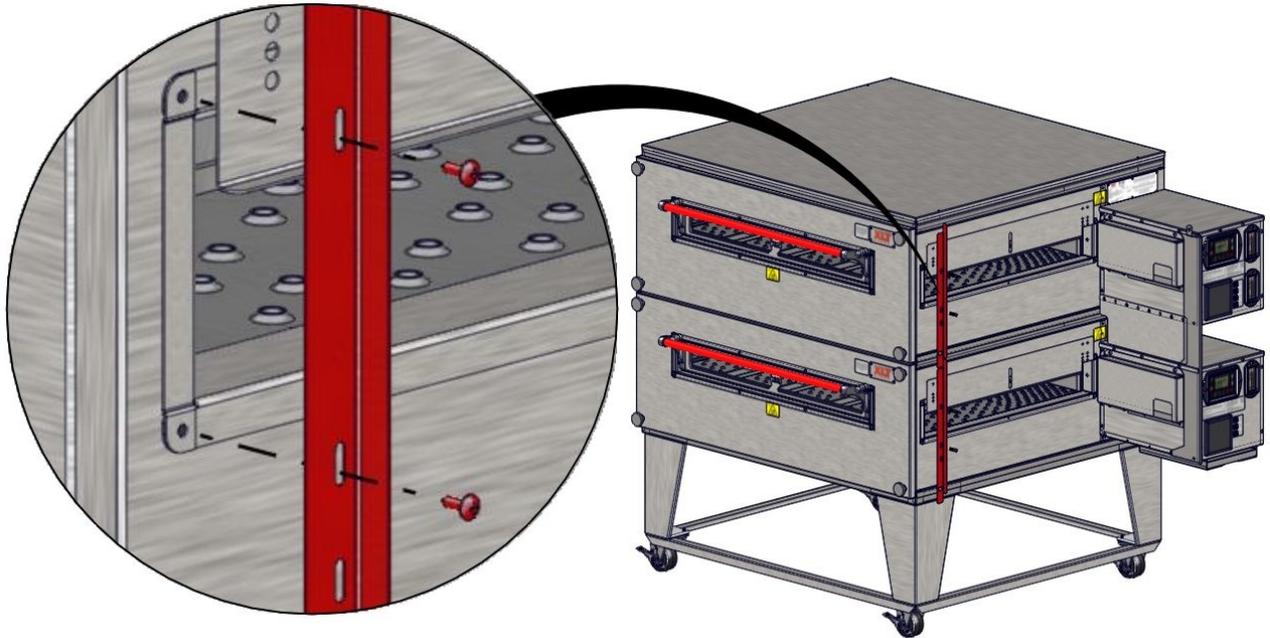


Left Hand Side

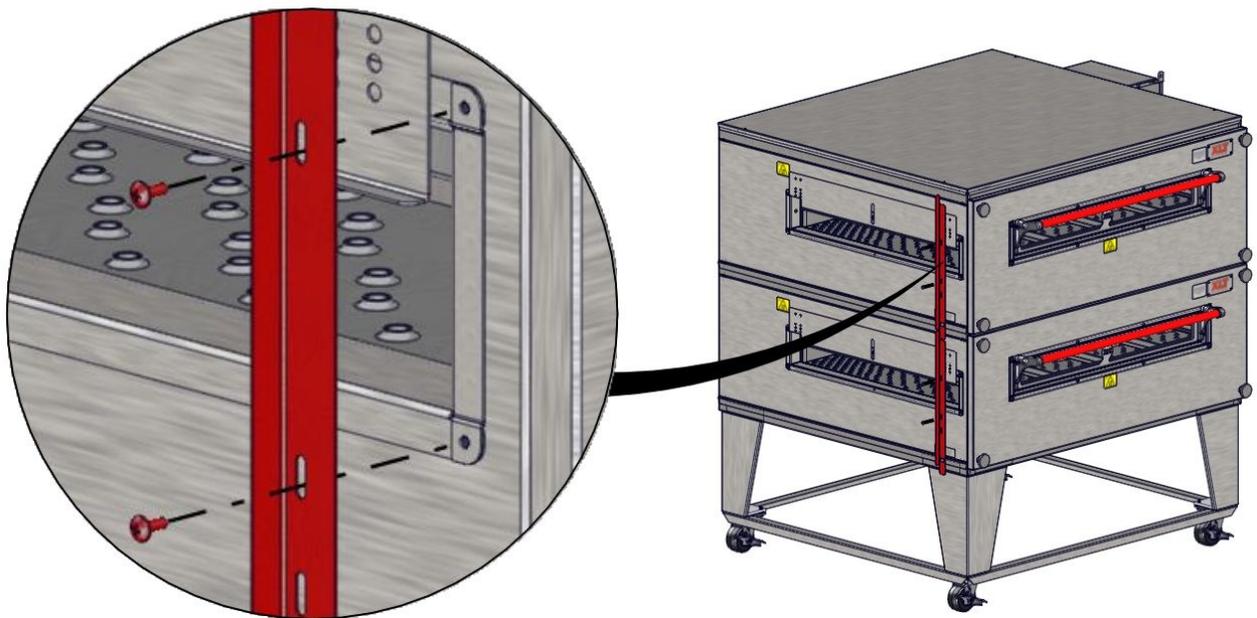


Prepare Ovens - Bottom Rail Bracket

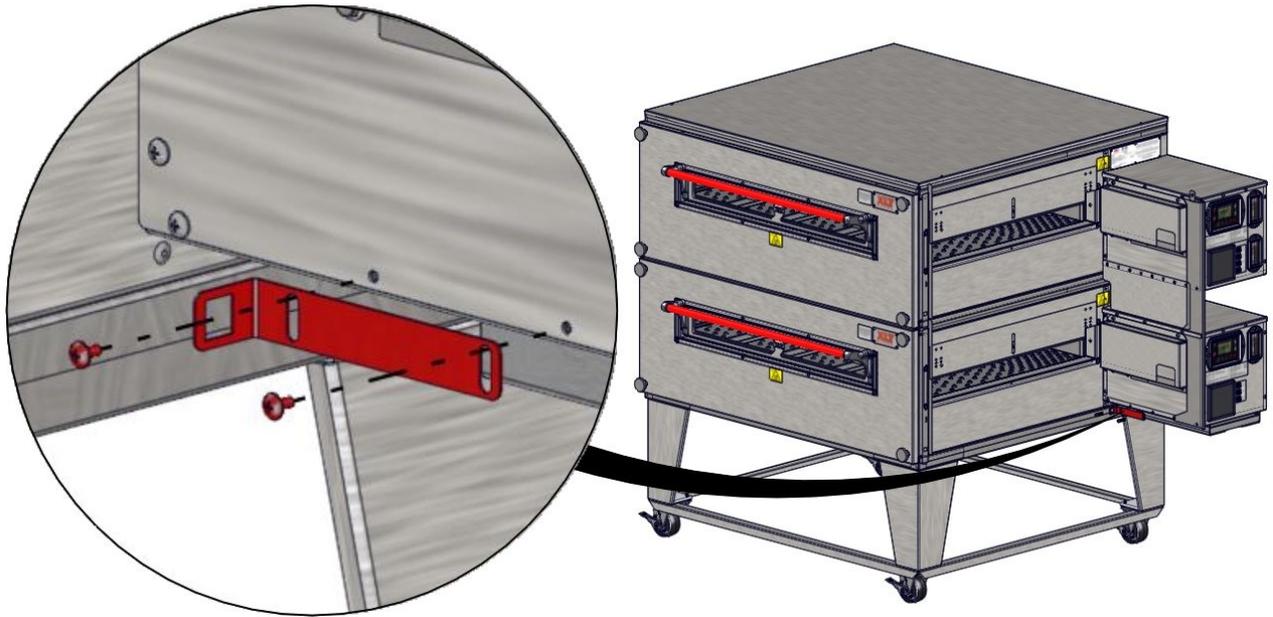


Prepare Ovens - Control Box Side Closeout

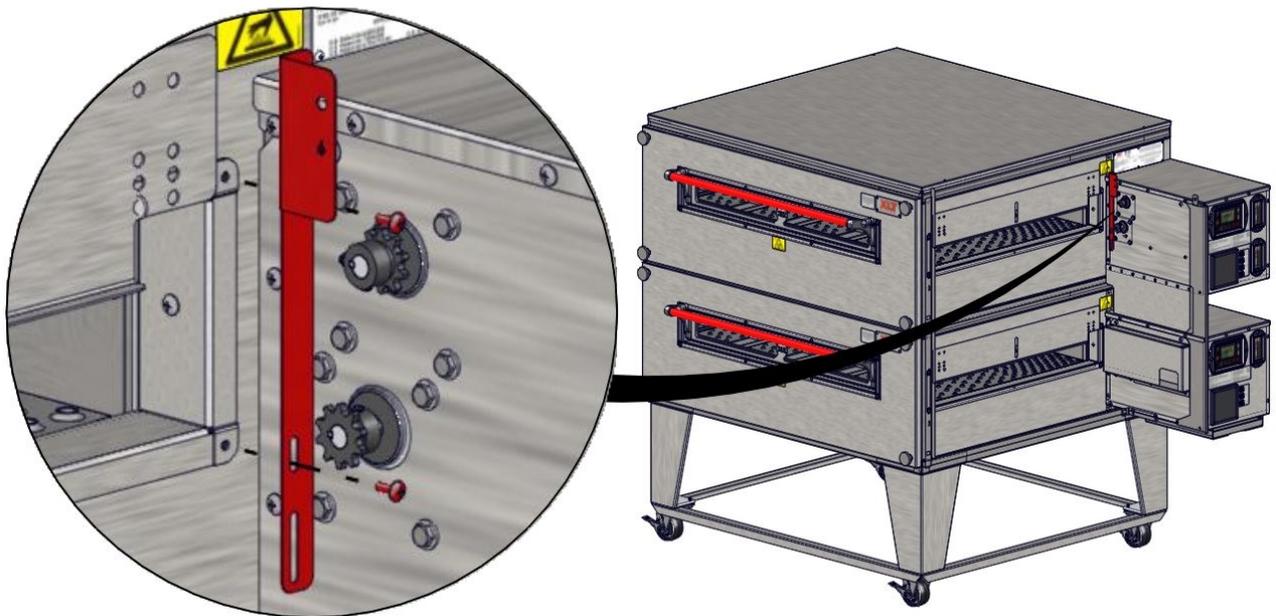

Prepare Ovens - Rear Shroud Brackets


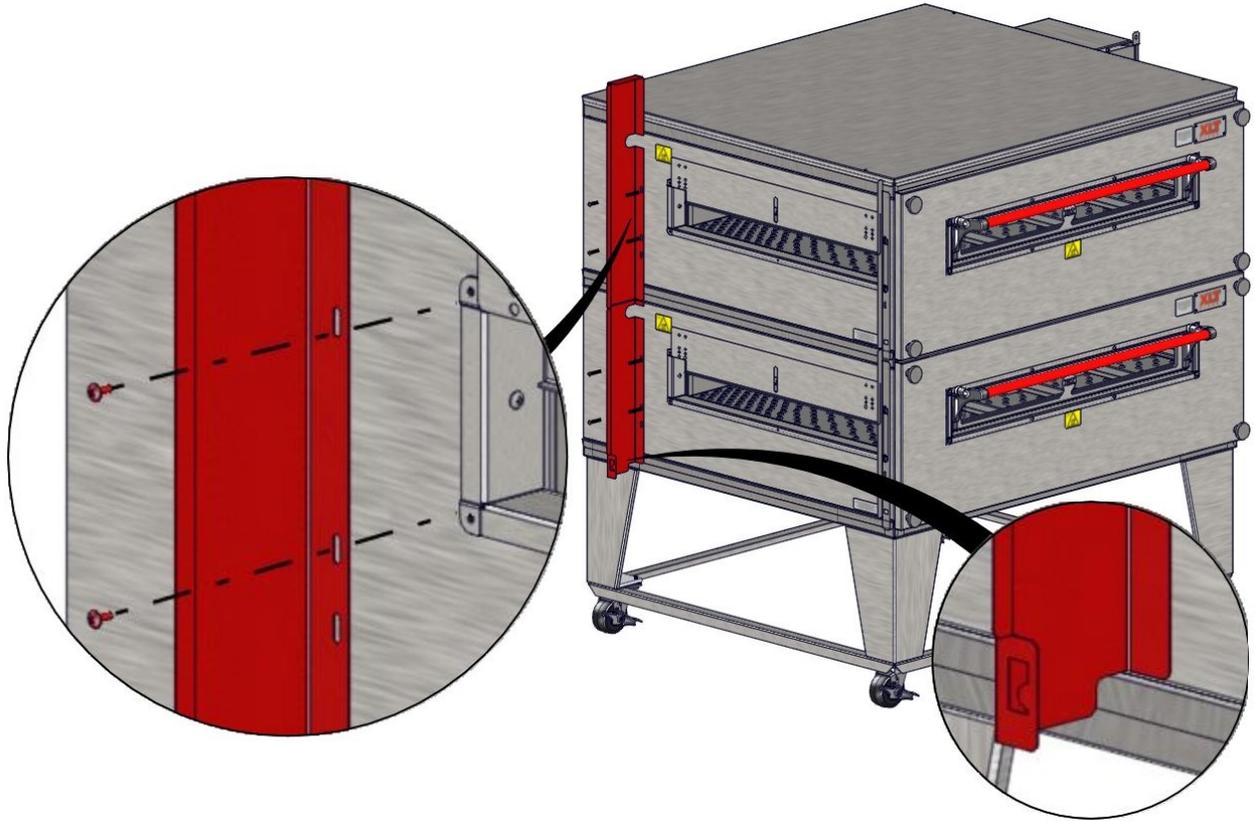


Prepare Hood

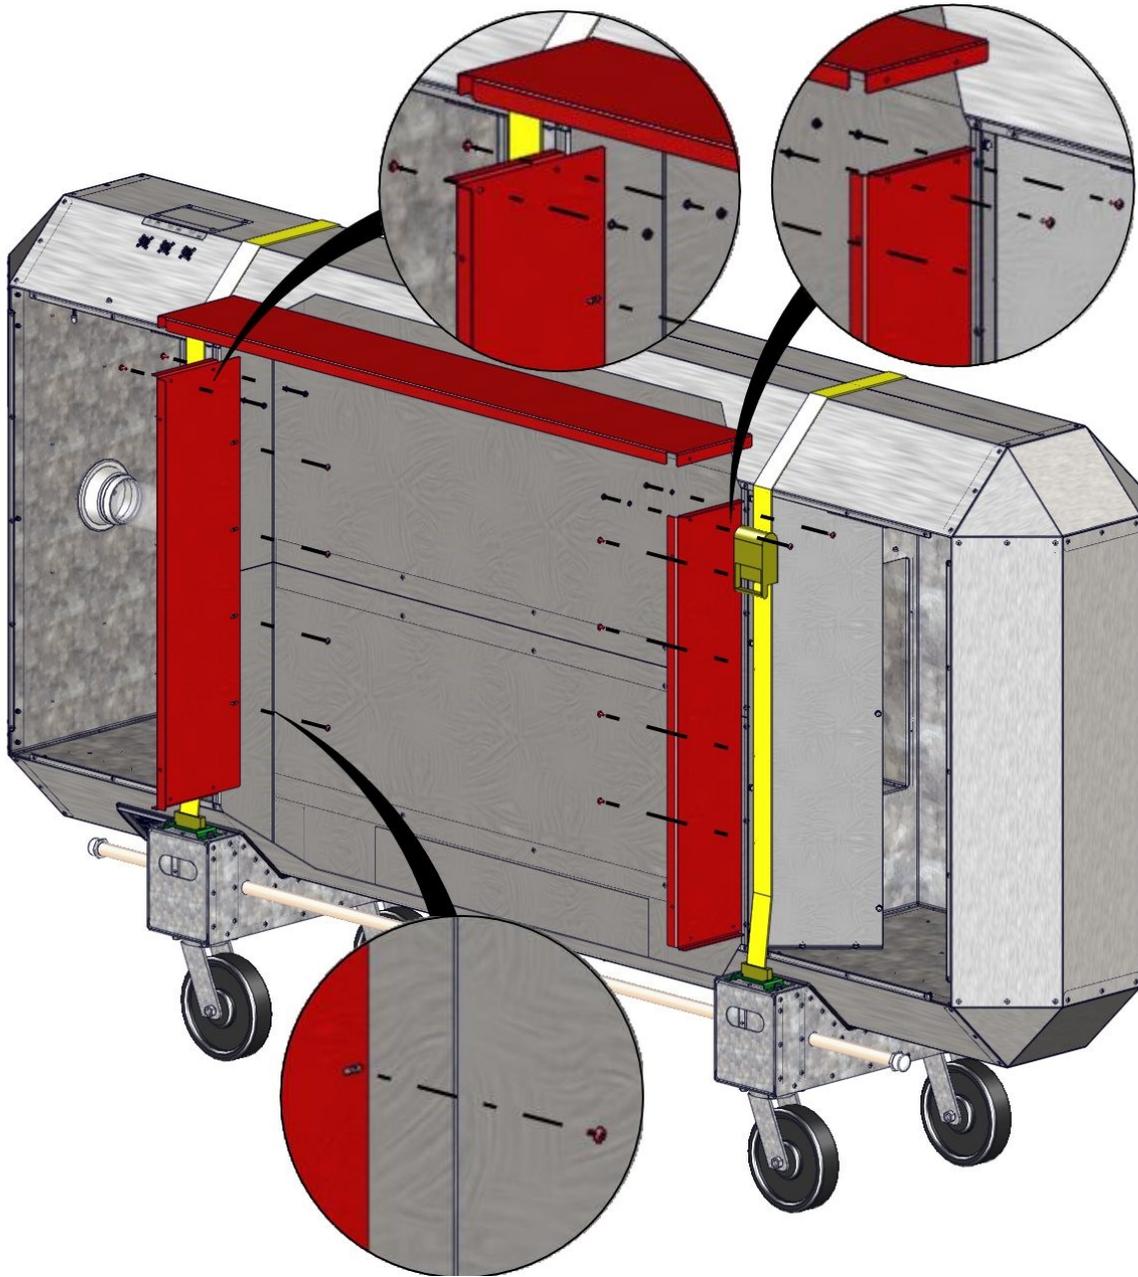

Lifting Gear Setup

XLT hoods can easily be moved and stacked with the proper lifting equipment. The use of XLT approved lifting equipment is highly recommended. Contact XLT for more information.

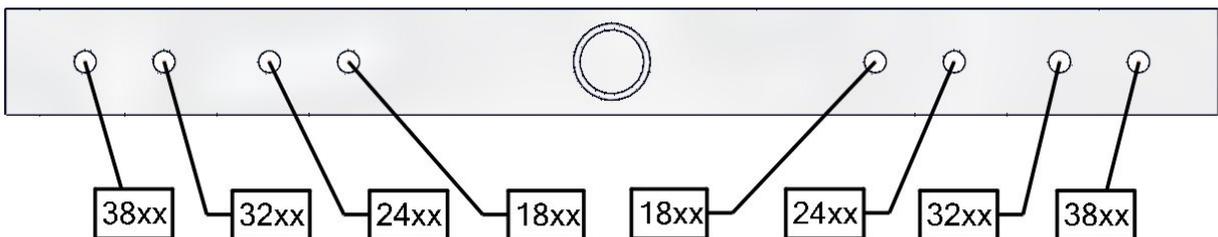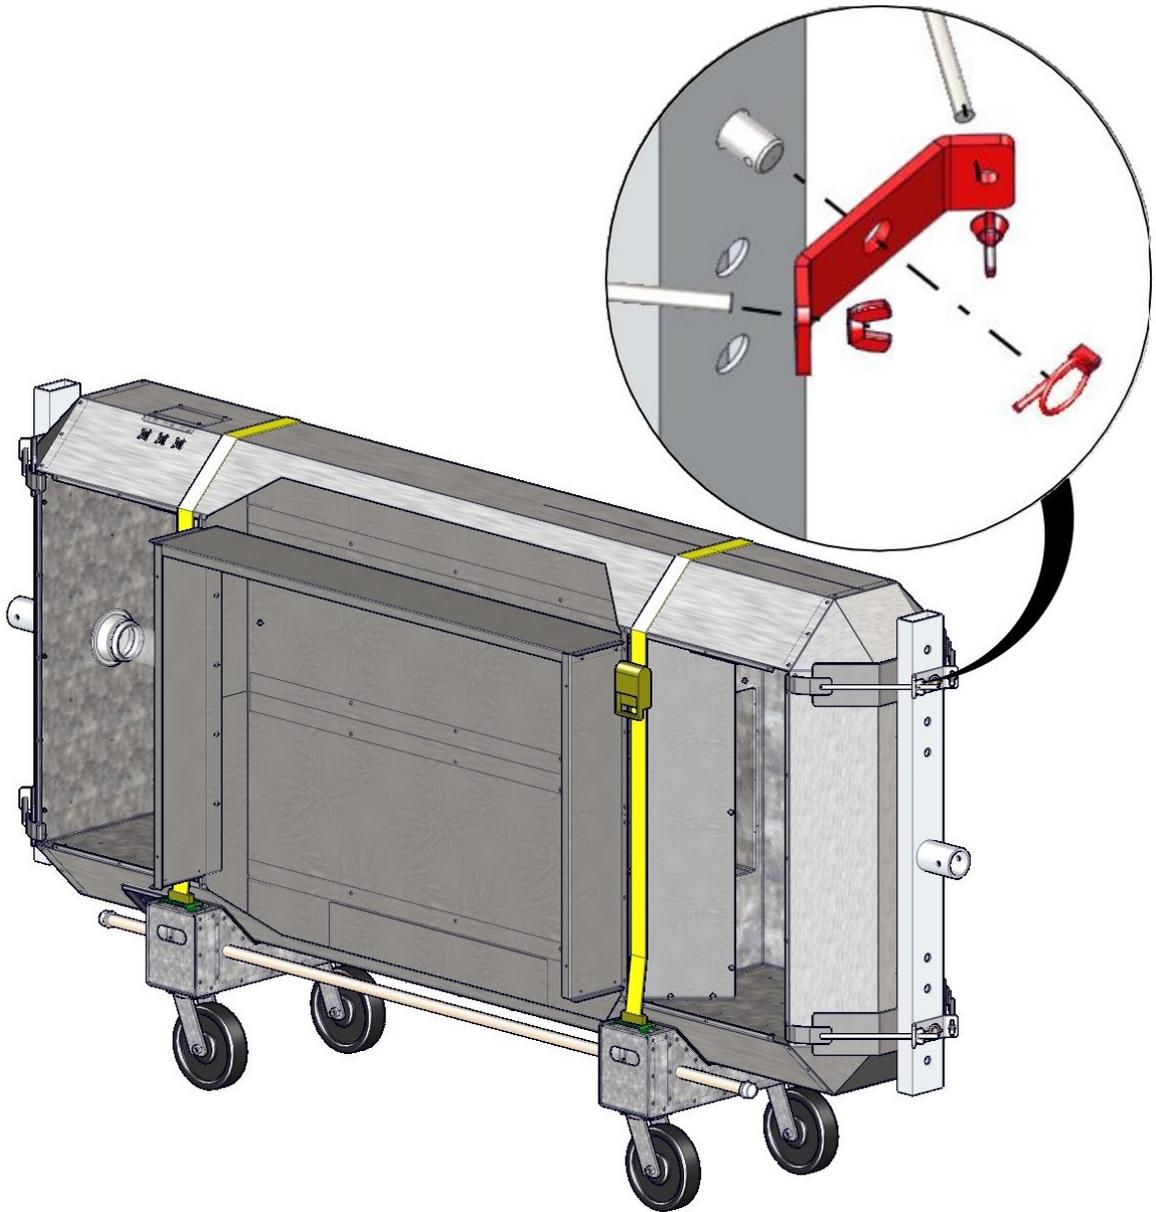

Lifting Jack Setup




DANGER

- Inspect cable prior to each use.
- If cable is frayed or shows signs of excessive wear & tear, DO NOT USE until cable is replaced.
- Check for smooth operation. The cable should not be pinched & should pass smoothly over the pulley on top of the pole assembly.
- At a minimum replace the cable annually with wire rope that meets or exceeds the jack manufacturer's specifications.
- Do not exceed the stated capacity of the jack.



DANGER

Failure to engage the Lifting Jacks into the Lifting Pipe properly and completely will result in damage, injury, or death from a falling hood.

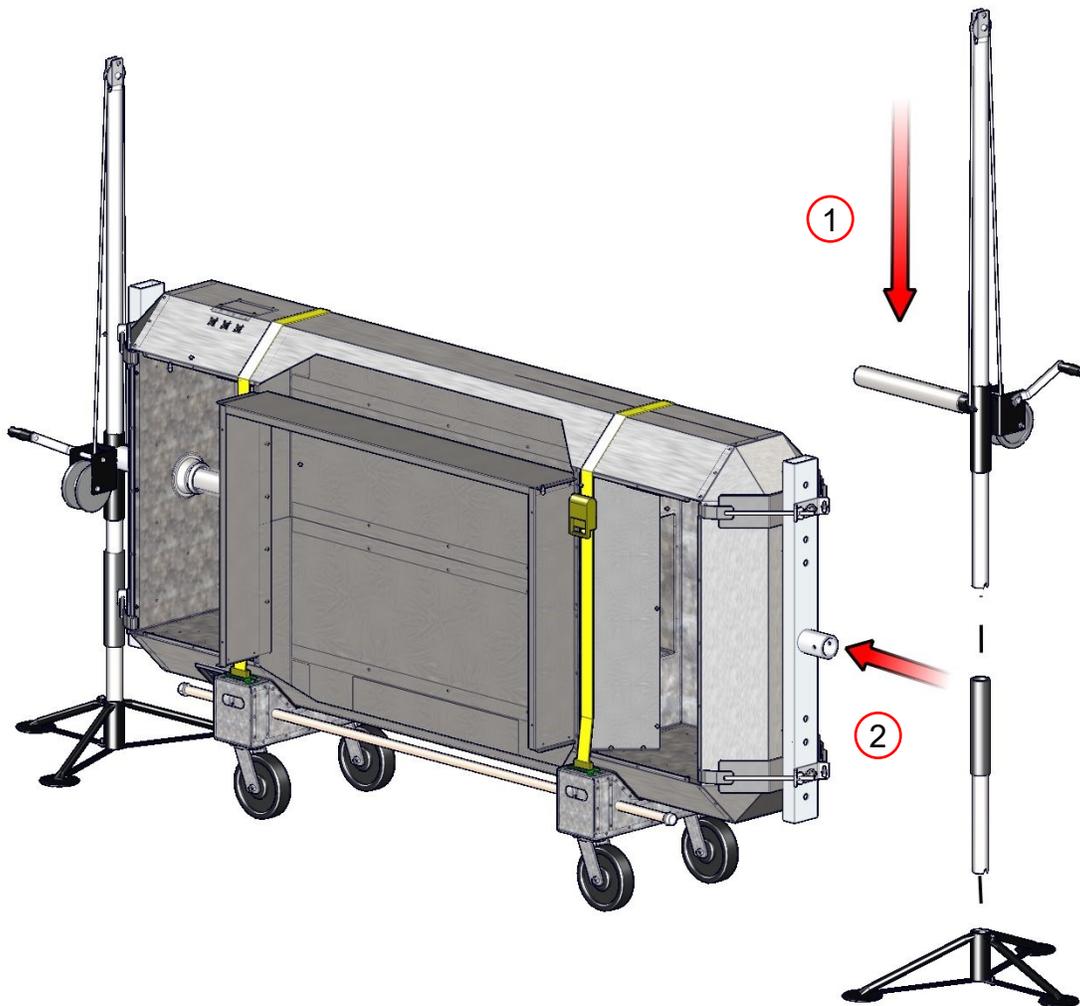


NOTE

The folding leg of the tripod must be positioned outwards from the hood.

Stacking Hood on the Ovens

**DANGER**

- Both jacks should be raised in unison, otherwise they may bind and a dangerous situation will develop.
- Do not put any part of yourself under the hood at any time.
- The hood is top heavy. Be careful.

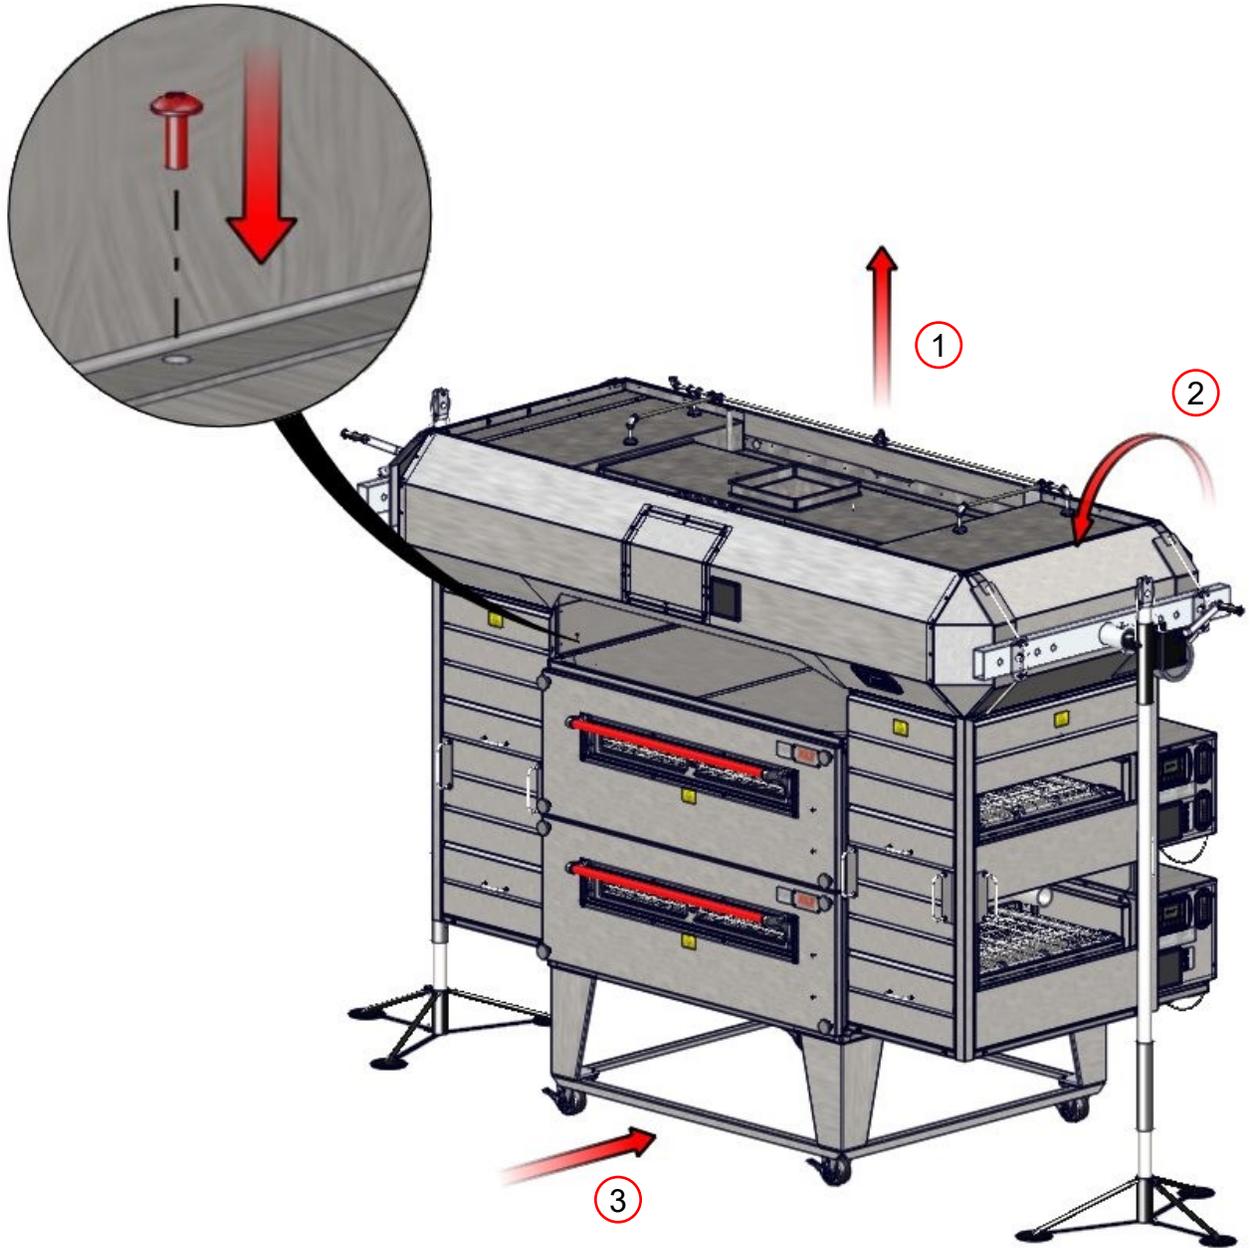


Hang Hood From Ceiling Joists



DANGER

Hood Must Be Suspended From Ceiling Joists


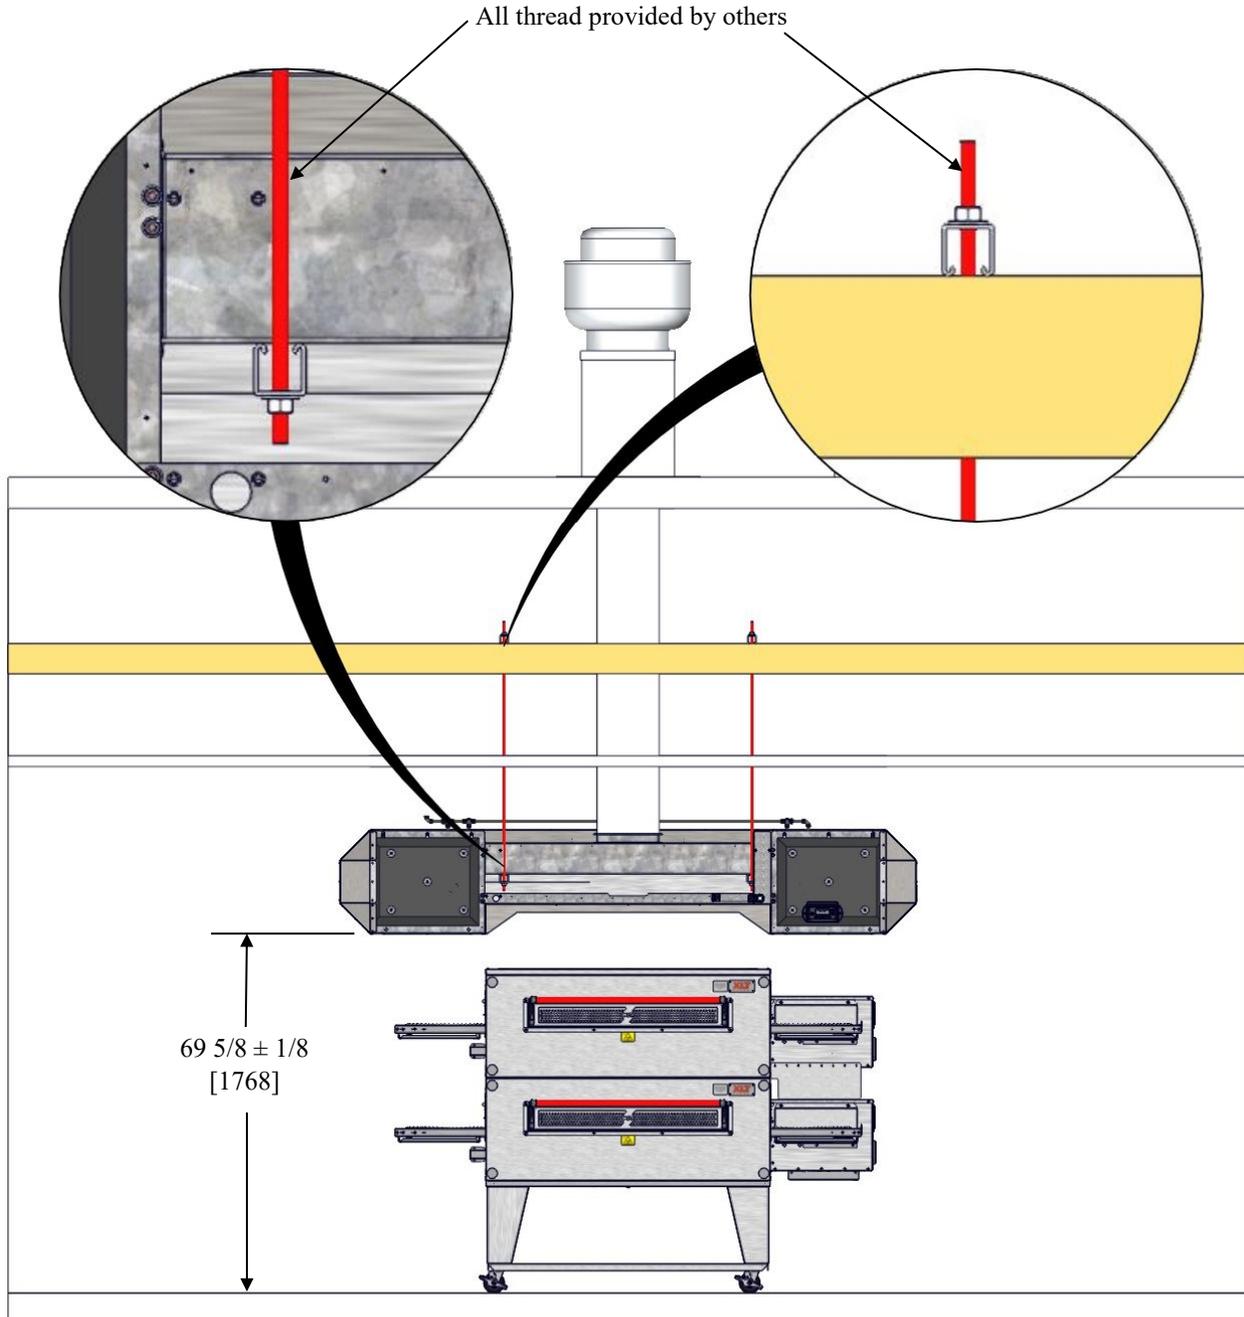


This measurement is from the **finished** floor to the bottom of the suspended hood.


NOTE

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.

Install Grease Trays, Light Bulbs & Covers, and Grease Filters

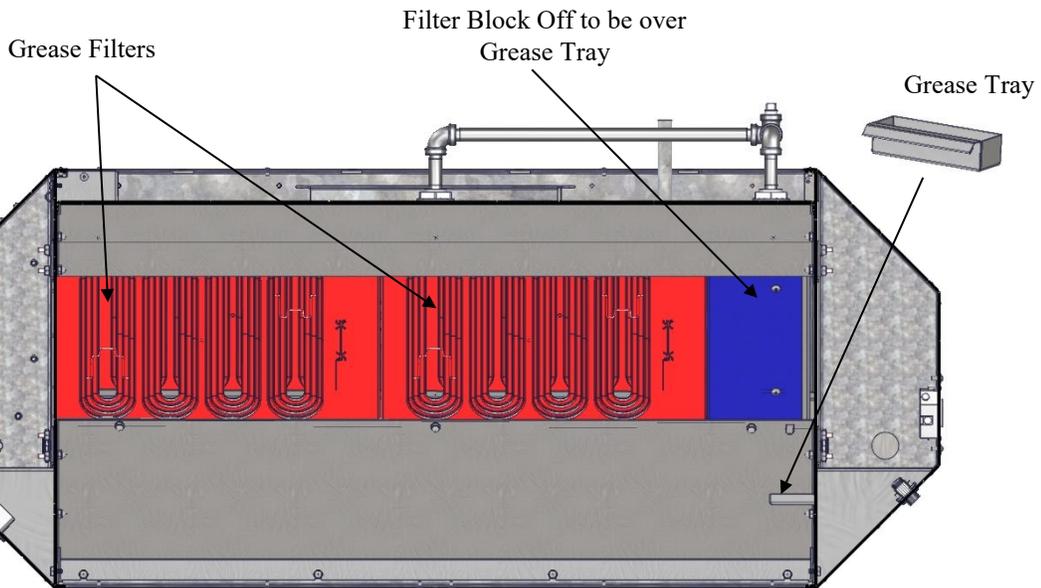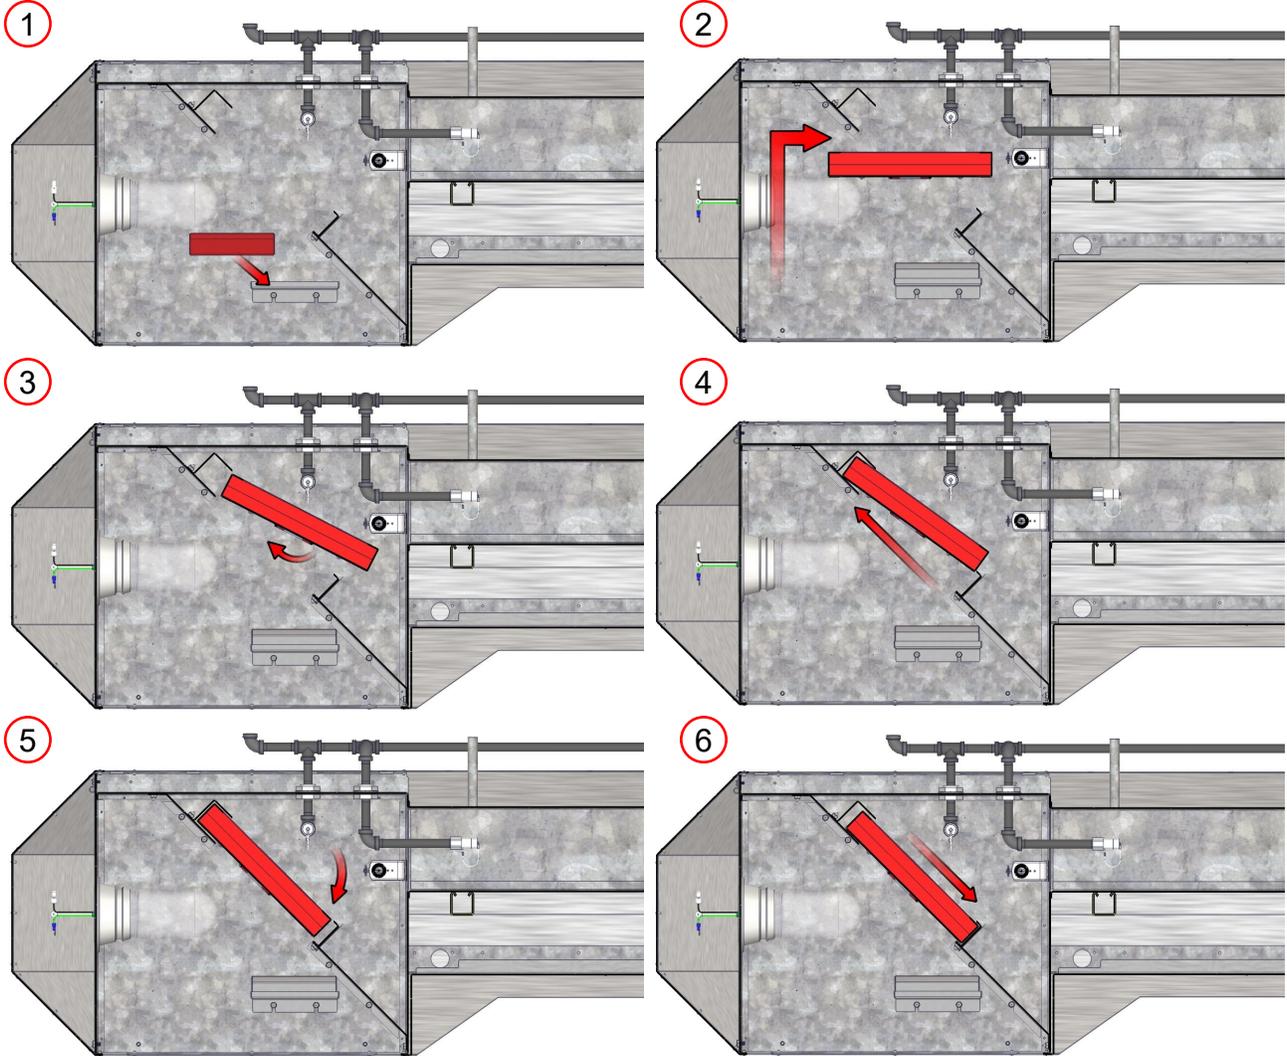


Install Shroud Hanging Brackets

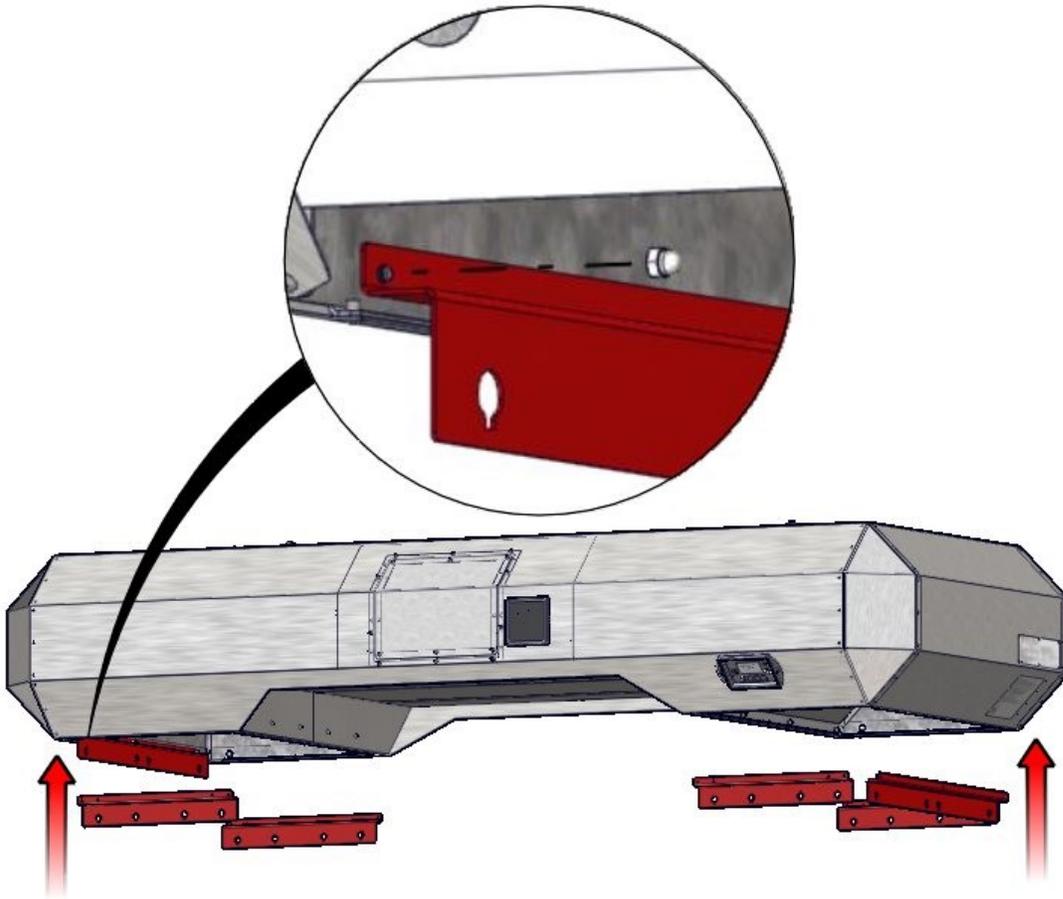



 Parts Removed For Clarity
NOTE

Install Corner Posts


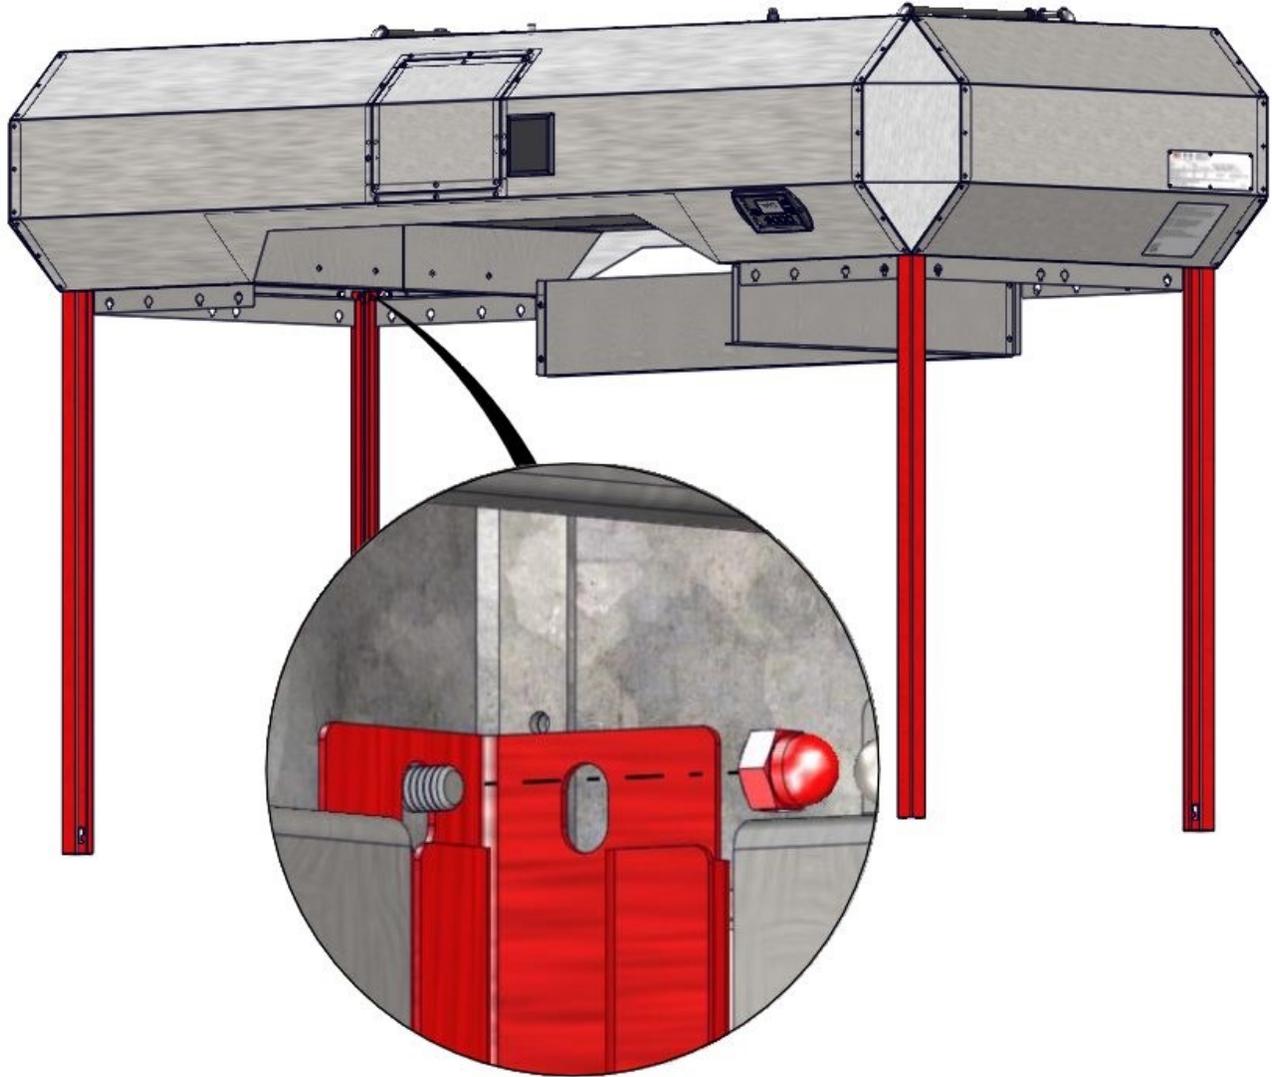


Install Bottom Rails

1

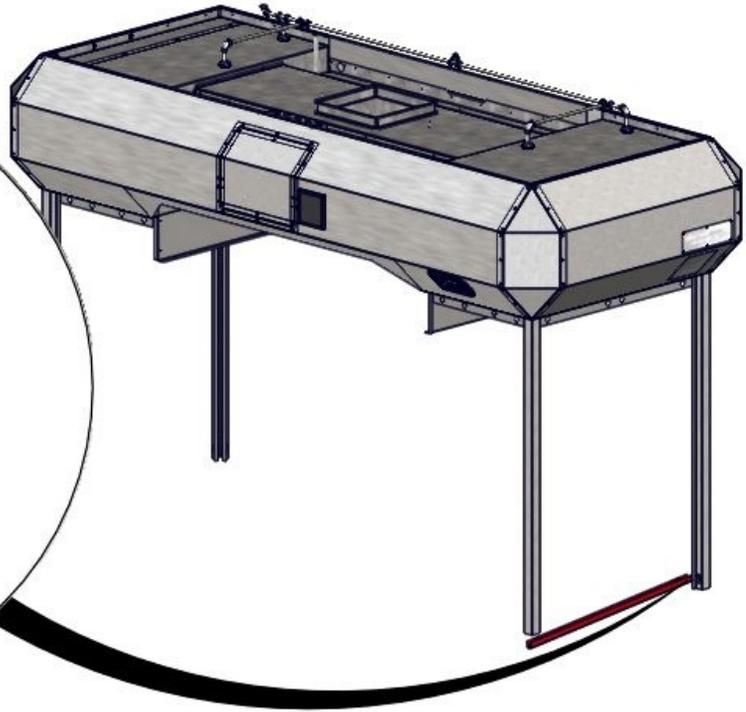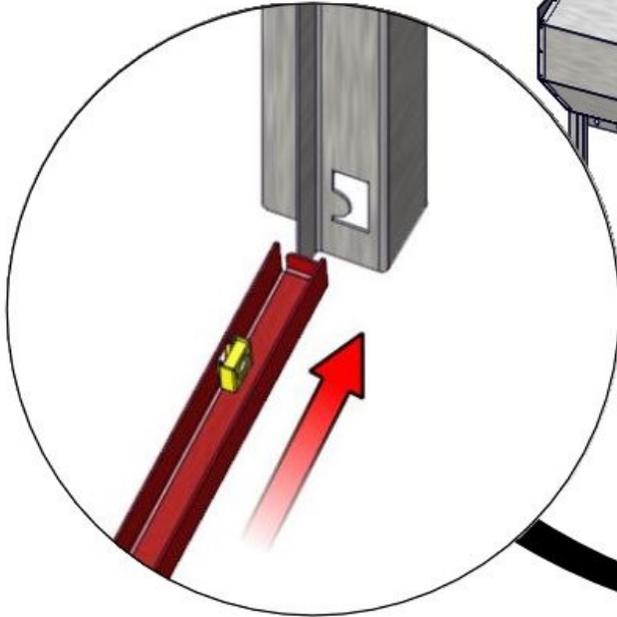


2

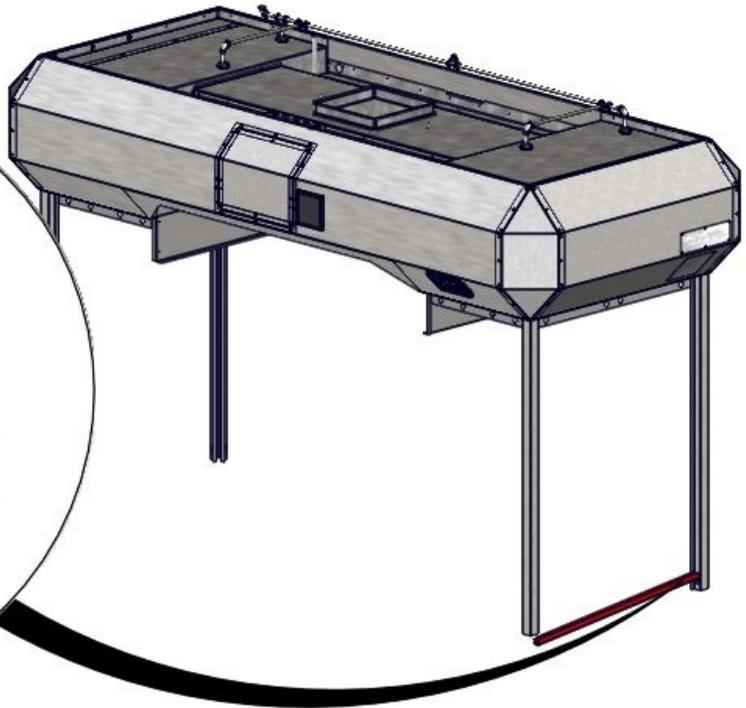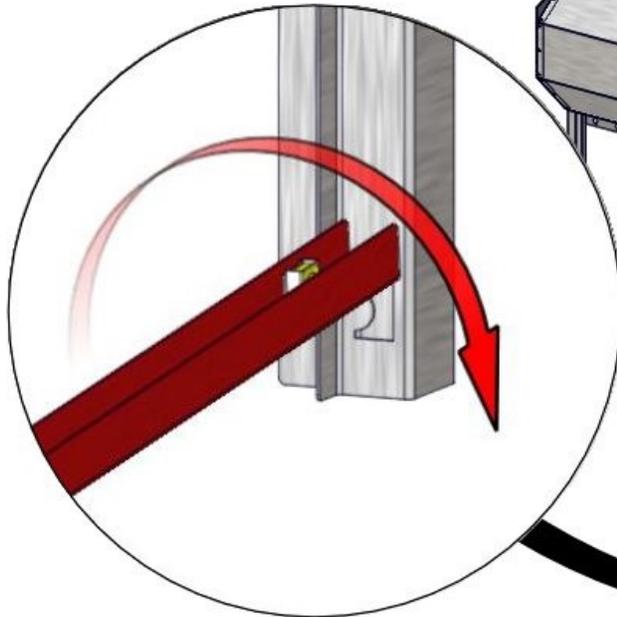

Install Bottom Rails


3

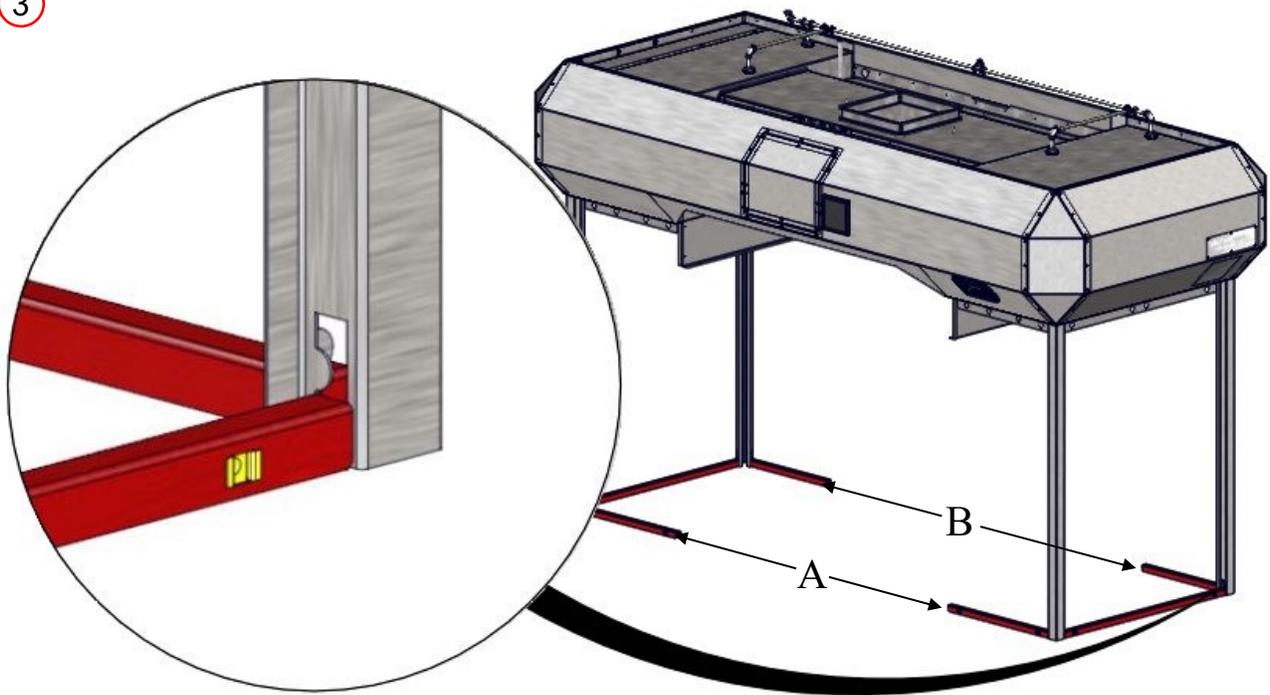

Oven Model	Bottom Rail Widths	
	A	B
1832	32 [813]	41 [1041]
2440	40 [1016]	49 [1245]
3240	40 [1016]	49 [1245]
3255	55 [1397]	64 [1626]
3270	70 [1778]	79 [2007]
3855	55 [1397]	64 [1626]
3870	70 [1778]	79 [2007]

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted.


Install Control Box Upper Closeout

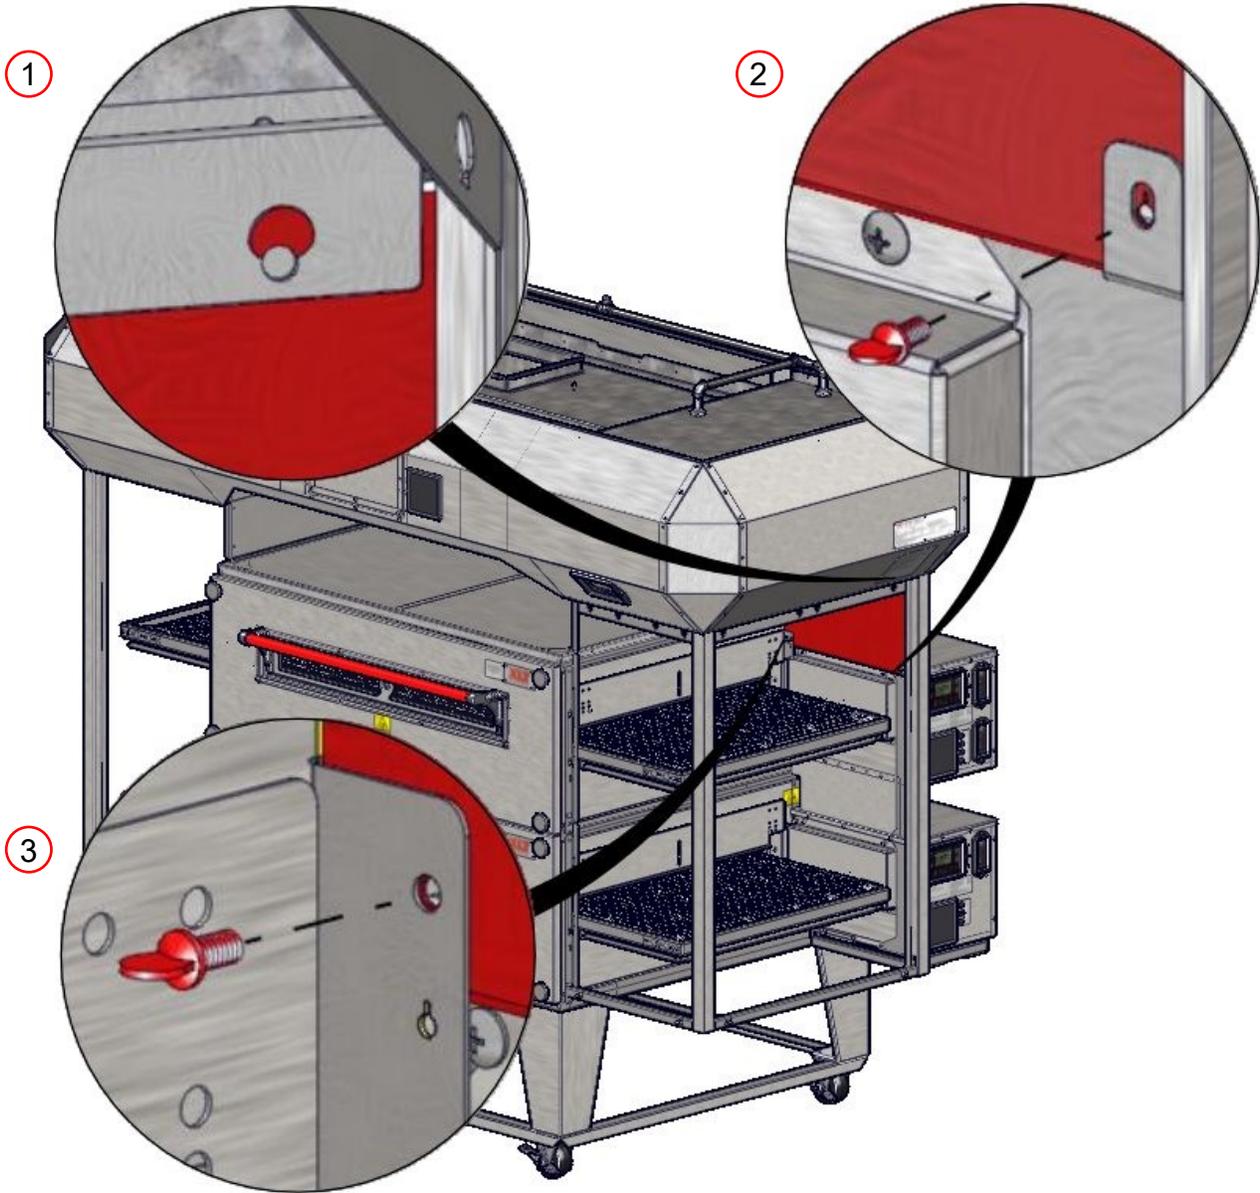


NOTE


If installing a xx70 model, closeouts will be on both ends of the oven.

Install Shroud Panels - Front and Ends

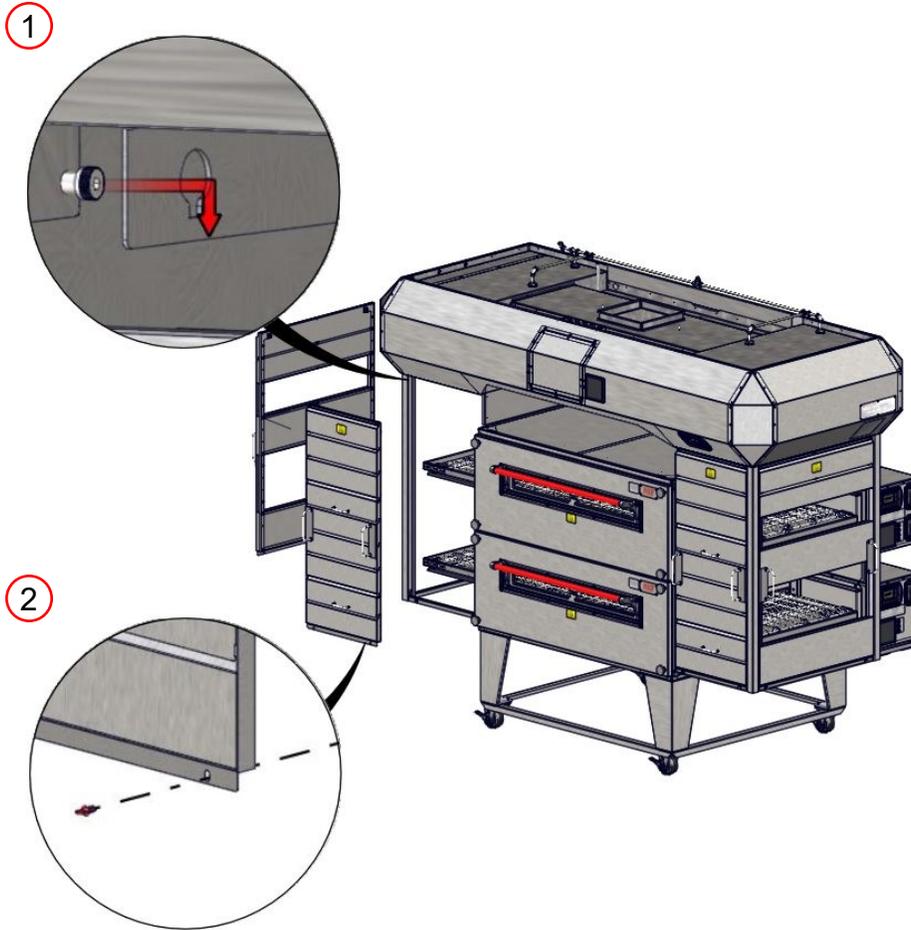

Install Conveyor Shelf

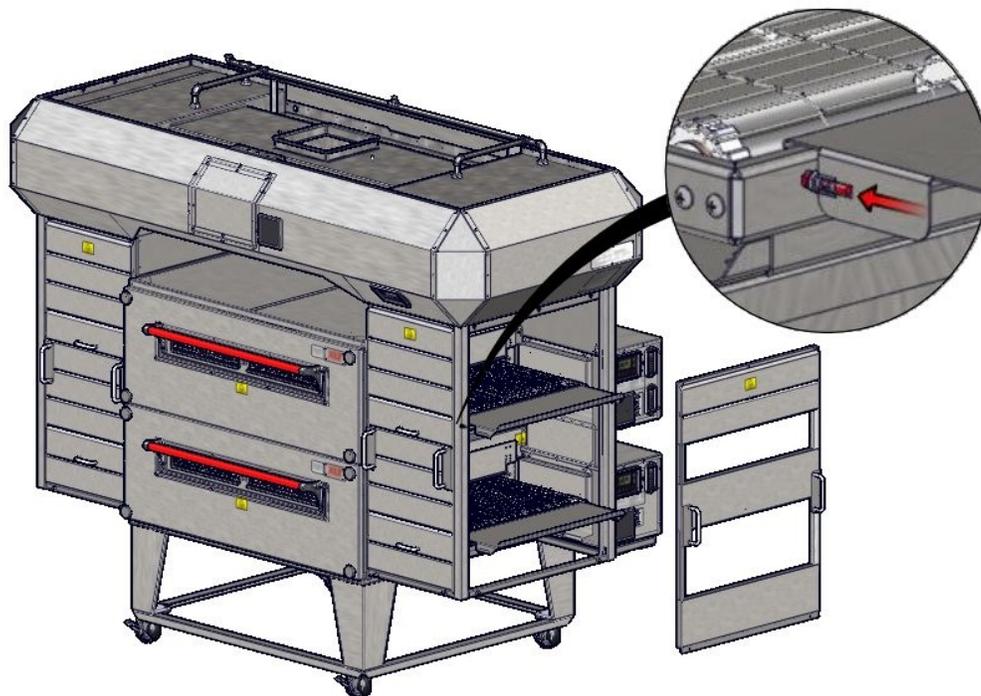


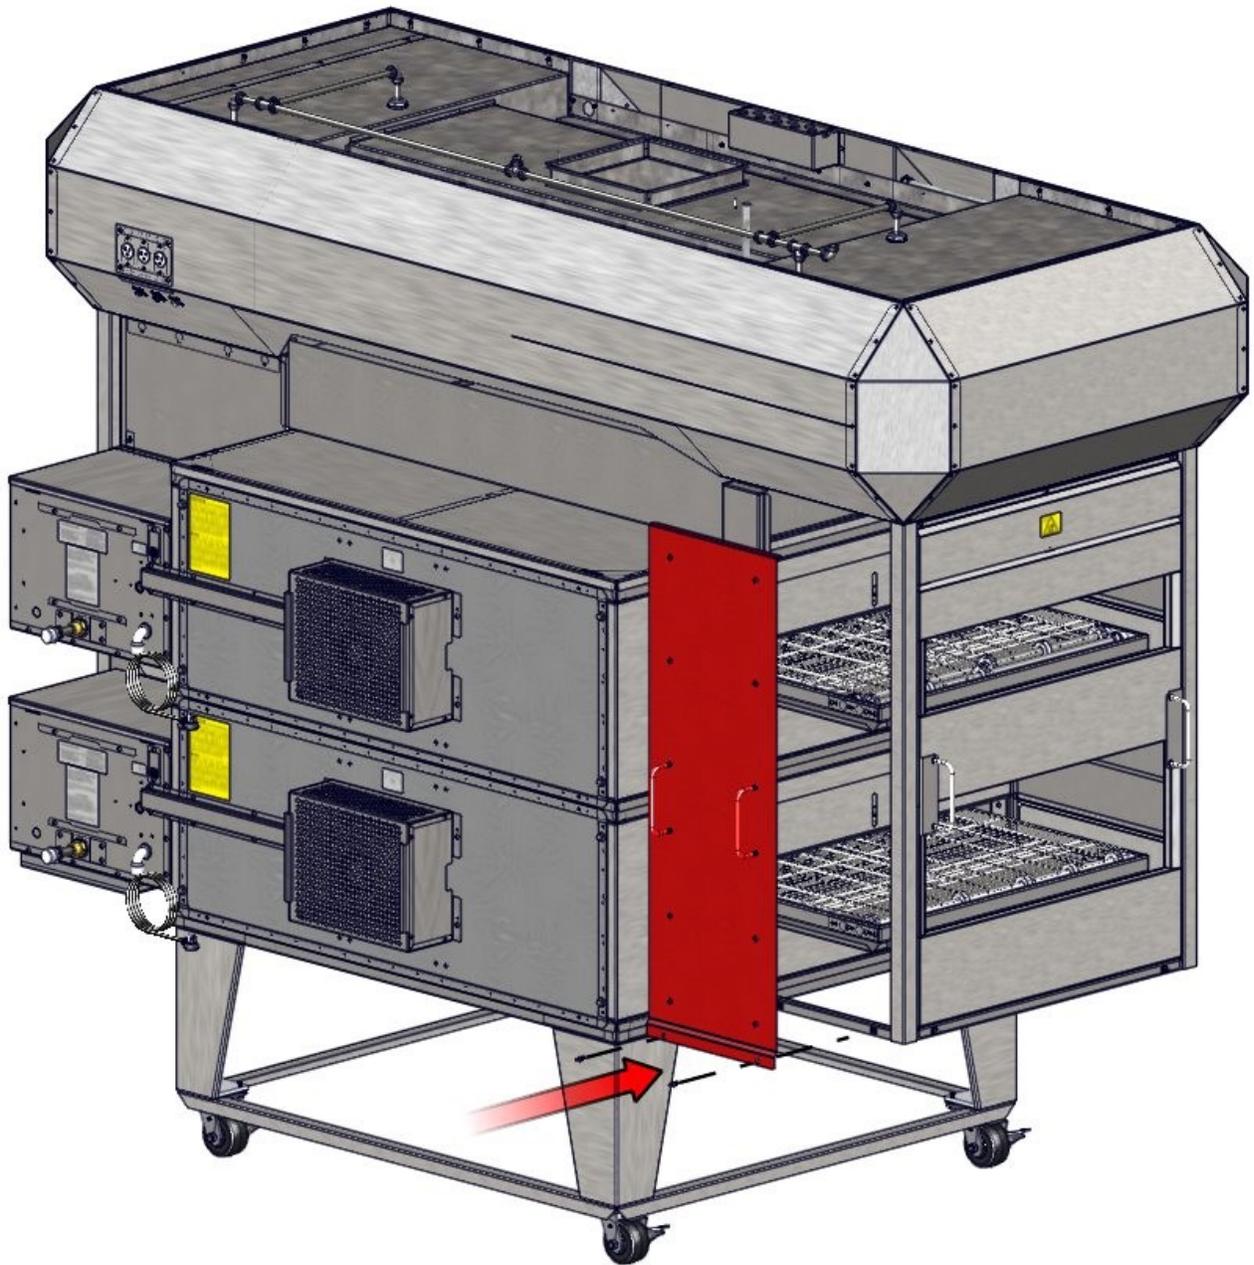

NOTE

If installing an xx70 model, control box closeouts will be on both ends of the oven in place of the back shroud panel.





Install Hood Relocation Cord Assembly

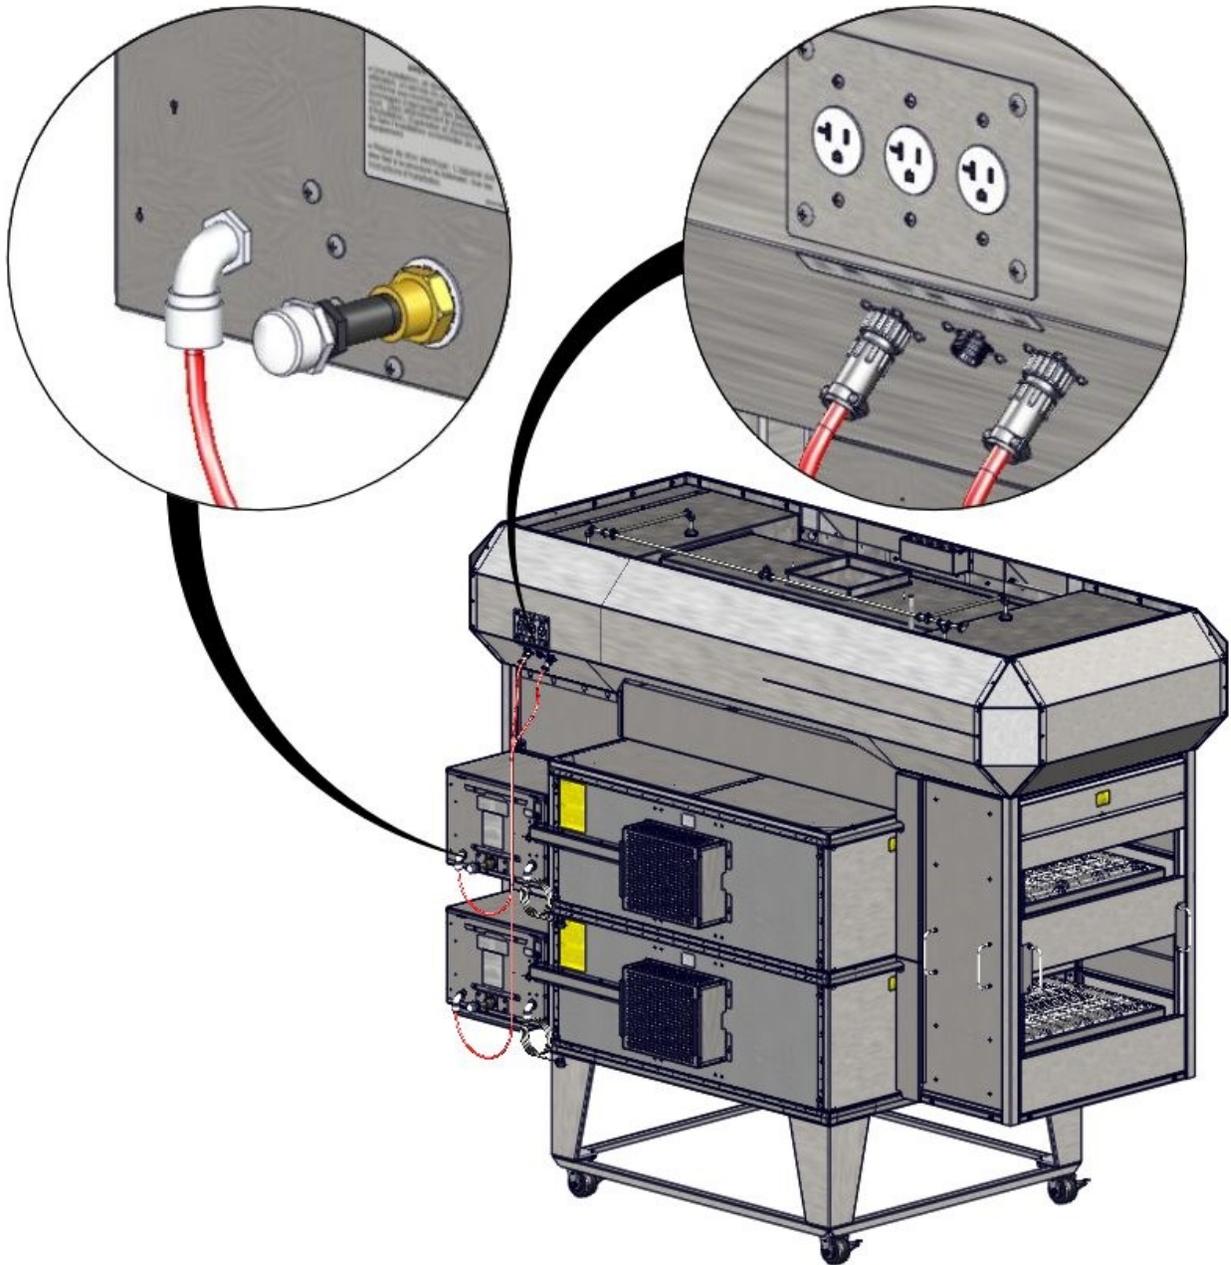

All hoods are outfitted with three (3) switch relocation receptacles, regardless of how many XLT ovens are installed. For a single oven use “Top” location. For a double stack use “Top” location for upper oven and “Bottom” location for lower oven, leaving “Middle” location open.

Insert and lock each oven control cord into the designated location on the bottom of the hood control box.

Connect Hood Relocation Cord Assembly

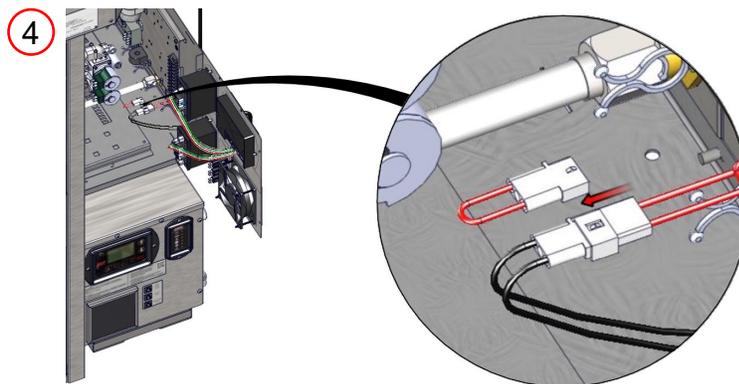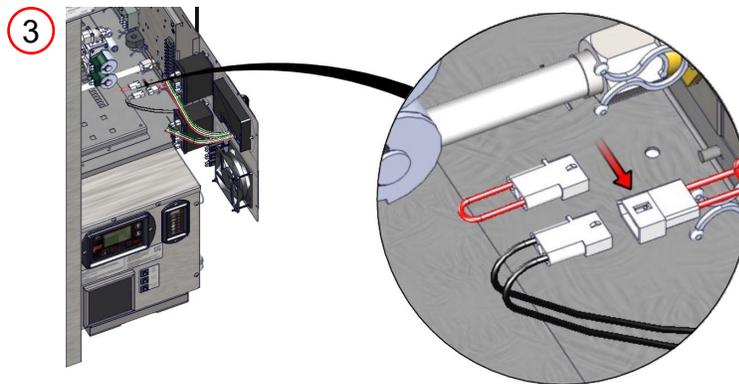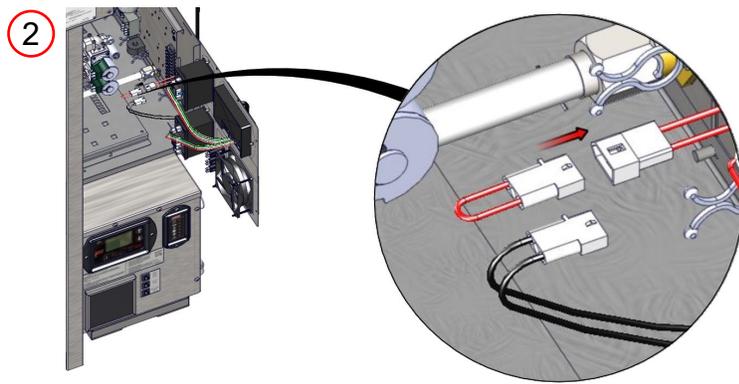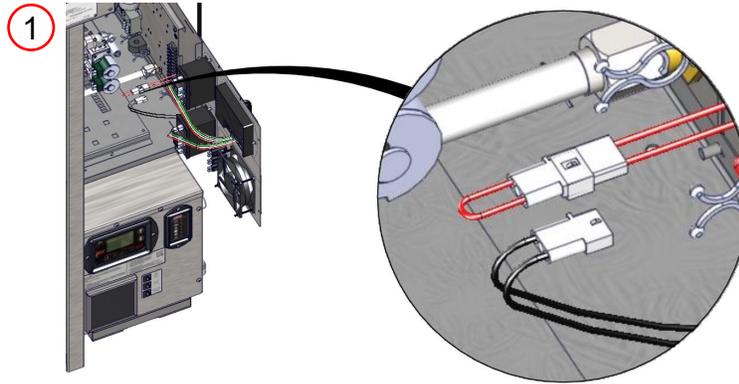

Variable Frequency Drive Adjustments

All XLT hoods are functionally tested at the factory. Operation is verified, and adjustments are made to ensure proper operation. However, field conditions are sometimes different than factory conditions. These variables make it necessary to have an authorized service technician verify operation and make field adjustments if needed. The following items must be checked and verified to meet the specifications and requirements stated in this manual prior to the hood being commissioned:

- Correct fan rotation
- Balanced make-up air

The Initial Start-Up Checklist must be completed at time of installation, signed by the Customer and returned to XLT to initiate Warranty Policy.



The VFD controller is adjusted at the factory to the values displayed in the chart below.

VFD Controller Settings						
	Ovens On			1832 & 2440	3240, 3255 & 3270	3855 & 3870
	Top	Middle	Bottom			
Single	X			20 Hz	25 Hz	30 Hz
Double	X			20 Hz	25 Hz	30 Hz
			X	35 Hz	40 Hz	45 Hz
	X		X	35 Hz	40 Hz	45 Hz
Triple	X			20 Hz	25 Hz	30 Hz
		X		30 Hz	35 Hz	40 Hz
			X	40 Hz	45 Hz	50 Hz
	X	X		30 Hz	35 Hz	40 Hz
	X		X	40 Hz	45 Hz	50 Hz
		X	X	40 Hz	45 Hz	50 Hz
	X	X	X	45 Hz	50 Hz	55 Hz
Fire Suppression				60 Hz DO NOT CHANGE		

If you require either more or less air flow, follow these steps:

1. Press & hold the HOOD LIGHT and XLT LOGO buttons to enter into factory tech mode.
2. Use the Up/Down arrows to reach manual air balance.
3. Press and hold ENTER button for three (3) seconds. Entire row will flash.
4. Scroll to desired oven setting. Press ENTER.
5. +/- should flash and it allows +/- change up to 10 Hz.
6. Press ENTER to save changes.
7. Press ON to test air balance.

Initial Start Up

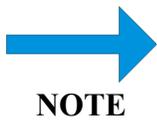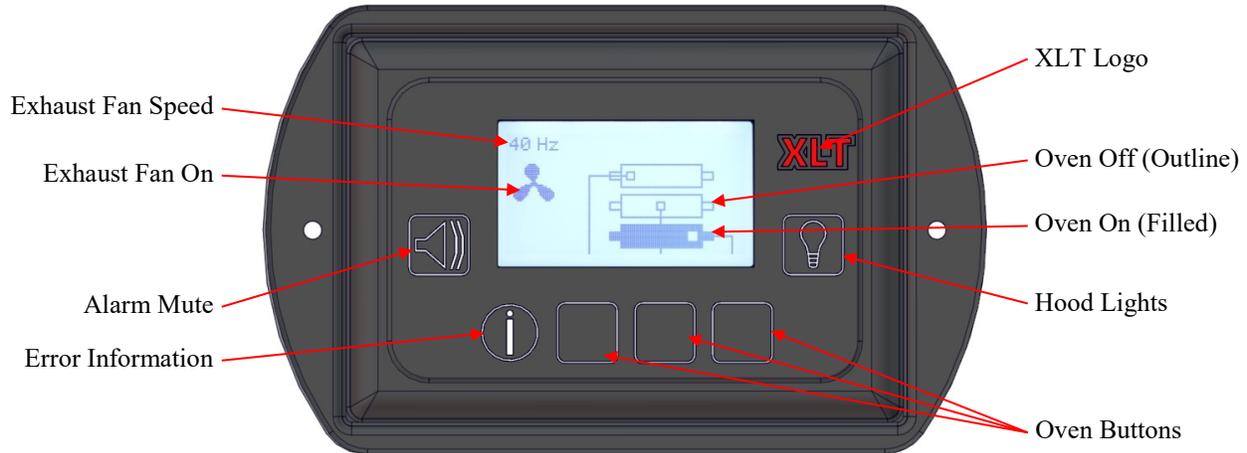


When XLT ovens are outfitted with an XLT hood and the receptacles unplugged from the wall and plugged into the hood., the main switch on the oven is disabled and no longer operates. The Hood User Interface (HUI) on the XLT Hood overrides the oven switch.

Hood Operation


1. Turn the desired oven(s) on by pressing the corresponding oven button. Refer to the Oven start-up section for instructions on how to adjust temperature and conveyor speed. The oven(s), exhaust fan, and make-up air unit will be activated by this switch if the XLT Hood is installed according to this manual.
2. Turn on the lights by pressing the hood lights button on the HUI. (Bulbs not included with hood)
3. When additional ovens are turned on, via the HUI the VFD will automatically increase the exhaust fan speed.
4. When shutting down the ovens, turn the desired oven off by pressing the corresponding button on the HUI. The make-up air unit will shut off. The exhaust fan will shut off after about fifteen (15) minutes and the oven will shut off after about thirty (30) minutes.

Resetting Hood Cooling Fan and Grease Timer

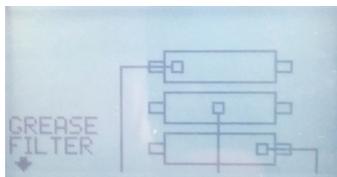

1. The Cooling Fan and Grease Filter reset alarm will show up in the lower left hand side of the Hood User Interface. Press the Error Information button to enter reset screen.
2. To reset the Cooling Fan or Grease Filter press the center capacitive touch button with reset above it to set the time back to zero.
3. The following screen will show for five (5) seconds and then return to the normal operating screen.


The valance kit size is determined by XLT hood size & distance from the finished floor to the installed drop ceiling height. The valance kit screws directly to the XLT hood & does not require any structural support. The plastic coating must be removed from all parts prior to installation.

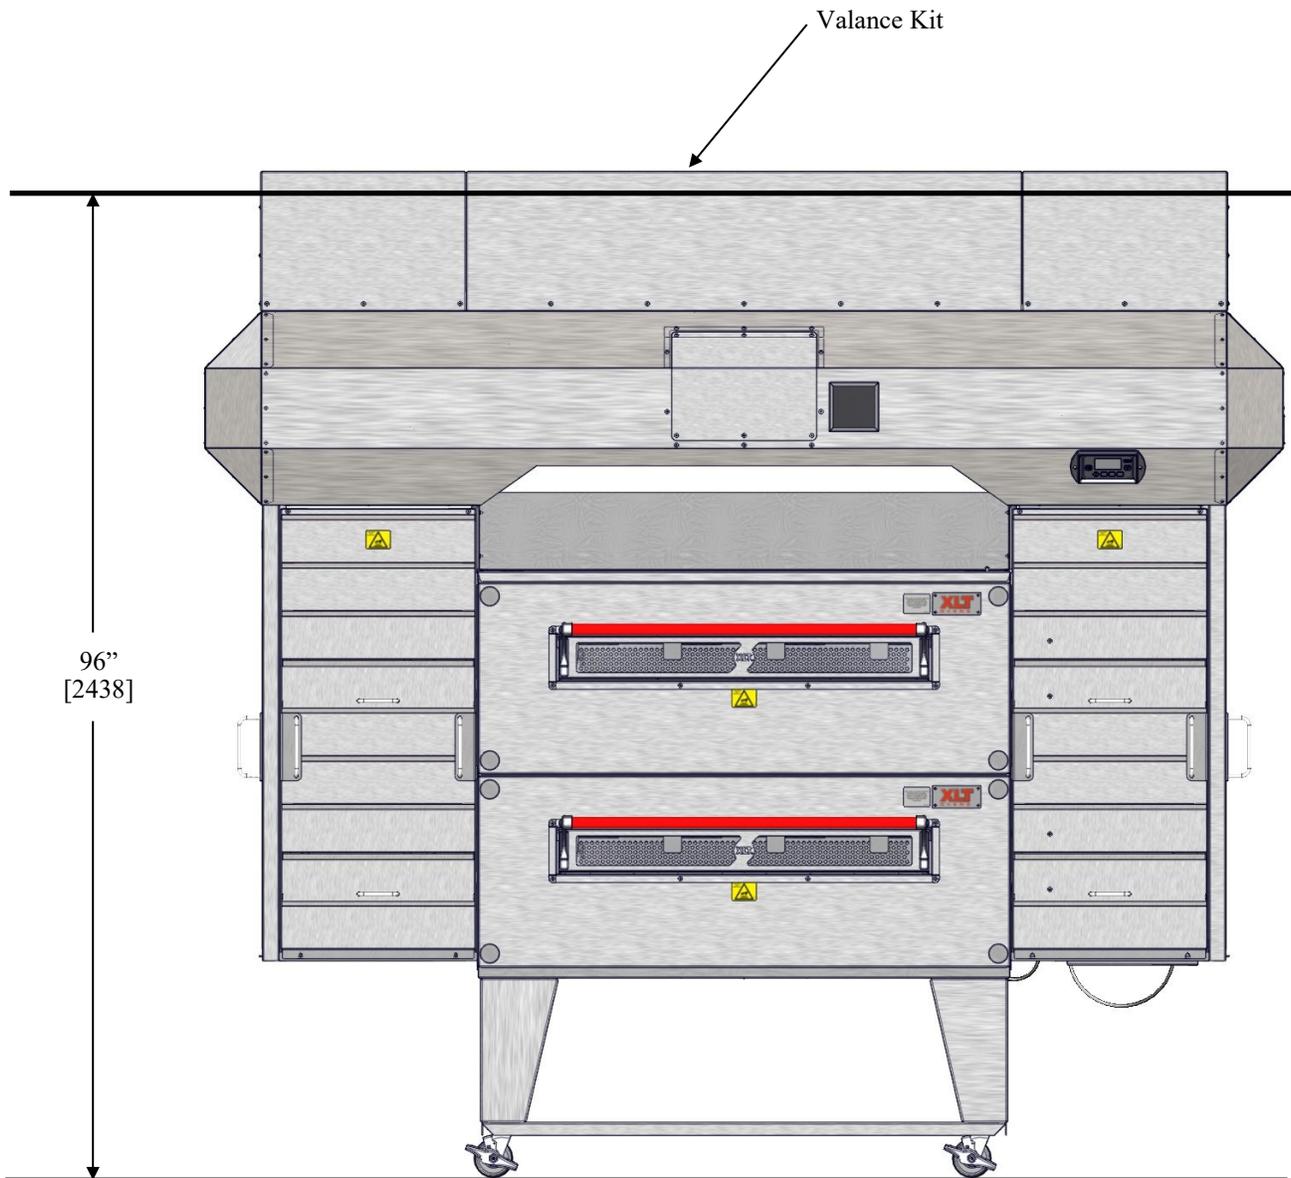


XLT hood valance kits are available for different floor to ceiling heights. Contact XLT or your designated representative for more information.

NOTE: All dimensions in inches [millimeters], $\pm 1/4$ [6], unless otherwise noted.


Install Valance Brackets

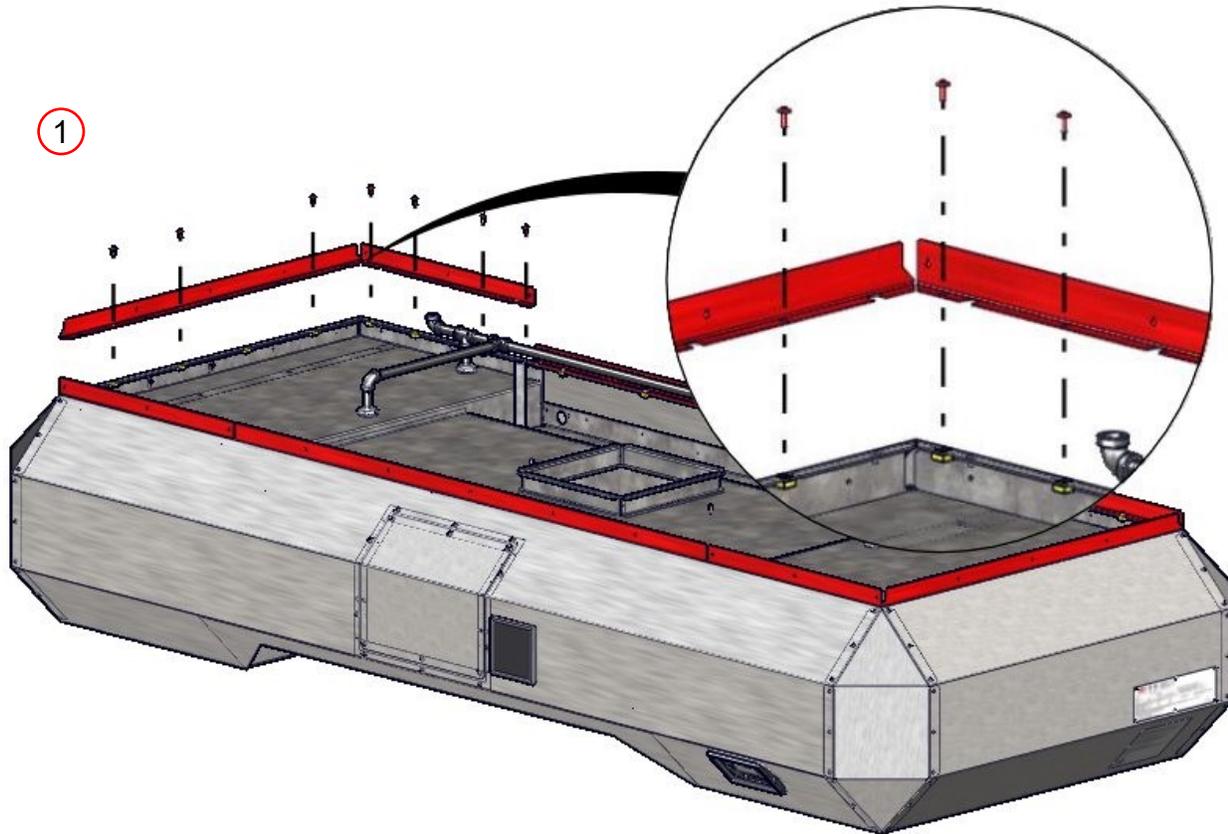


Install Front & Back Panels

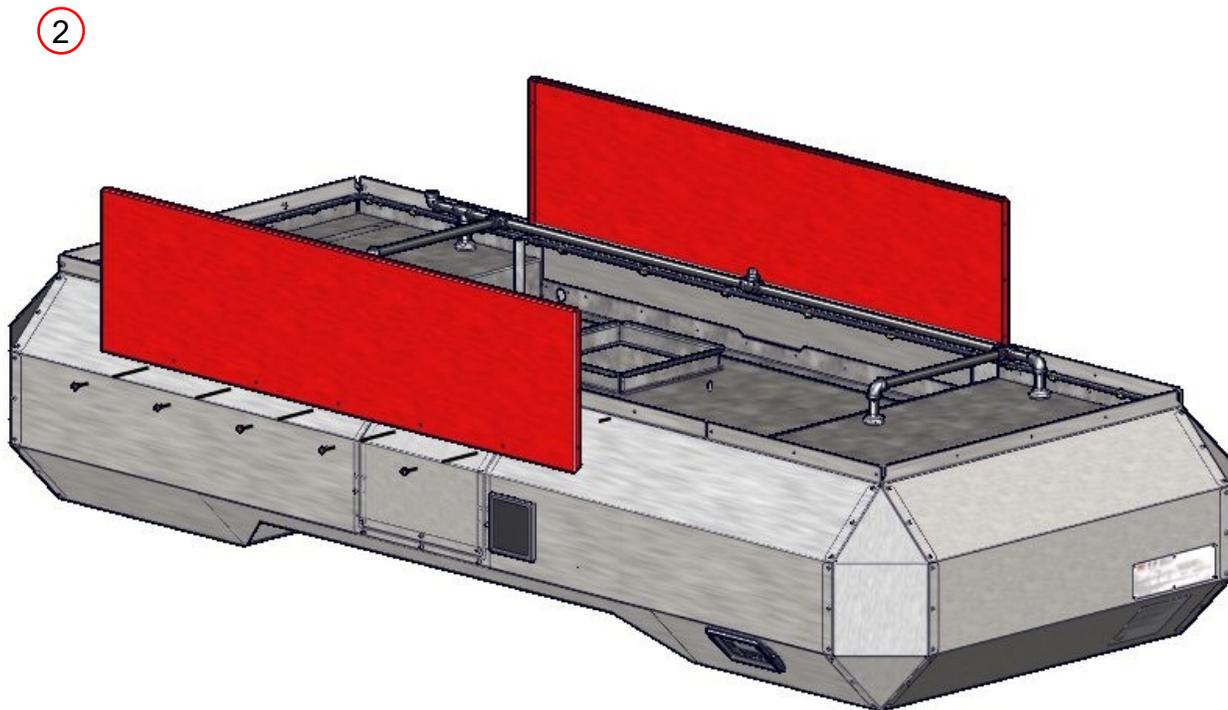


Install Corner Panels

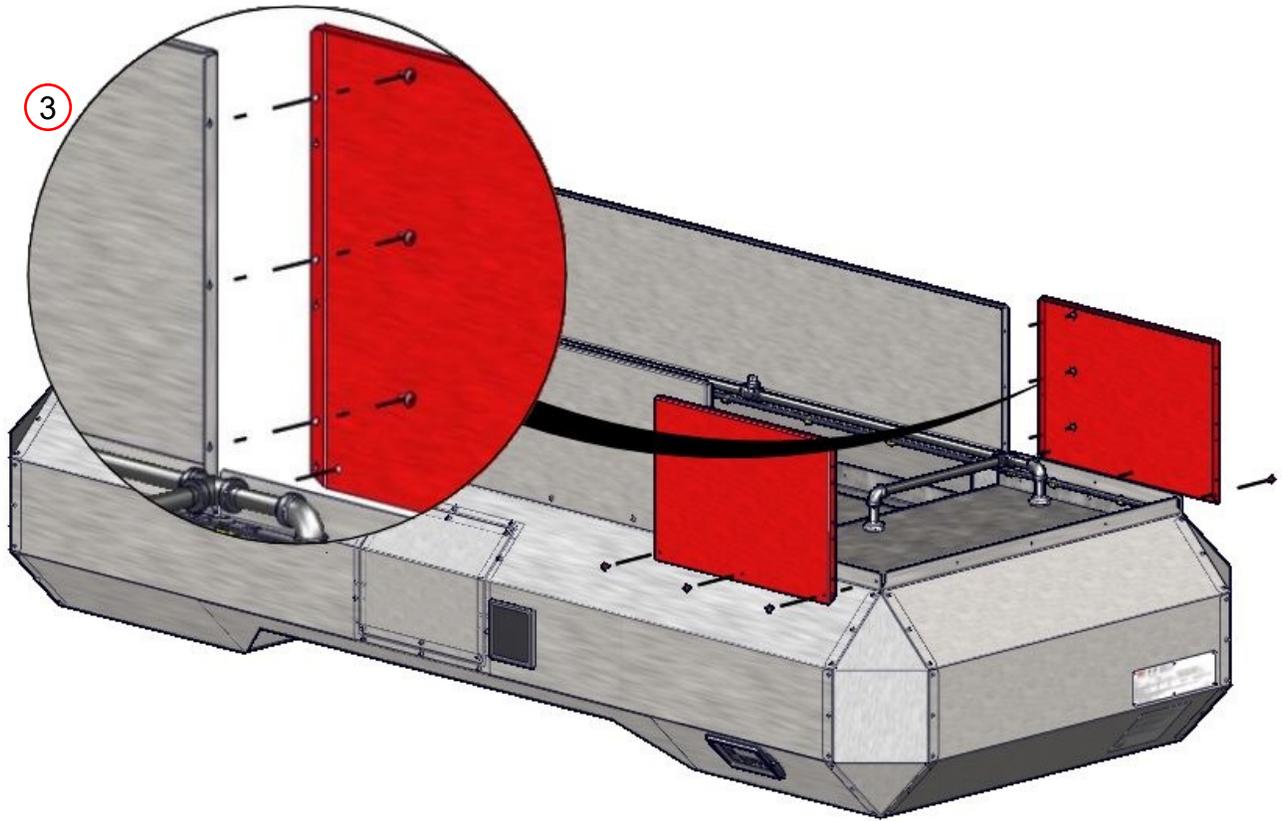


Install End Panels

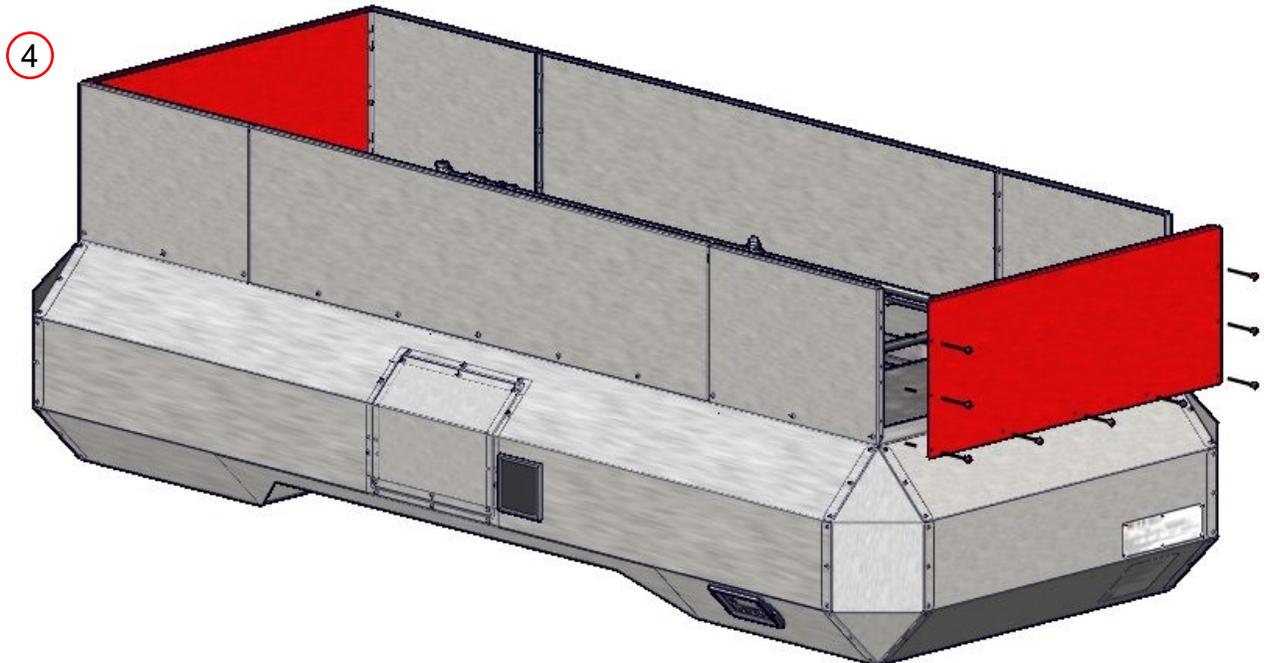

**Optional Hood Duct Wrap
Install Duct Wrap Brackets**

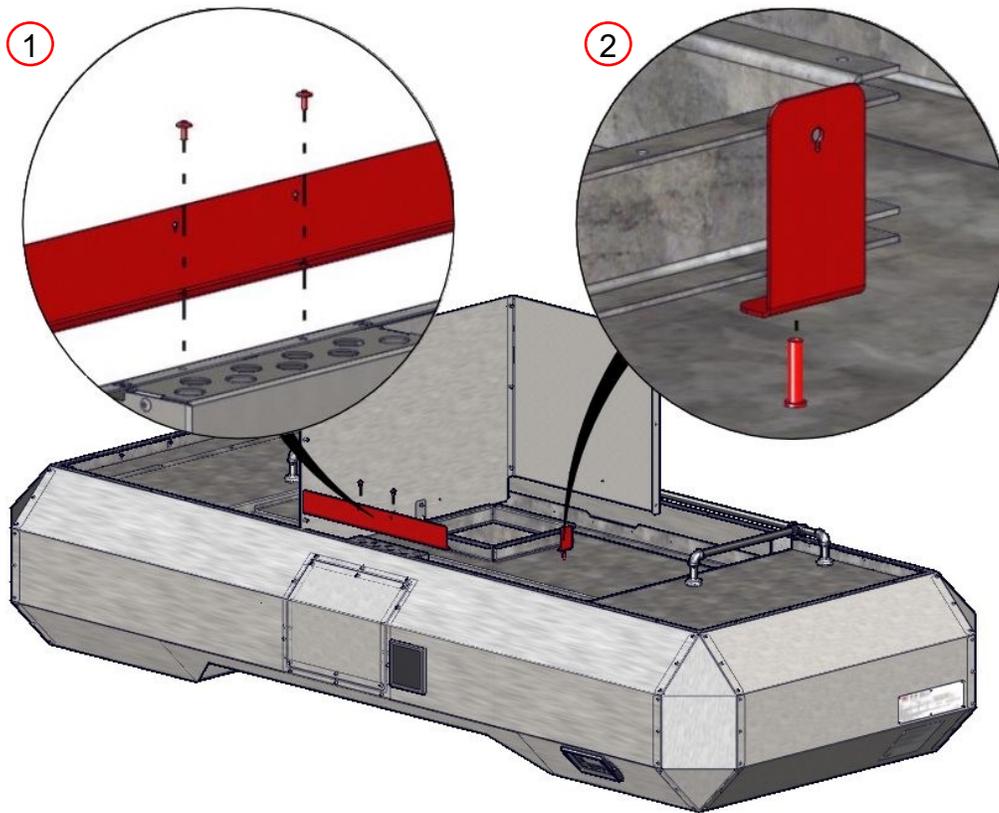

Install Duct Wrap Panels

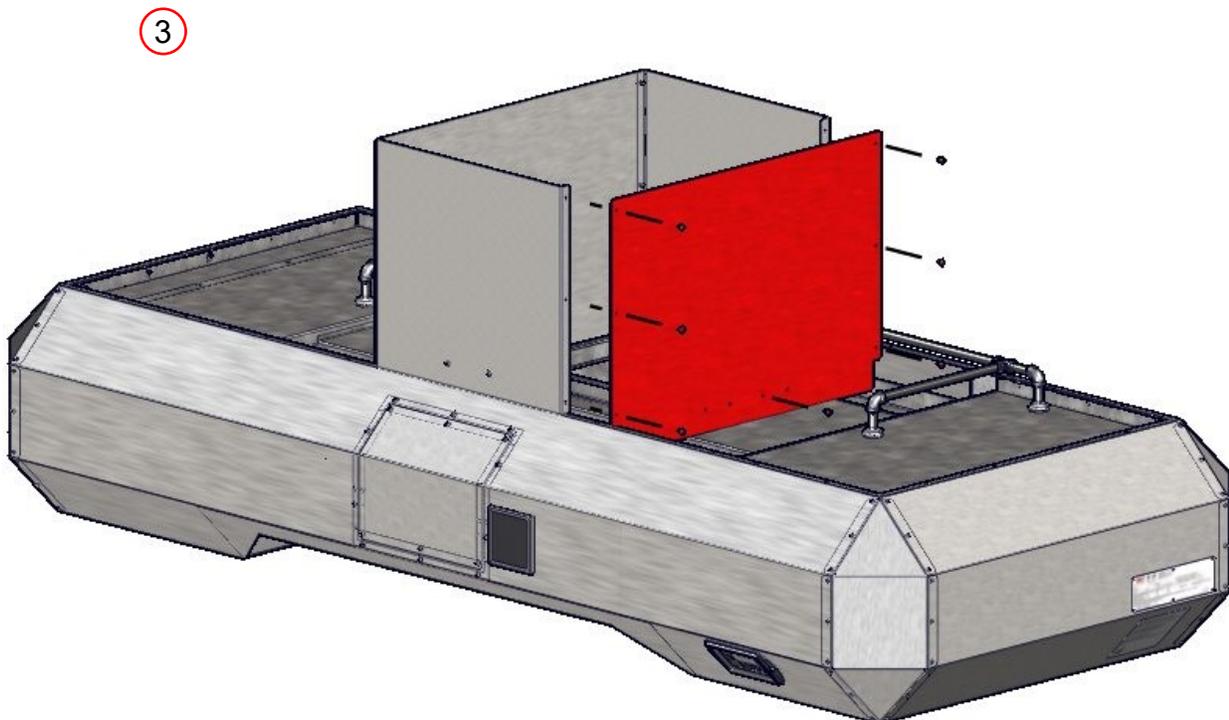

As with any appliance, periodic maintenance is required. Many factors affect this schedule such as product mix and hours of usage. An example schedule is included.

Your XLT hood is constructed of stainless and aluminized steel. Check application restrictions on product label prior to usage. Observe recommended precautionary and safety measures as dictated by the product manufacturer.

Do not use abrasive or caustic cleaners. Abrasive pads will scratch stainless steel surfaces. Areas with heavy buildup should be sprayed and allowed to soak for up to five (5) minutes prior to wiping clean. Always wipe with the “grain” of the surface to maintain appearance.

Hood Cleaning & Maintenance Schedule						
		Daily	Weekly	Monthly	Semi-Annual	As Required
Cleaning						
	Wipe down Front, Sides, & Top	<input type="checkbox"/>				
	Clean Light Globes	<input type="checkbox"/>				
	Empty & Clean Grease Trays	<input type="checkbox"/>				<input type="checkbox"/>
	Clean Fan Filter	<input type="checkbox"/>				
	Clean Grease Filters		<input type="checkbox"/>			<input type="checkbox"/>
	Clean Duct and Exhaust Fan			<input type="checkbox"/>		<input type="checkbox"/>
Inspection						
	Check Grease Trays	<input type="checkbox"/>				
	Check Grease Filters		<input type="checkbox"/>			
Replace						
	Fan Filter					<input type="checkbox"/>
	Light Bulbs					<input type="checkbox"/>

Schedule provided as a guide only. Frequency of cleaning may vary as needed.



DANGER

Oven must be cool and all power to the oven and hood turned off before any cleaning is done.



CAUTION

Shroud Panels can weigh up to 38 lbs [18 kg]. Use caution when lifting.




CAUTION

DO NOT spray liquid cleaning agents in the slots & holes of the following locations: Hood electrical box (located on front of upper portion), User Interface (Located on front lower right corner)

Refer to the Hood Installation Section for disassembly and reassembly.

This page is intentionally left blank.

104 OVEN SCHEMATIC - STANDARD 1 BOX 120 VAC LH

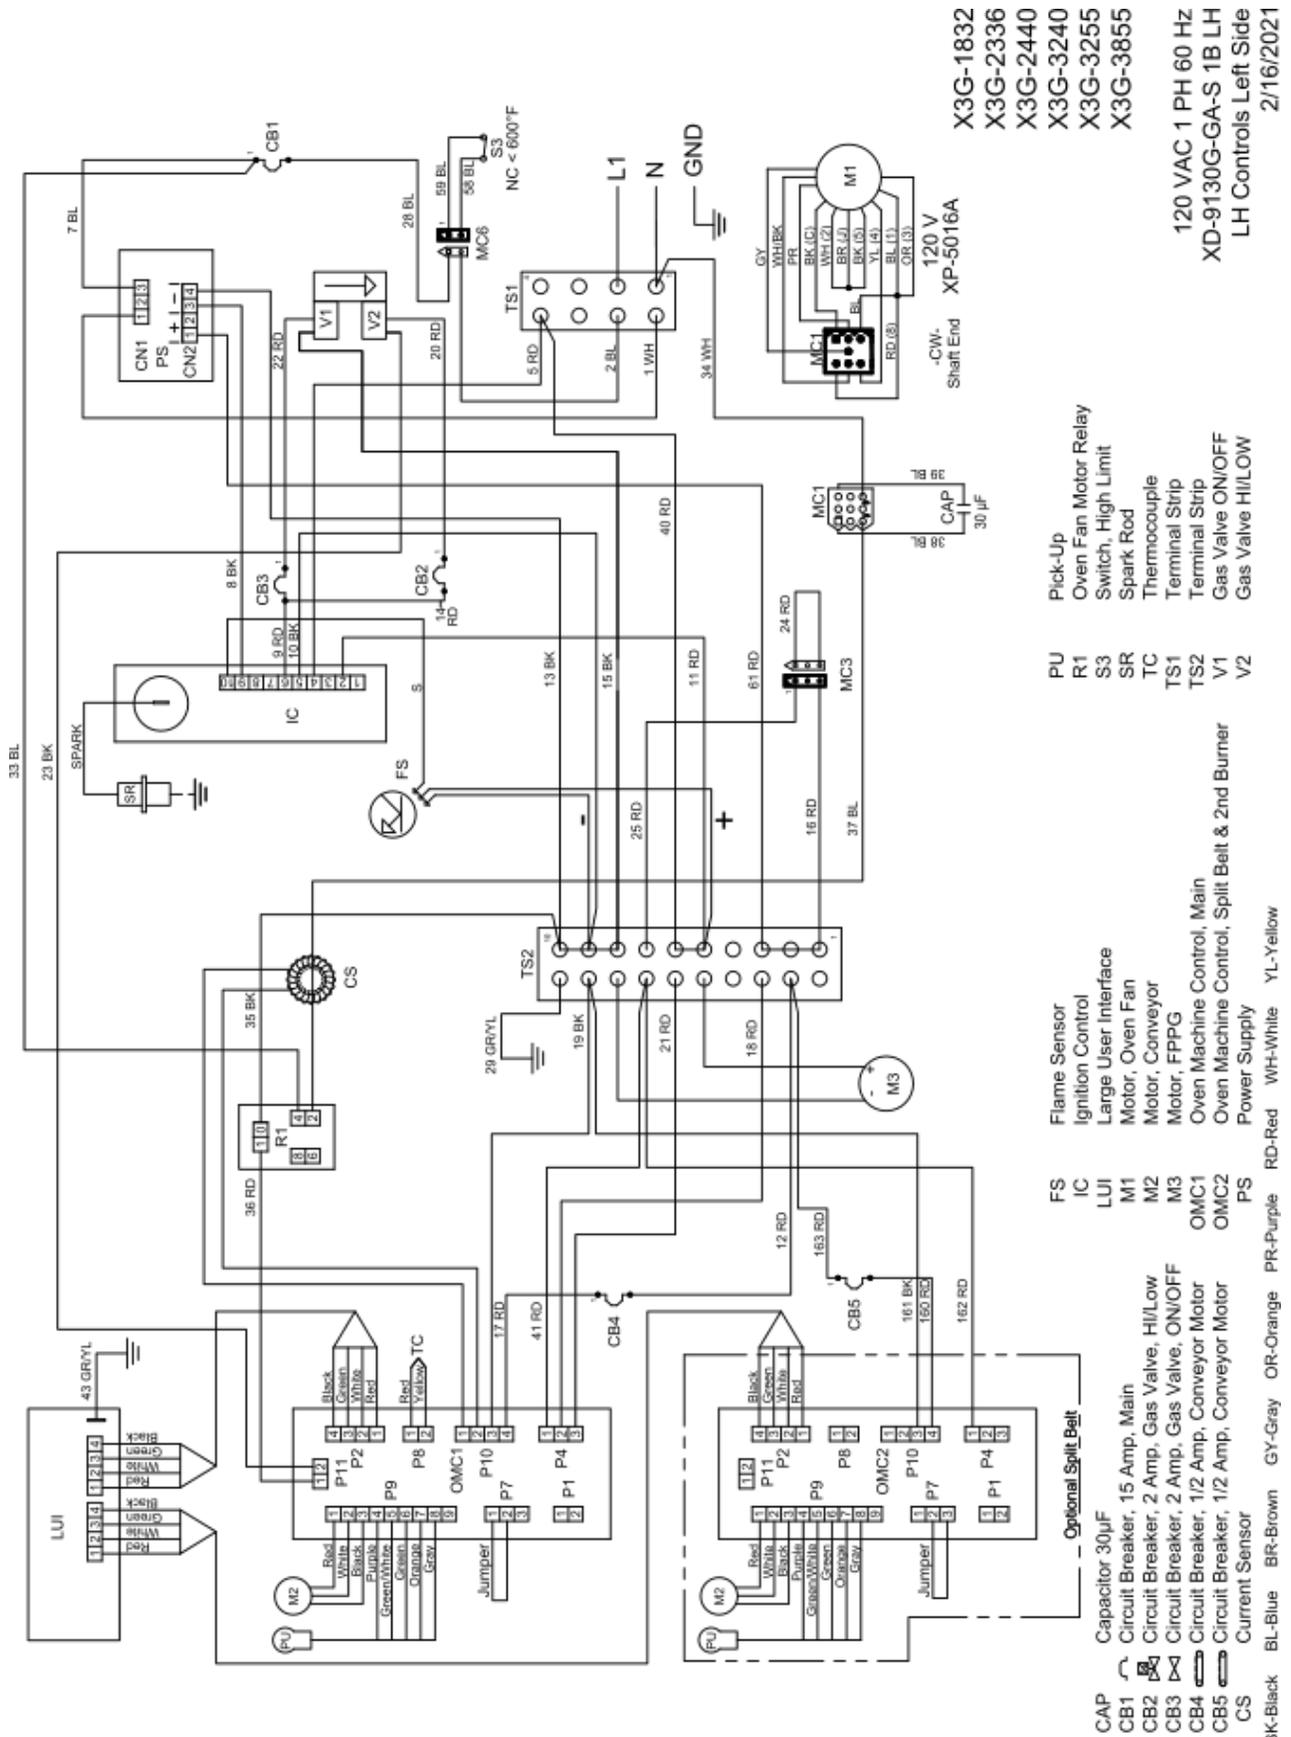

- X3G-1832
- X3G-2336
- X3G-2440
- X3G-3240
- X3G-3255
- X3G-3855

120 VAC 1 PH 60 Hz
 XD-9130G-GA-S 1B LH
 LH Controls Left Side
 2/16/2021


- PU Pick-Up
- R1 Oven Fan Motor Relay
- S3 Switch, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW

- FS Flame Sensor
- IC Ignition Control
- LUI Large User Interface
- M1 Motor, Oven Fan
- M2 Motor, Conveyor
- M3 Motor, FPPG
- OMC1 Oven Machine Control, Main
- OMC2 Oven Machine Control, Split Belt & 2nd Burner
- PS Power Supply
- RD-Red
- WH-White
- YL-Yellow

- Capacitor 30µF
- Circuit Breaker, 15 Amp, Main
- Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- Circuit Breaker, 1/2 Amp, Conveyor Motor
- Circuit Breaker, 1/2 Amp, Conveyor Motor
- Current Sensor
- CS Current Sensor
- GY-Gray
- OR-Orange
- PR-Purple




OVEN SCHEMATIC - STANDARD 1 BOX 120 VAC RH 105

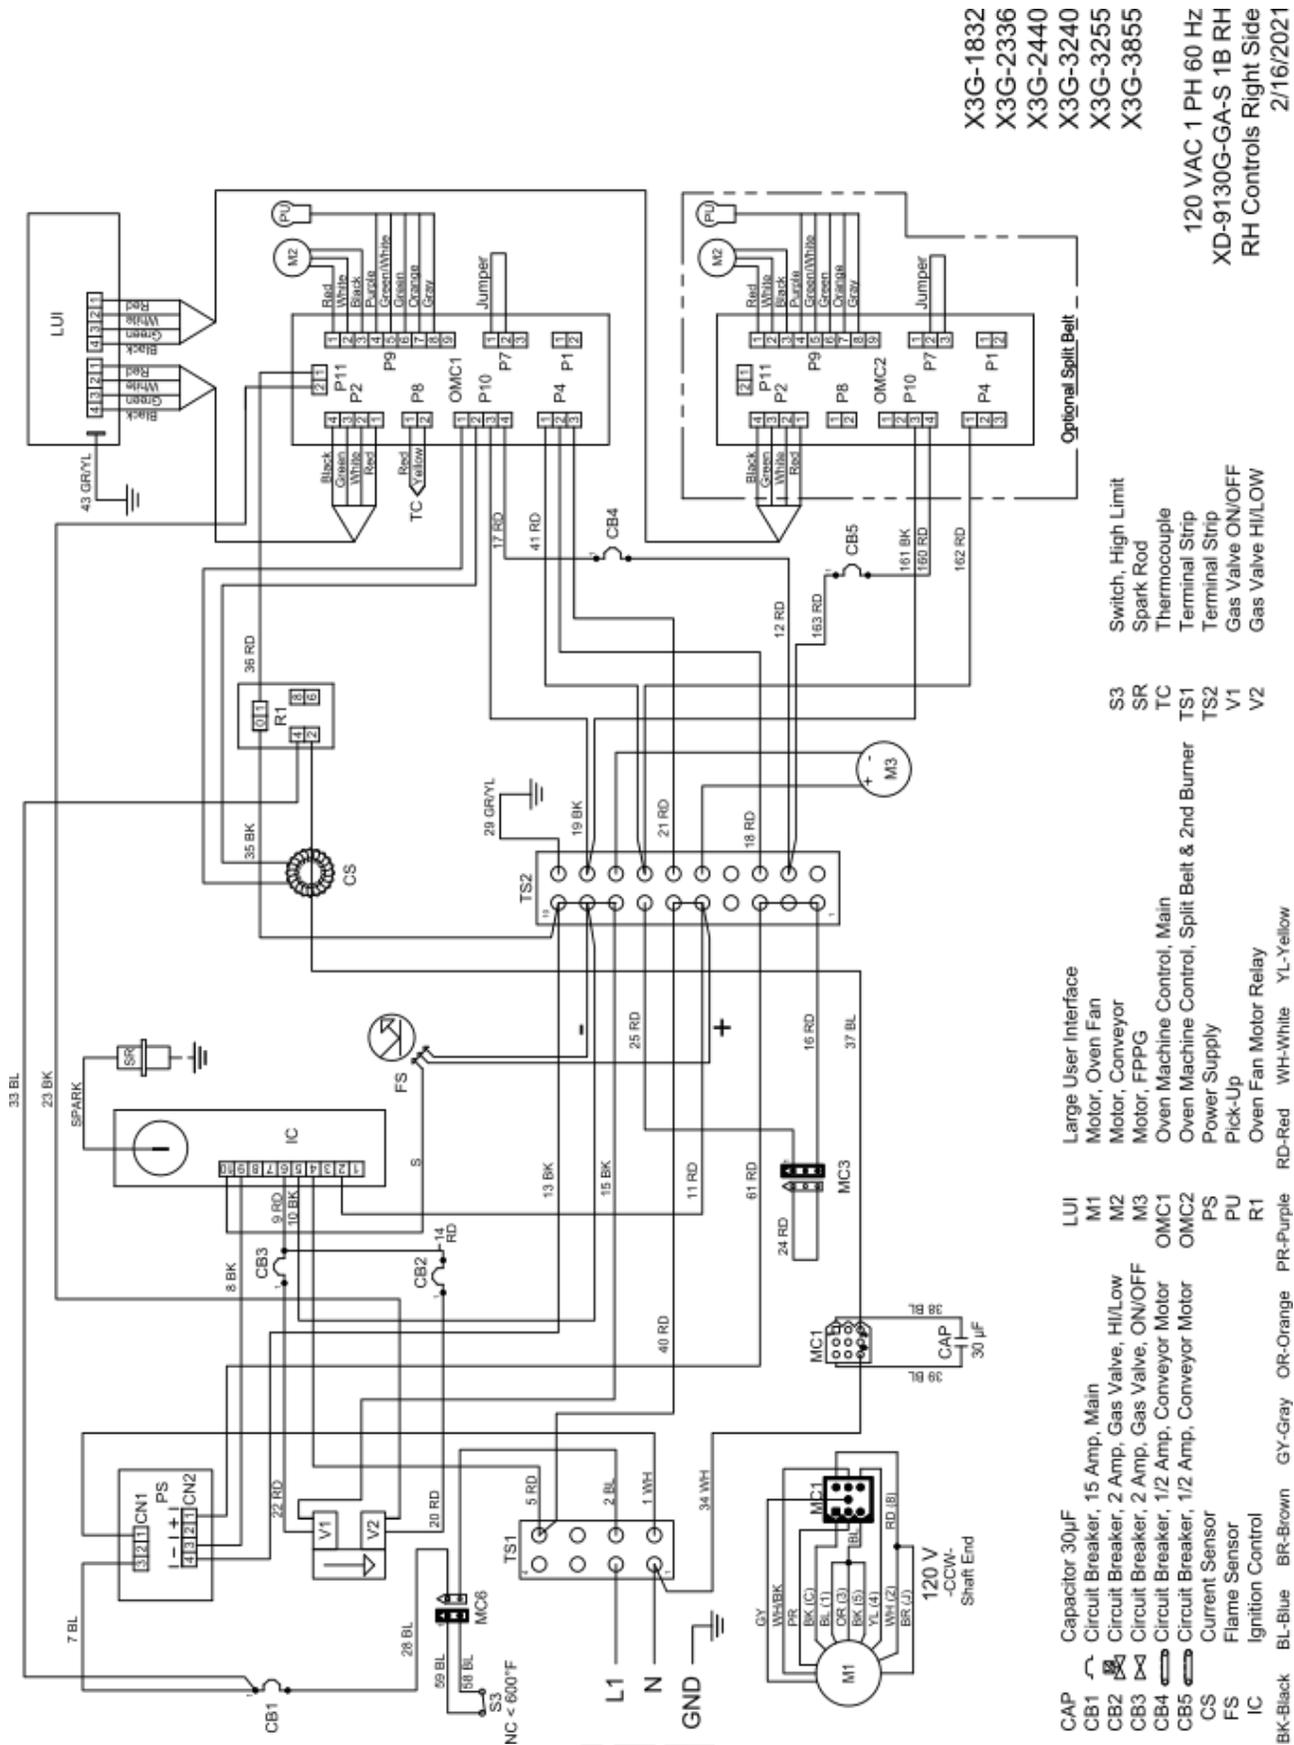

Technical Support US: 888-443-2751



Technical Support INTL: 316-943-2751

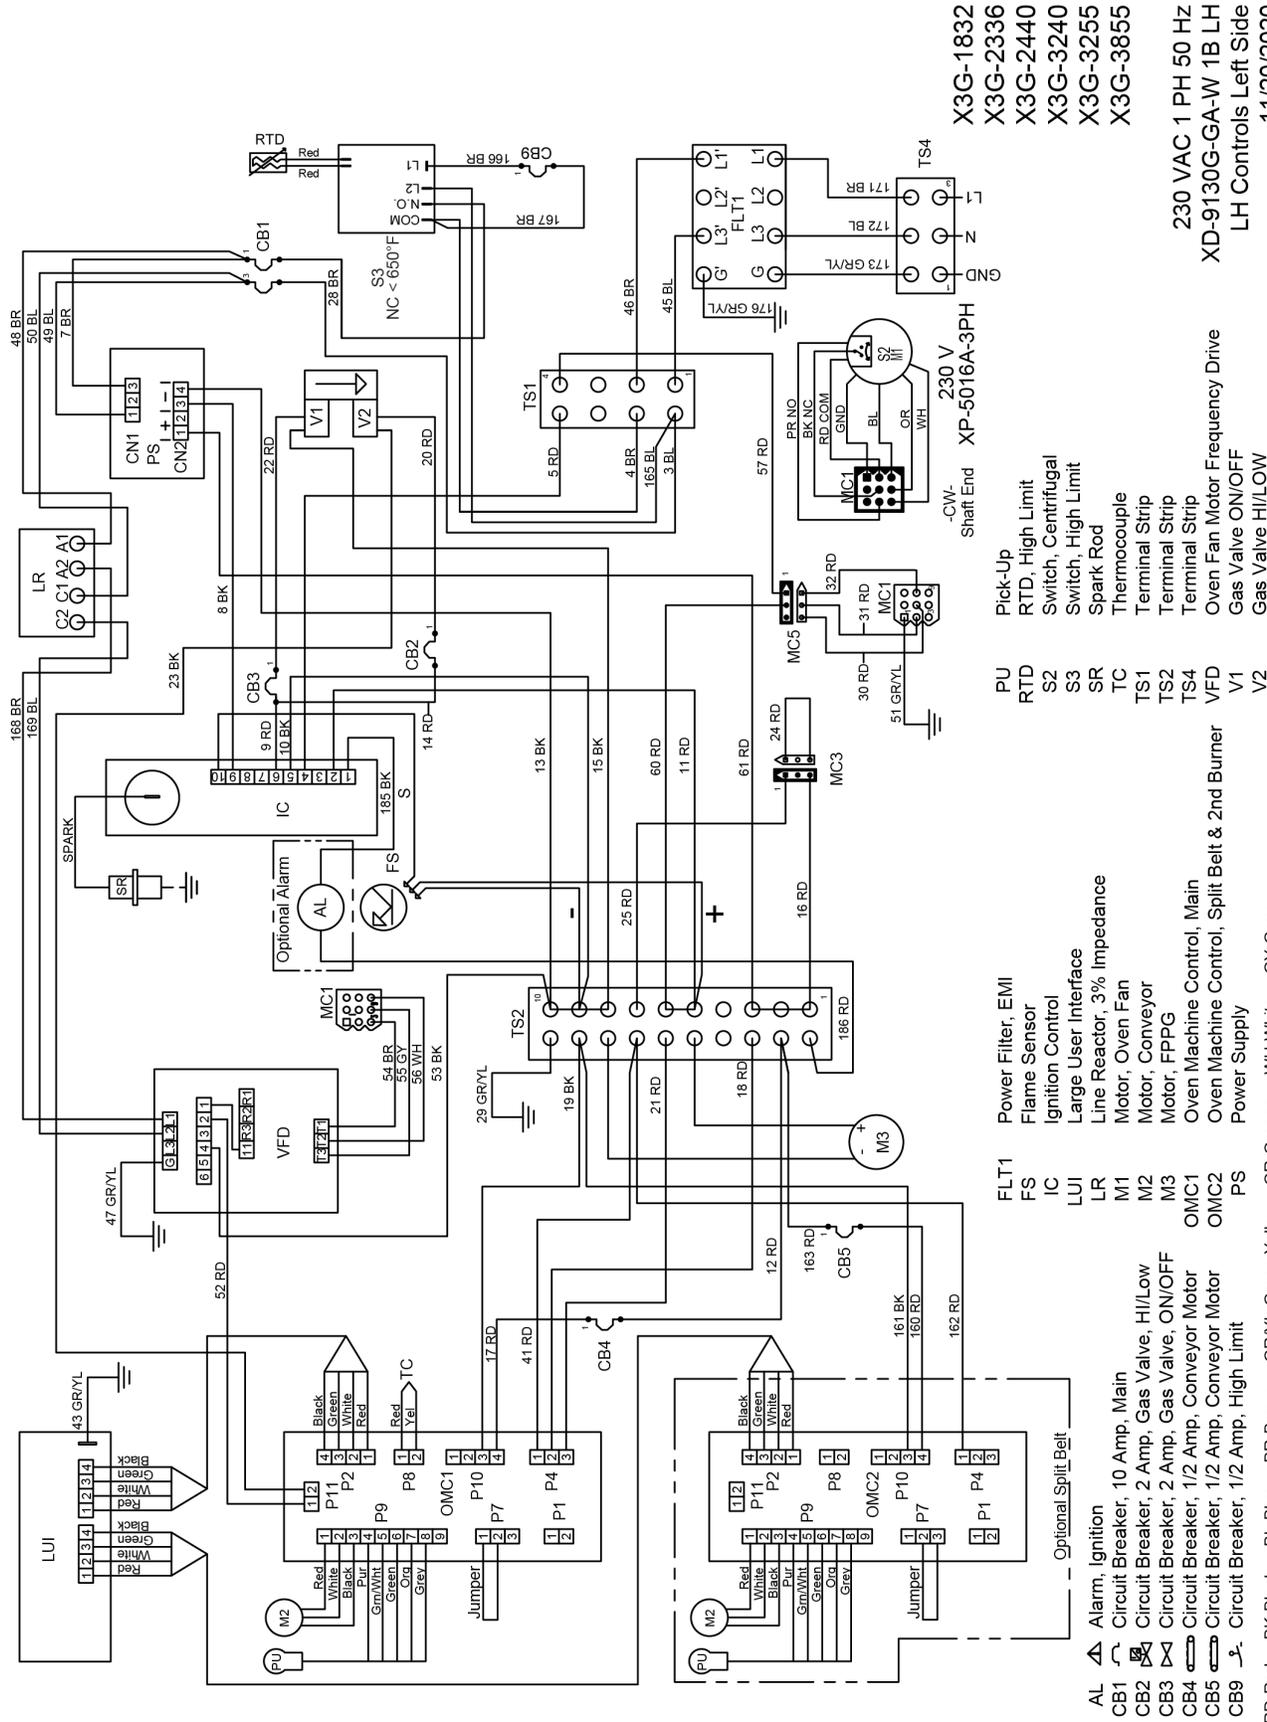

- X3G-1832
- X3G-2336
- X3G-2440
- X3G-3240
- X3G-3255
- X3G-3855


230 VAC 1 PH 50 Hz
 XD-9130G-GA-W 1B LH
 LH Controls Left Side
 11/20/2020

- PU Pick-Up
- RTD RTD, High Limit
- S2 Switch, Centrifugal
- S3 Switch, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- TS4 Terminal Strip
- VFD Oven Fan Motor Frequency Drive
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW

- FLT1 Power Filter, EMI
- FS Flame Sensor
- IC Ignition Control
- LUI Large User Interface
- LR Line Reactor, 3% Impedance
- M1 Motor, Oven Fan
- M2 Motor, Conveyor
- M3 Motor, FPPG
- OMC1 Oven Machine Control, Main
- OMC2 Oven Machine Control, Split Belt & 2nd Burner
- PS Power Supply

- AL Alarm, Ignition
- CB1 Circuit Breaker, 10 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB9 Circuit Breaker, 1/2 Amp, High Limit
- RD-Red BK-Black BL-Blue BR-Brown GRYL-Green Yellow OR-Orange WH-White GY-Gray



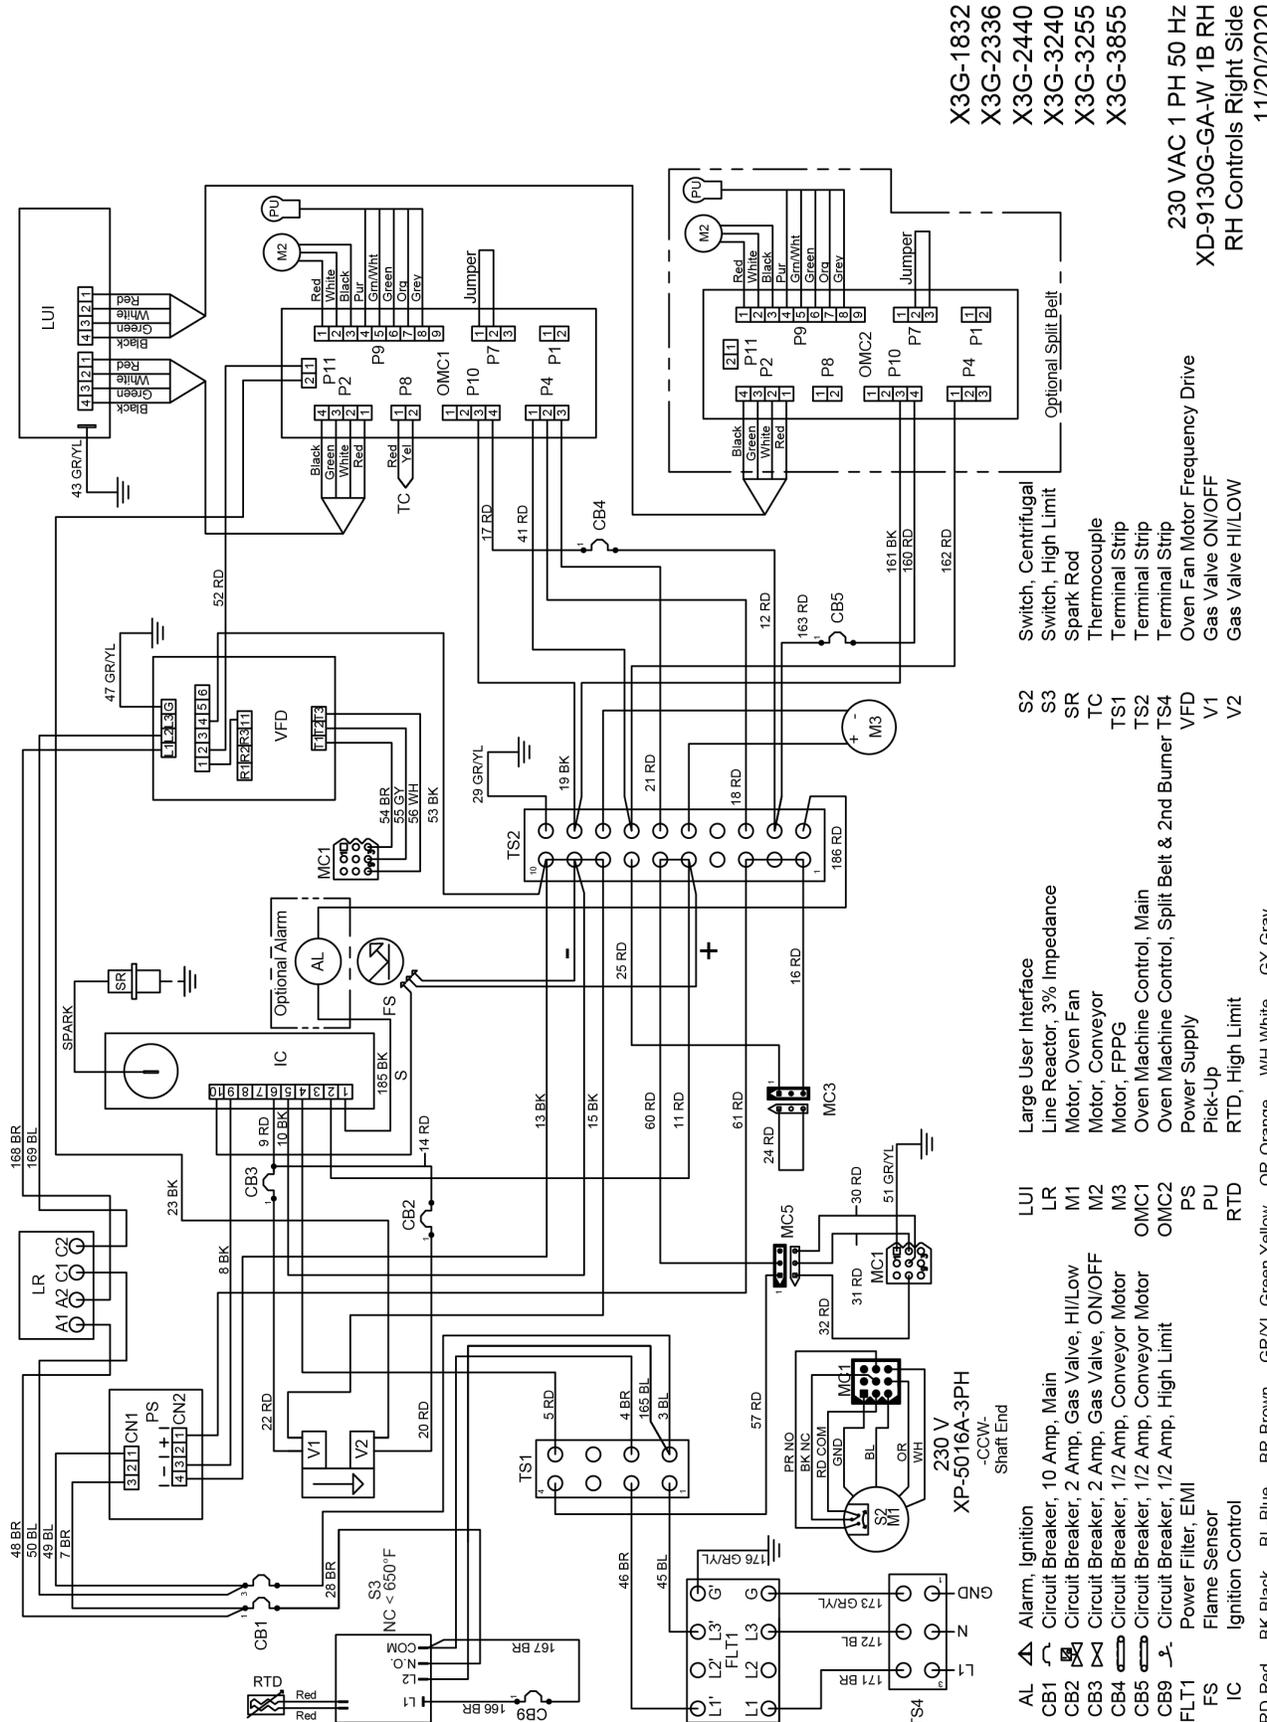

- X3G-1832
- X3G-2336
- X3G-2440
- X3G-3240
- X3G-3255
- X3G-3855

230 VAC 1 PH 50 HZ
 XD-9130G-GA-W 1B RH
 RH Controls Right Side
 11/20/2020

- S2 Switch, Centrifugal
- S3 Switch, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- TS4 Terminal Strip
- VFD Oven Fan Motor Frequency Drive
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW


- Large User Interface
- Line Reactor, 3% Impedance
- Motor, Oven Fan
- Motor, Conveyor
- Motor, FPPG
- Oven Machine Control, Main
- Oven Machine Control, Split Belt & 2nd Burner
- Power Supply
- Pick-Up
- RTD, High Limit
- WH-White
- GY-Grey


- LUI
- LR
- M1
- M2
- M3
- OMC1
- OMC2
- PS
- PU
- RTD
- OR-Orange
- GRYL-Green
- Yellow
- BR-Brown
- BL-Blue
- WH-White
- GY-Grey

- AL Alarm, Ignition
- CB1 Circuit Breaker, 10 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB9 Circuit Breaker, 1/2 Amp, High Limit
- FLT1 Power Filter, EMI
- FS Flame Sensor
- IC Ignition Control
- RD-Red
- BK-Black
- BL-Blue
- BR-Brown
- GRYL-Green
- OR-Orange
- WH-White
- GY-Grey




This page is intentionally left blank.

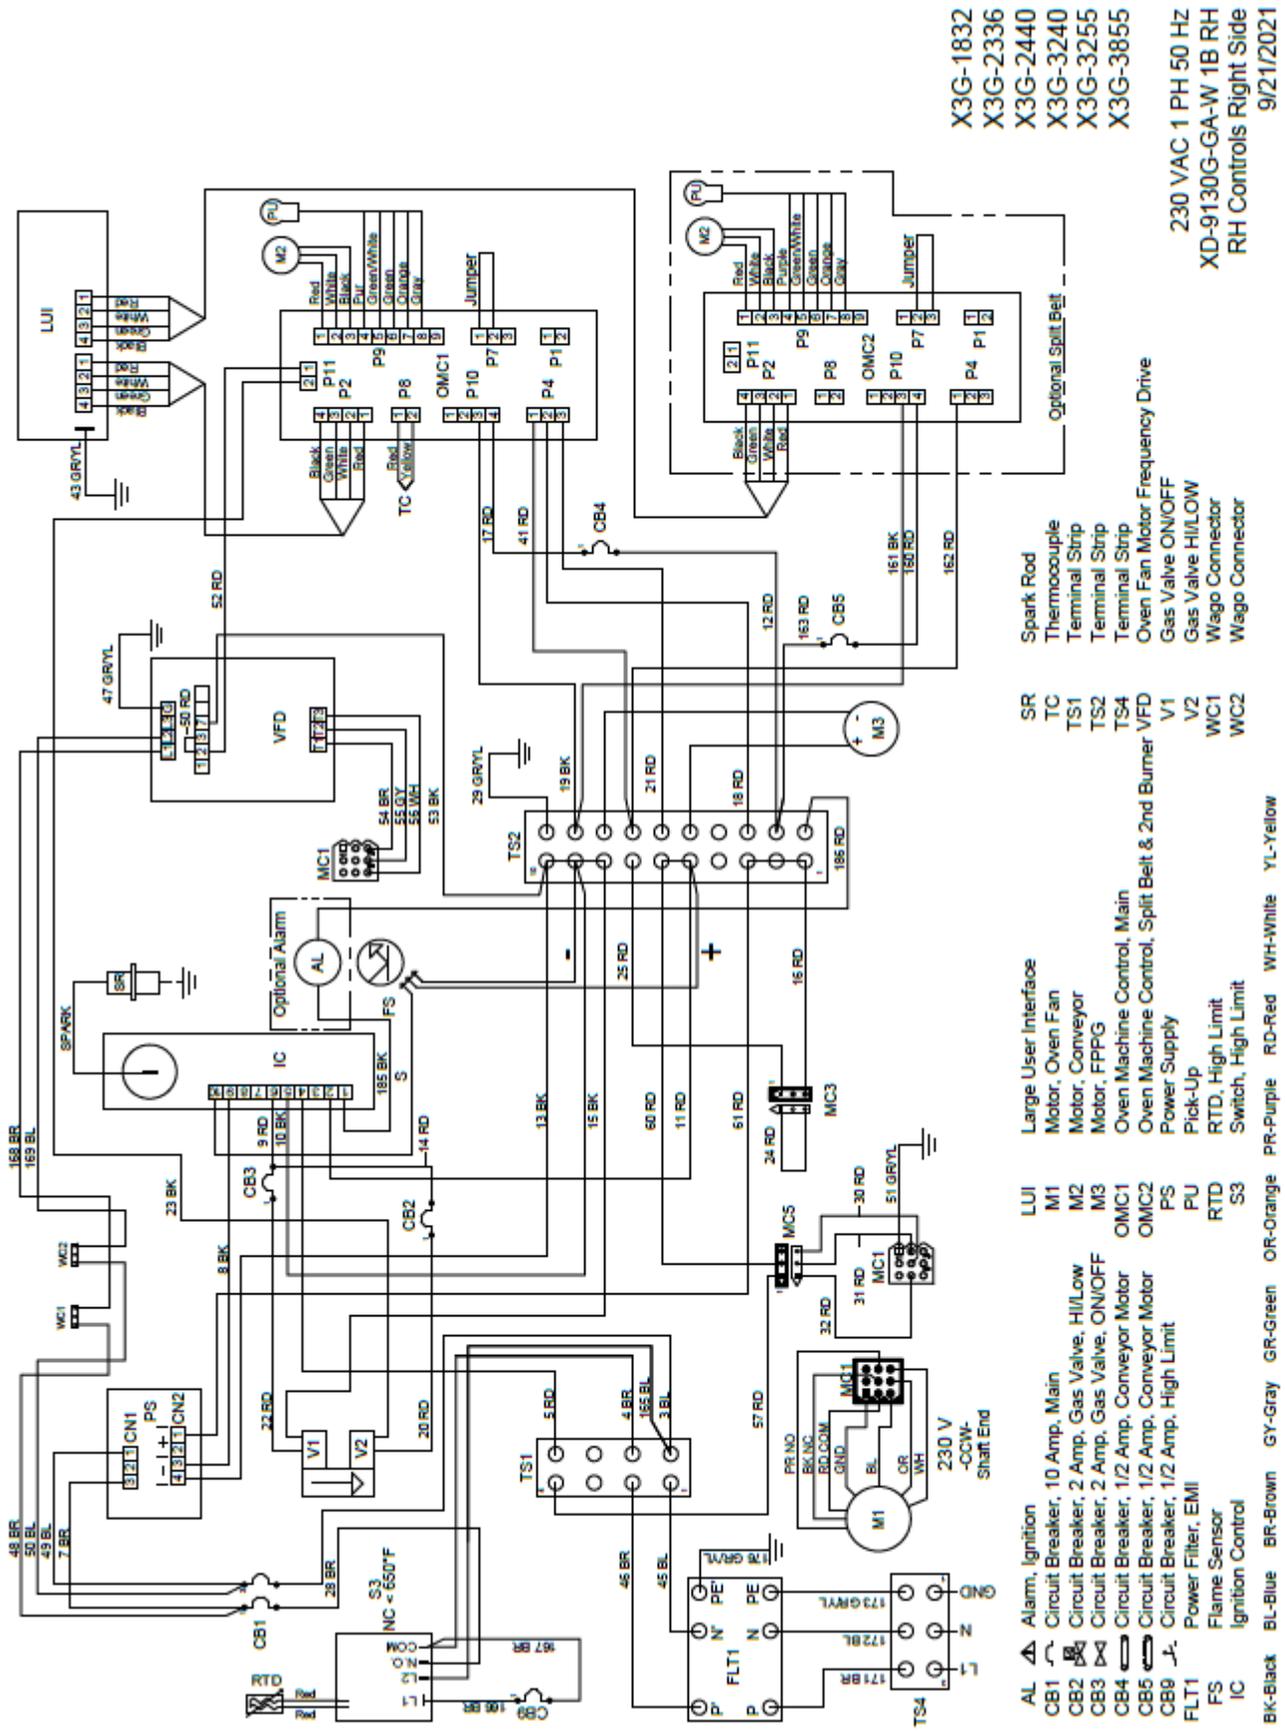

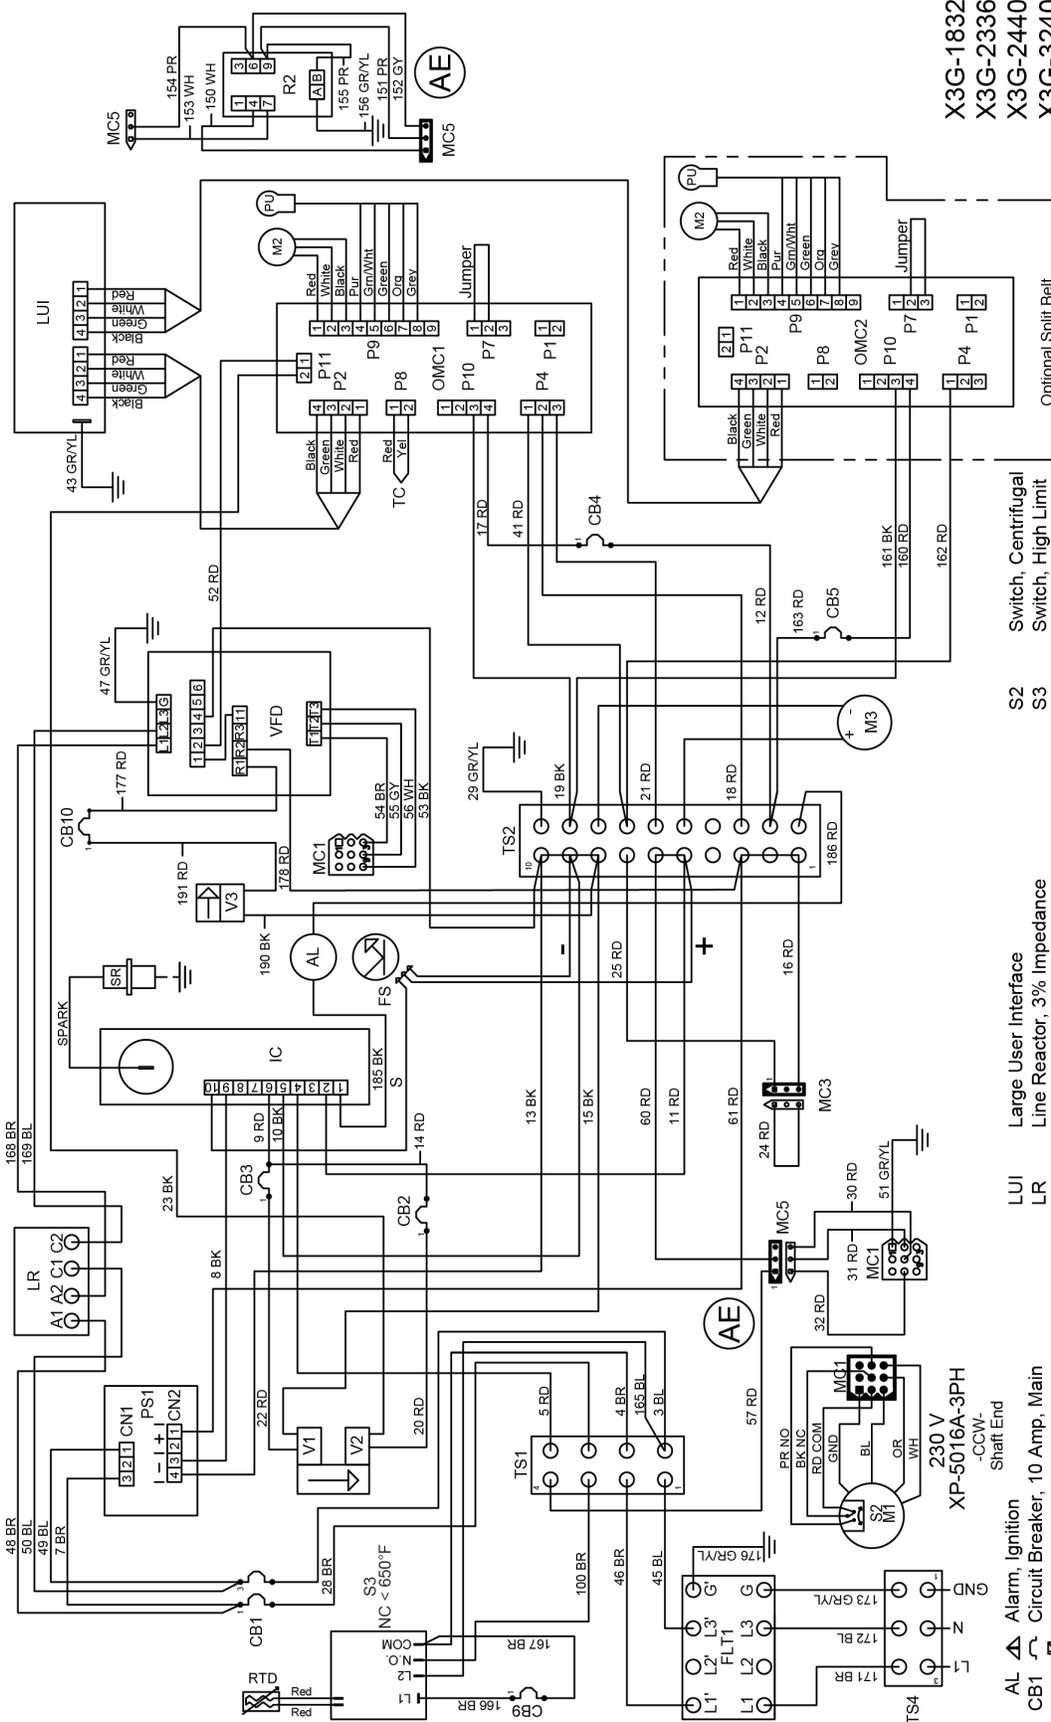


- | | | | |
|-----------|---|-----|--------------------------------|
| AL | Alarm, Ignition | S2 | Switch, Centrifugal |
| CB1 | Circuit Breaker, 10 Amp, Main | S3 | Switch, High Limit |
| CB2 | Circuit Breaker, 2 Amp, Gas Valve, HI/LOW | SR | Spark Rod |
| CB3 | Circuit Breaker, 2 Amp, Gas Valve, ON/OFF | TC | Thermocouple |
| CB4 | Circuit Breaker, 1/2 Amp, Conveyor Motor | TS1 | Terminal Strip |
| CB5 | Circuit Breaker, 1/2 Amp, Conveyor Motor | TS2 | Terminal Strip |
| CB9 | Circuit Breaker, 1/2 Amp, High Limit | TS4 | Terminal Strip |
| CB10 | Circuit Breaker, 2 Amp, Gas Valve, Shut-Off | VFD | Oven Fan Motor Frequency Drive |
| FLT1 | Power Filter, EMI | V1 | Gas Valve ON/OFF |
| FS | Flame Sensor | V2 | Gas Valve HI/LOW |
| IC | Ignition Control | V3 | Gas Valve ON/OFF, Shut-Off |
| RD-Red | BK-Black | | |
| BL-Blue | GRYL-Green | | |
| BR-Brown | OR-Orange | | |
| GY-Gray | WH-White | | |
| PR-Purple | | | |
-
- | | |
|-----------|---|
| LUI | Large User Interface |
| LR | Line Reactor, 3% Impedance |
| M1 | Motor, Oven Fan |
| M2 | Motor, Conveyor |
| M3 | Motor, FPPG |
| OMC1 | Oven Machine Control, Main |
| OMC2 | Oven Machine Control, Split Belt & 2nd Burner |
| PS1 | Power Supply |
| PU | Pick-Up |
| R2 | Proving Relay |
| RTD | RTD, High Limit |
| RTD-Red | RTD, High Limit |
| OR-Orange | WH-White |
| GY-Gray | PR-Purple |
-
- | | |
|--------------|-----------|
| XP-5016A-3PH | 230 V |
| CCW- | CCW- |
| Shaft End | Shaft End |
-
- | | |
|----------|--|
| X3G-1832 | |
| X3G-2336 | |
| X3G-2440 | |
| X3G-3240 | |
| X3G-3255 | |
| X3G-3855 | |
-
- | | |
|------------------------|--|
| 230 VAC 1 PH 50 HZ | |
| XD-9130G-GA-AE 1B RH | |
| RH Controls Right Side | |
| 11/20/2020 | |

This page is intentionally left blank.

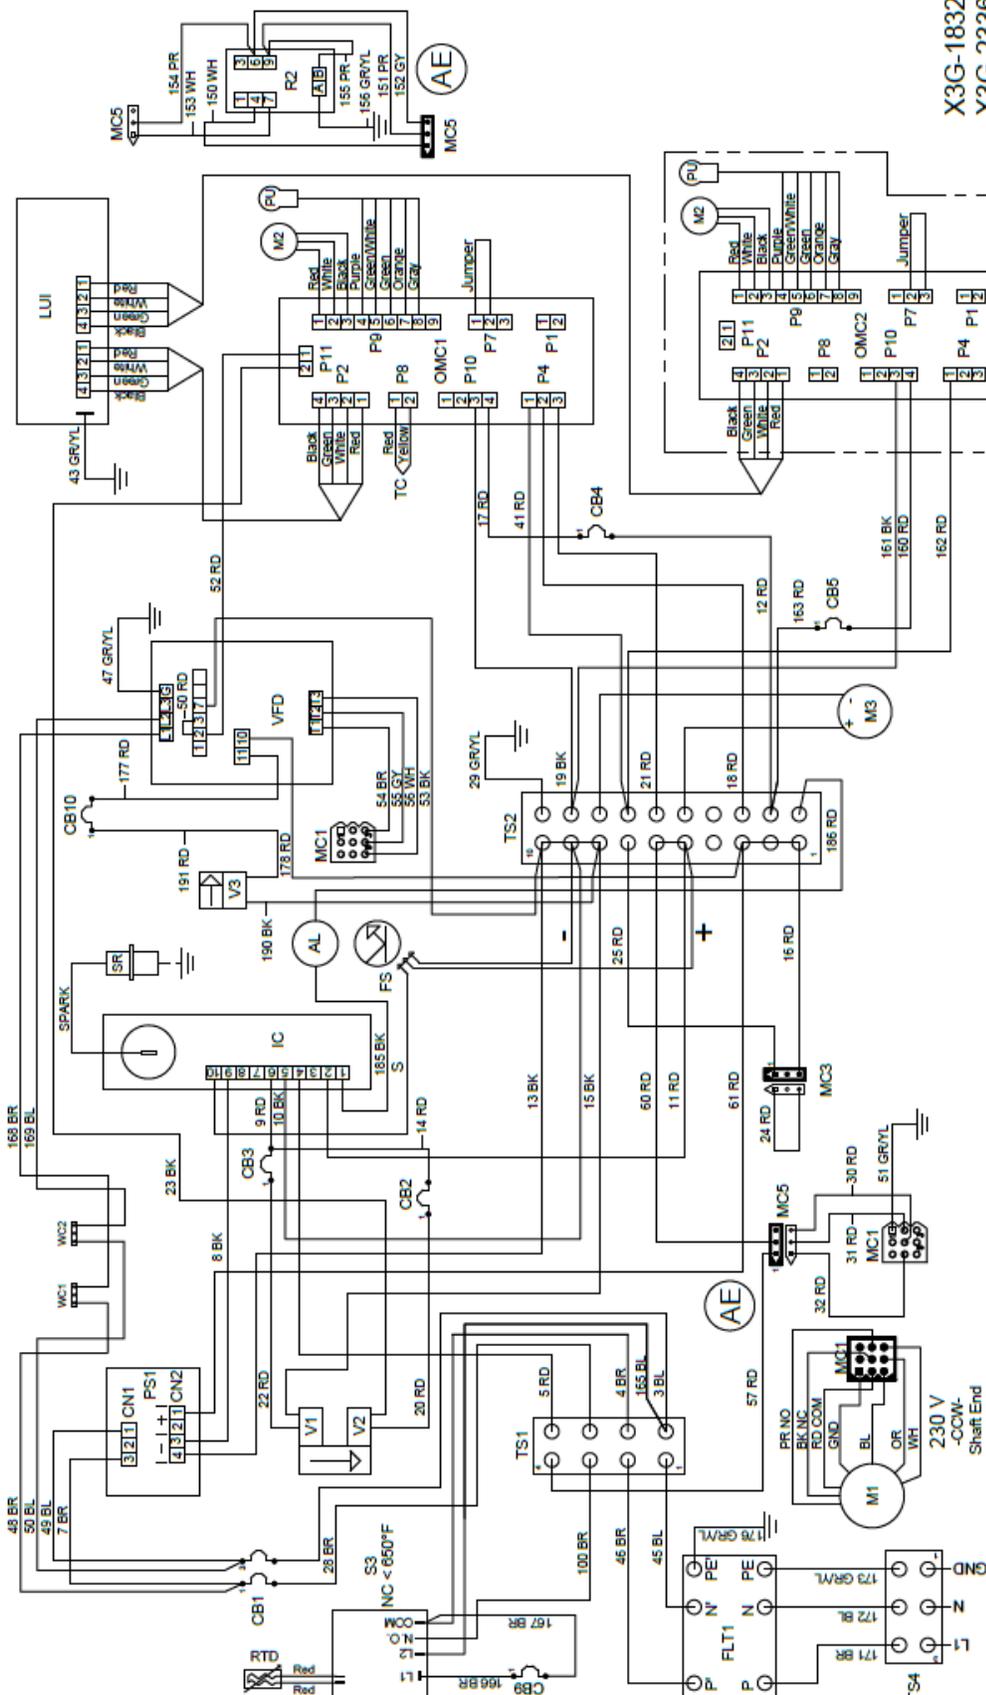


- AL Alarm, Ignition
- CB1 Circuit Breaker, 10 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB9 Circuit Breaker, 1/2 Amp, High Limit
- CB10 Circuit Breaker, 2 Amp, Gas Valve, Shut-Off
- FLT1 Power Filter, EMI
- FS Flame Sensor
- IC Ignition Control
- BL-Black BR-Brown GR-Green GY-Gray WH-White YL-Yellow
- MC5
- MC3
- MC1
- MC2
- MC4
- MC6
- MC7
- MC8
- MC9
- MC10
- MC11
- MC12
- MC13
- MC14
- MC15
- MC16
- MC17
- MC18
- MC19
- MC20
- MC21
- MC22
- MC23
- MC24
- MC25
- MC26
- MC27
- MC28
- MC29
- MC30
- MC31
- MC32
- MC33
- MC34
- MC35
- MC36
- MC37
- MC38
- MC39
- MC40
- MC41
- MC42
- MC43
- MC44
- MC45
- MC46
- MC47
- MC48
- MC49
- MC50
- MC51
- MC52
- MC53
- MC54
- MC55
- MC56
- MC57
- MC58
- MC59
- MC60
- MC61
- MC62
- MC63
- MC64
- MC65
- MC66
- MC67
- MC68
- MC69
- MC70
- MC71
- MC72
- MC73
- MC74
- MC75
- MC76
- MC77
- MC78
- MC79
- MC80
- MC81
- MC82
- MC83
- MC84
- MC85
- MC86
- MC87
- MC88
- MC89
- MC90
- MC91
- MC92
- MC93
- MC94
- MC95
- MC96
- MC97
- MC98
- MC99
- MC100
- MC101
- MC102
- MC103
- MC104
- MC105
- MC106
- MC107
- MC108
- MC109
- MC110
- MC111
- MC112
- MC113
- MC114
- MC115
- MC116
- MC117
- MC118
- MC119
- MC120
- MC121
- MC122
- MC123
- MC124
- MC125
- MC126
- MC127
- MC128
- MC129
- MC130
- MC131
- MC132
- MC133
- MC134
- MC135
- MC136
- MC137
- MC138
- MC139
- MC140
- MC141
- MC142
- MC143
- MC144
- MC145
- MC146
- MC147
- MC148
- MC149
- MC150
- MC151
- MC152
- MC153
- MC154
- MC155
- MC156
- MC157
- MC158
- MC159
- MC160
- MC161
- MC162
- MC163
- MC164
- MC165
- MC166
- MC167
- MC168
- MC169
- MC170
- MC171
- MC172
- MC173
- MC174
- MC175
- MC176
- MC177
- MC178
- MC179
- MC180
- MC181
- MC182
- MC183
- MC184
- MC185
- MC186
- MC187
- MC188
- MC189
- MC190
- MC191
- MC192
- MC193
- MC194
- MC195
- MC196
- MC197
- MC198
- MC199
- MC200
- MC201
- MC202
- MC203
- MC204
- MC205
- MC206
- MC207
- MC208
- MC209
- MC210
- MC211
- MC212
- MC213
- MC214
- MC215
- MC216
- MC217
- MC218
- MC219
- MC220
- MC221
- MC222
- MC223
- MC224
- MC225
- MC226
- MC227
- MC228
- MC229
- MC230
- MC231
- MC232
- MC233
- MC234
- MC235
- MC236
- MC237
- MC238
- MC239
- MC240
- MC241
- MC242
- MC243
- MC244
- MC245
- MC246
- MC247
- MC248
- MC249
- MC250
- MC251
- MC252
- MC253
- MC254
- MC255
- MC256
- MC257
- MC258
- MC259
- MC260
- MC261
- MC262
- MC263
- MC264
- MC265
- MC266
- MC267
- MC268
- MC269
- MC270
- MC271
- MC272
- MC273
- MC274
- MC275
- MC276
- MC277
- MC278
- MC279
- MC280
- MC281
- MC282
- MC283
- MC284
- MC285
- MC286
- MC287
- MC288
- MC289
- MC290
- MC291
- MC292
- MC293
- MC294
- MC295
- MC296
- MC297
- MC298
- MC299
- MC300
- MC301
- MC302
- MC303
- MC304
- MC305
- MC306
- MC307
- MC308
- MC309
- MC310
- MC311
- MC312
- MC313
- MC314
- MC315
- MC316
- MC317
- MC318
- MC319
- MC320
- MC321
- MC322
- MC323
- MC324
- MC325
- MC326
- MC327
- MC328
- MC329
- MC330
- MC331
- MC332
- MC333
- MC334
- MC335
- MC336
- MC337
- MC338
- MC339
- MC340
- MC341
- MC342
- MC343
- MC344
- MC345
- MC346
- MC347
- MC348
- MC349
- MC350
- MC351
- MC352
- MC353
- MC354
- MC355
- MC356
- MC357
- MC358
- MC359
- MC360
- MC361
- MC362
- MC363
- MC364
- MC365
- MC366
- MC367
- MC368
- MC369
- MC370
- MC371
- MC372
- MC373
- MC374
- MC375
- MC376
- MC377
- MC378
- MC379
- MC380
- MC381
- MC382
- MC383
- MC384
- MC385
- MC386
- MC387
- MC388
- MC389
- MC390
- MC391
- MC392
- MC393
- MC394
- MC395
- MC396
- MC397
- MC398
- MC399
- MC400
- MC401
- MC402
- MC403
- MC404
- MC405
- MC406
- MC407
- MC408
- MC409
- MC410
- MC411
- MC412
- MC413
- MC414
- MC415
- MC416
- MC417
- MC418
- MC419
- MC420
- MC421
- MC422
- MC423
- MC424
- MC425
- MC426
- MC427
- MC428
- MC429
- MC430
- MC431
- MC432
- MC433
- MC434
- MC435
- MC436
- MC437
- MC438
- MC439
- MC440
- MC441
- MC442
- MC443
- MC444
- MC445
- MC446
- MC447
- MC448
- MC449
- MC450
- MC451
- MC452
- MC453
- MC454
- MC455
- MC456
- MC457
- MC458
- MC459
- MC460
- MC461
- MC462
- MC463
- MC464
- MC465
- MC466
- MC467
- MC468
- MC469
- MC470
- MC471
- MC472
- MC473
- MC474
- MC475
- MC476
- MC477
- MC478
- MC479
- MC480
- MC481
- MC482
- MC483
- MC484
- MC485
- MC486
- MC487
- MC488
- MC489
- MC490
- MC491
- MC492
- MC493
- MC494
- MC495
- MC496
- MC497
- MC498
- MC499
- MC500
- MC501
- MC502
- MC503
- MC504
- MC505
- MC506
- MC507
- MC508
- MC509
- MC510
- MC511
- MC512
- MC513
- MC514
- MC515
- MC516
- MC517
- MC518
- MC519
- MC520
- MC521
- MC522
- MC523
- MC524
- MC525
- MC526
- MC527
- MC528
- MC529
- MC530
- MC531
- MC532
- MC533
- MC534
- MC535
- MC536
- MC537
- MC538
- MC539
- MC540
- MC541
- MC542
- MC543
- MC544
- MC545
- MC546
- MC547
- MC548
- MC549
- MC550
- MC551
- MC552
- MC553
- MC554
- MC555
- MC556
- MC557
- MC558
- MC559
- MC560
- MC561
- MC562
- MC563
- MC564
- MC565
- MC566
- MC567
- MC568
- MC569
- MC570
- MC571
- MC572
- MC573
- MC574
- MC575
- MC576
- MC577
- MC578
- MC579
- MC580
- MC581
- MC582
- MC583
- MC584
- MC585
- MC586
- MC587
- MC588
- MC589
- MC590
- MC591
- MC592
- MC593
- MC594
- MC595
- MC596
- MC597
- MC598
- MC599
- MC600
- MC601
- MC602
- MC603
- MC604
- MC605
- MC606
- MC607
- MC608
- MC609
- MC610
- MC611
- MC612
- MC613
- MC614
- MC615
- MC616
- MC617
- MC618
- MC619
- MC620
- MC621
- MC622
- MC623
- MC624
- MC625
- MC626
- MC627
- MC628
- MC629
- MC630
- MC631
- MC632
- MC633
- MC634
- MC635
- MC636
- MC637
- MC638
- MC639
- MC640
- MC641
- MC642
- MC643
- MC644
- MC645
- MC646
- MC647
- MC648
- MC649
- MC650
- MC651
- MC652
- MC653
- MC654
- MC655
- MC656
- MC657
- MC658
- MC659
- MC660
- MC661
- MC662
- MC663
- MC664
- MC665
- MC666
- MC667
- MC668
- MC669
- MC670
- MC671
- MC672
- MC673
- MC674
- MC675
- MC676
- MC677
- MC678
- MC679
- MC680
- MC681
- MC682
- MC683
- MC684
- MC685
- MC686
- MC687
- MC688
- MC689
- MC690
- MC691
- MC692
- MC693
- MC694
- MC695
- MC696
- MC697
- MC698
- MC699
- MC700
- MC701
- MC702
- MC703
- MC704
- MC705
- MC706
- MC707
- MC708
- MC709
- MC710
- MC711
- MC712
- MC713
- MC714
- MC715
- MC716
- MC717
- MC718
- MC719
- MC720
- MC721
- MC722
- MC723
- MC724
- MC725
- MC726
- MC727
- MC728
- MC729
- MC730
- MC731
- MC732
- MC733
- MC734
- MC735
- MC736
- MC737
- MC738
- MC739
- MC740
- MC741
- MC742
- MC743
- MC744
- MC745
- MC746
- MC747
- MC748
- MC749
- MC750
- MC751
- MC752
- MC753
- MC754
- MC755
- MC756
- MC757
- MC758
- MC759
- MC760
- MC761
- MC762
- MC763
- MC764
- MC765
- MC766
- MC767
- MC768
- MC769
- MC770
- MC771
- MC772
- MC773
- MC774
- MC775
- MC776
- MC777
- MC778
- MC779
- MC780
- MC781
- MC782
- MC783
- MC784
- MC785
- MC786
- MC787
- MC788
- MC789
- MC790
- MC791
- MC792
- MC793
- MC794
- MC795
- MC796
- MC797
- MC798
- MC799
- MC800
- MC801
- MC802
- MC803
- MC804
- MC805
- MC806
- MC807
- MC808
- MC809
- MC810
- MC811
- MC812
- MC813
- MC814
- MC815
- MC816
- MC817
- MC818
- MC819
- MC820
- MC821
- MC822
- MC823
- MC824
- MC825
- MC826
- MC827
- MC828
- MC829
- MC830
- MC831
- MC832
- MC833
- MC834
- MC835
- MC836
- MC837
- MC838
- MC839
- MC840
- MC841
- MC842
- MC843
- MC844
- MC845
- MC846
- MC847
- MC848
- MC849
- MC850
- MC851
- MC852
- MC853
- MC854
- MC855
- MC856
- MC857
- MC858
- MC859
- MC860
- MC861
- MC862
- MC863
- MC864
- MC865
- MC866
- MC867
- MC868
- MC869
- MC870
- MC871
- MC872
- MC873
- MC874
- MC875
- MC876
- MC877
- MC878
- MC879
- MC880
- MC881
- MC882
- MC883
- MC884
- MC885
- MC886
- MC887
- MC888
- MC889
- MC890
- MC891
- MC892
- MC893
- MC894
- MC895
- MC896
- MC897
- MC898
- MC899
- MC900
- MC901
- MC902
- MC903
- MC904
- MC905
- MC906
- MC907
- MC908
- MC909
- MC910
- MC911
- MC912
- MC913
- MC914
- MC915
- MC916
- MC917
- MC918
- MC919
- MC920
- MC921
- MC922
- MC923
- MC924
- MC925
- MC926
- MC927
- MC928
- MC929
- MC930
- MC931
- MC932
- MC933
- MC934
- MC935
- MC936
- MC937
- MC938
- MC939
- MC940
- MC941
- MC942
- MC943
- MC944
- MC945
- MC946
- MC947
- MC948
- MC949
- MC950
- MC951
- MC952
- MC953
- MC954
- MC955
- MC956
- MC957
- MC958
- MC959
- MC960
- MC961
- MC962
- MC963
- MC964
- MC965
- MC966
- MC967
- MC968
- MC969
- MC970
- MC971
- MC972
- MC973
- MC974
- MC975
- MC976
- MC977
- MC978
- MC979
- MC980
- MC981
- MC982
- MC983
- MC984
- MC985
- MC986
- MC987
- MC988
- MC989
- MC990
- MC991
- MC992
- MC993
- MC994
- MC995
- MC996
- MC997
- MC998
- MC999
- MC1000



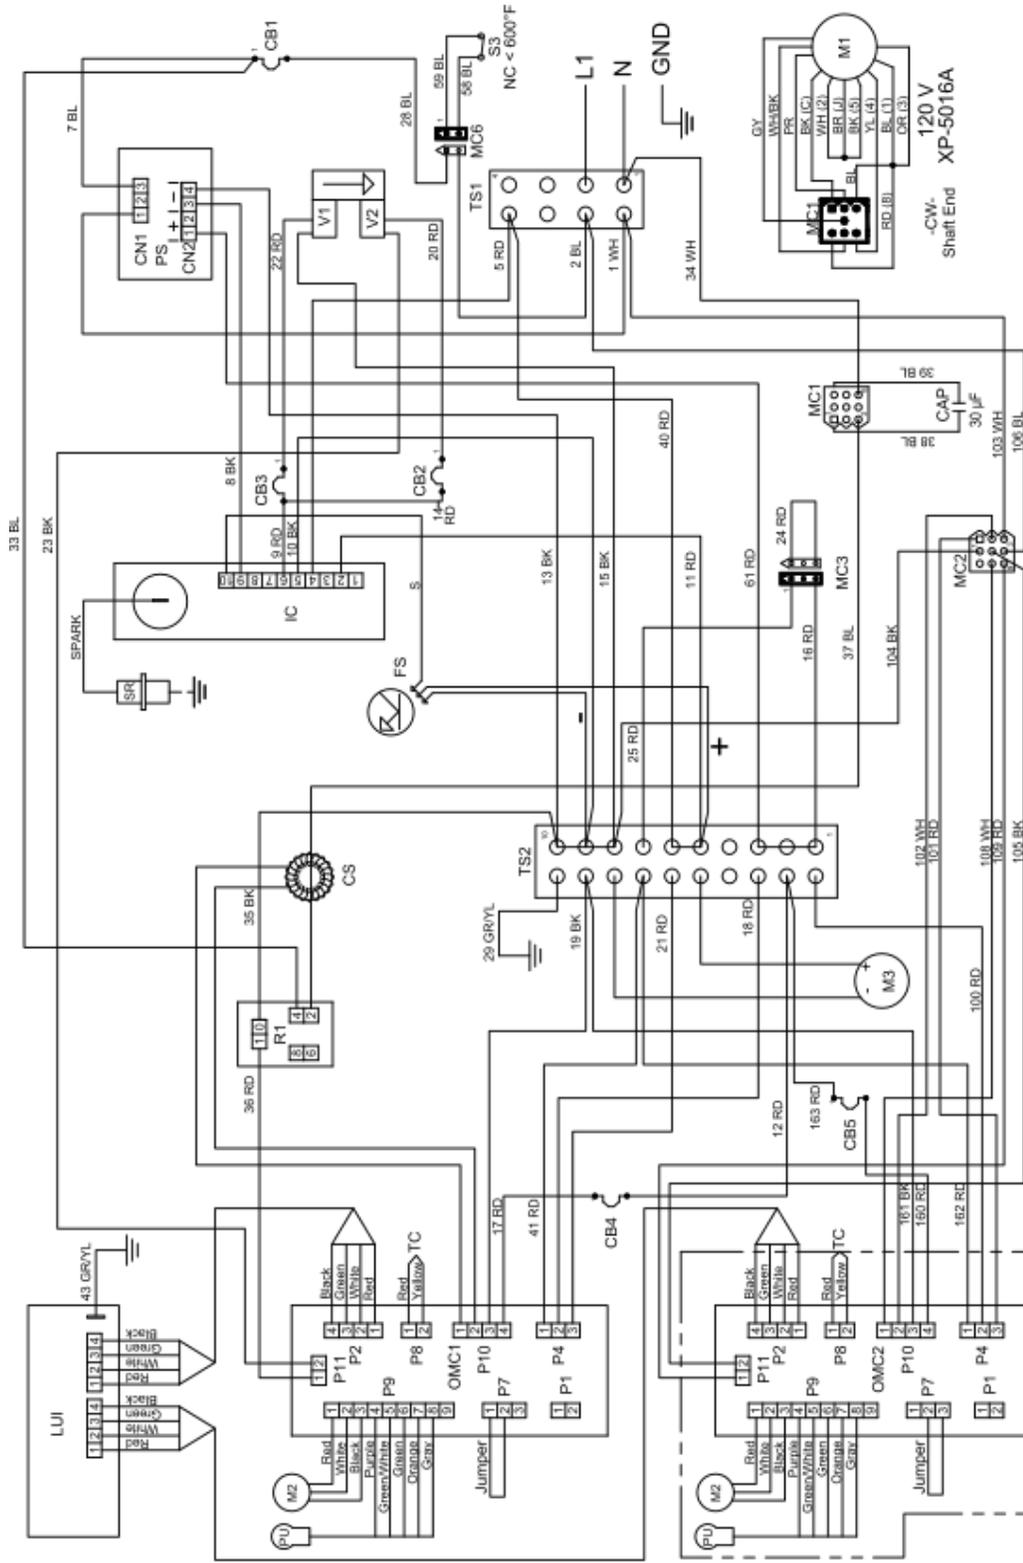


- CAP Capacitor 30µF
- CB1 Circuit Breaker, 15 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, Hi/Low
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CS Current Sensor
- FS Flame Sensor
- BK-Black BL-Blue BR-Brown GY-Gray OR-Orange PR-Purple RD-Red WH-White YL-Yellow
- IC Ignition Control
- LUI Large User Interface
- M1 Motor, Oven Fan
- M2 Motor, Conveyor
- M3 Motor, FPPG
- OMC1 Oven Machine Control, Main
- OMC2 Oven Machine Control, Split Belt & 2nd Burner
- PS Power Supply
- PU Pick-Up
- R1 Oven Fan Motor Relay
- S3 Switch, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW
- X3G-3270-2B
- X3G-3870-2B
- 120 VAC 1 PH 60 HZ
- XD-9130G-GA-S 2B LH
- LH Controls Left Side
- 2/16/2021

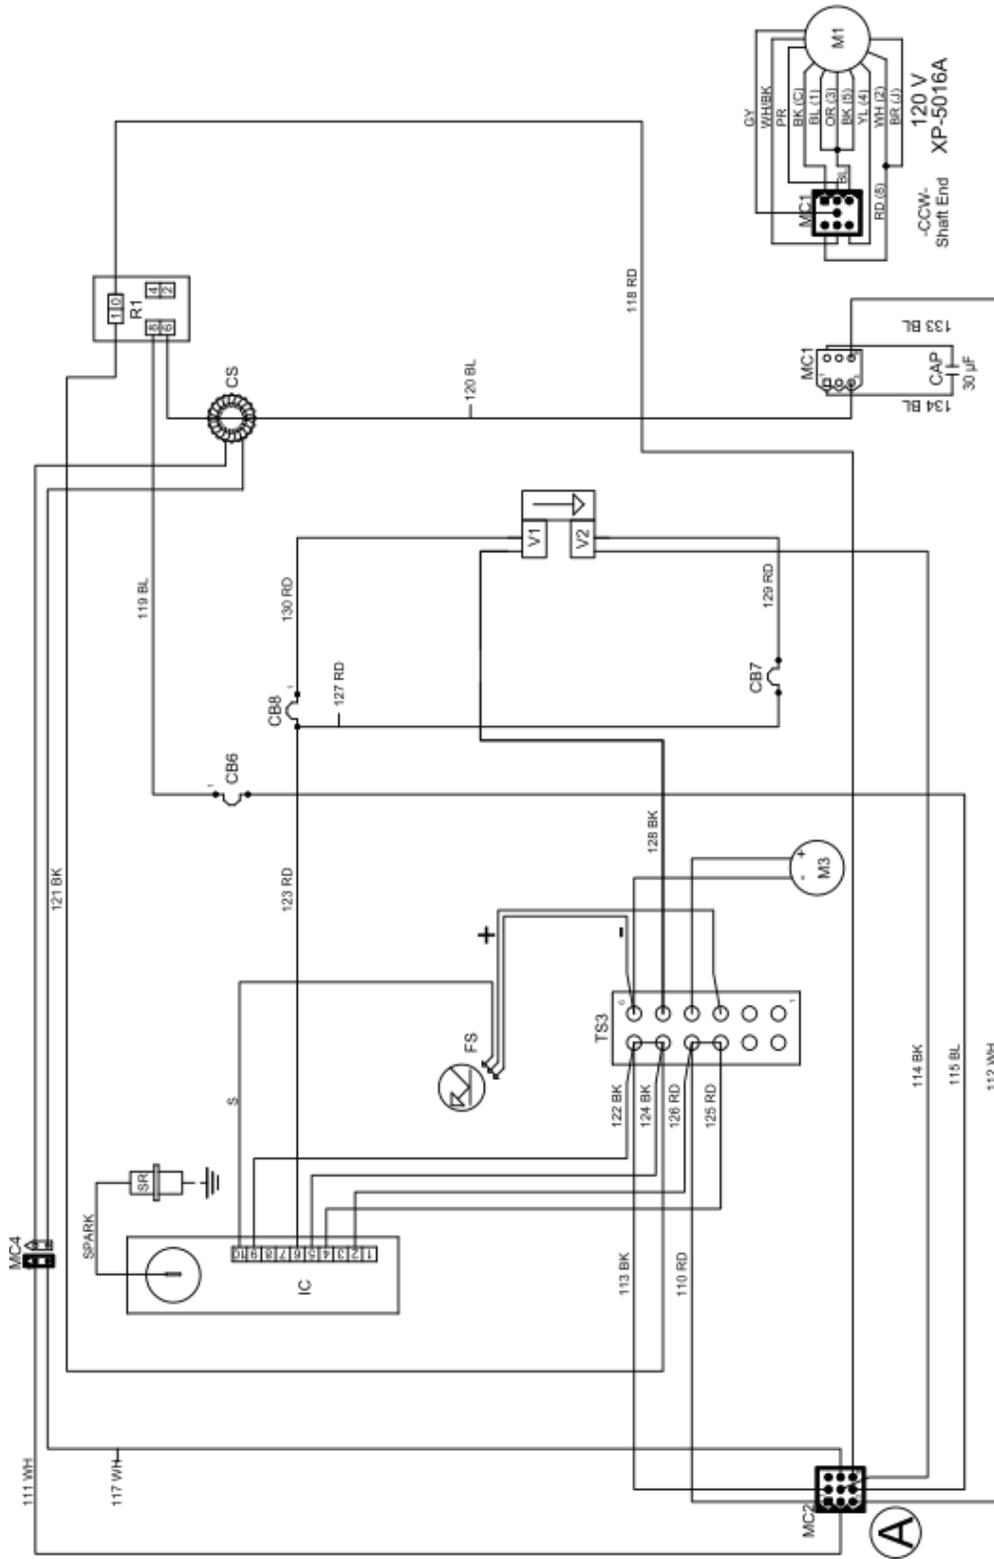

X3G-3270-2B
 X3G-3870-2B
 120 VAC 1 PH 60 HZ
 XD-9130G-GA-S 2B LH
 LH Controls Right Side
 2/16/2021

- CAP Capacitor 30µF
- CB6 Circuit Breaker, 15 Amp, Main
- CB7 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- CB8 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CS Current Sensor
- BK-Black BL-Blue BR-Brown GY-Gray OR-Orange PR-Purple RD-Red WH-White YL-Yellow
- FS Flame Sensor
- IC Ignition Control
- M1 Motor, Oven Fan
- M3 Motor, FPPG
- R1 Oven Fan Motor Relay
- SR Spark Rod
- TS3 Terminal Strip
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW


116 OVEN SCHEMATIC - STD 2 BOX RHC 120 VAC LH

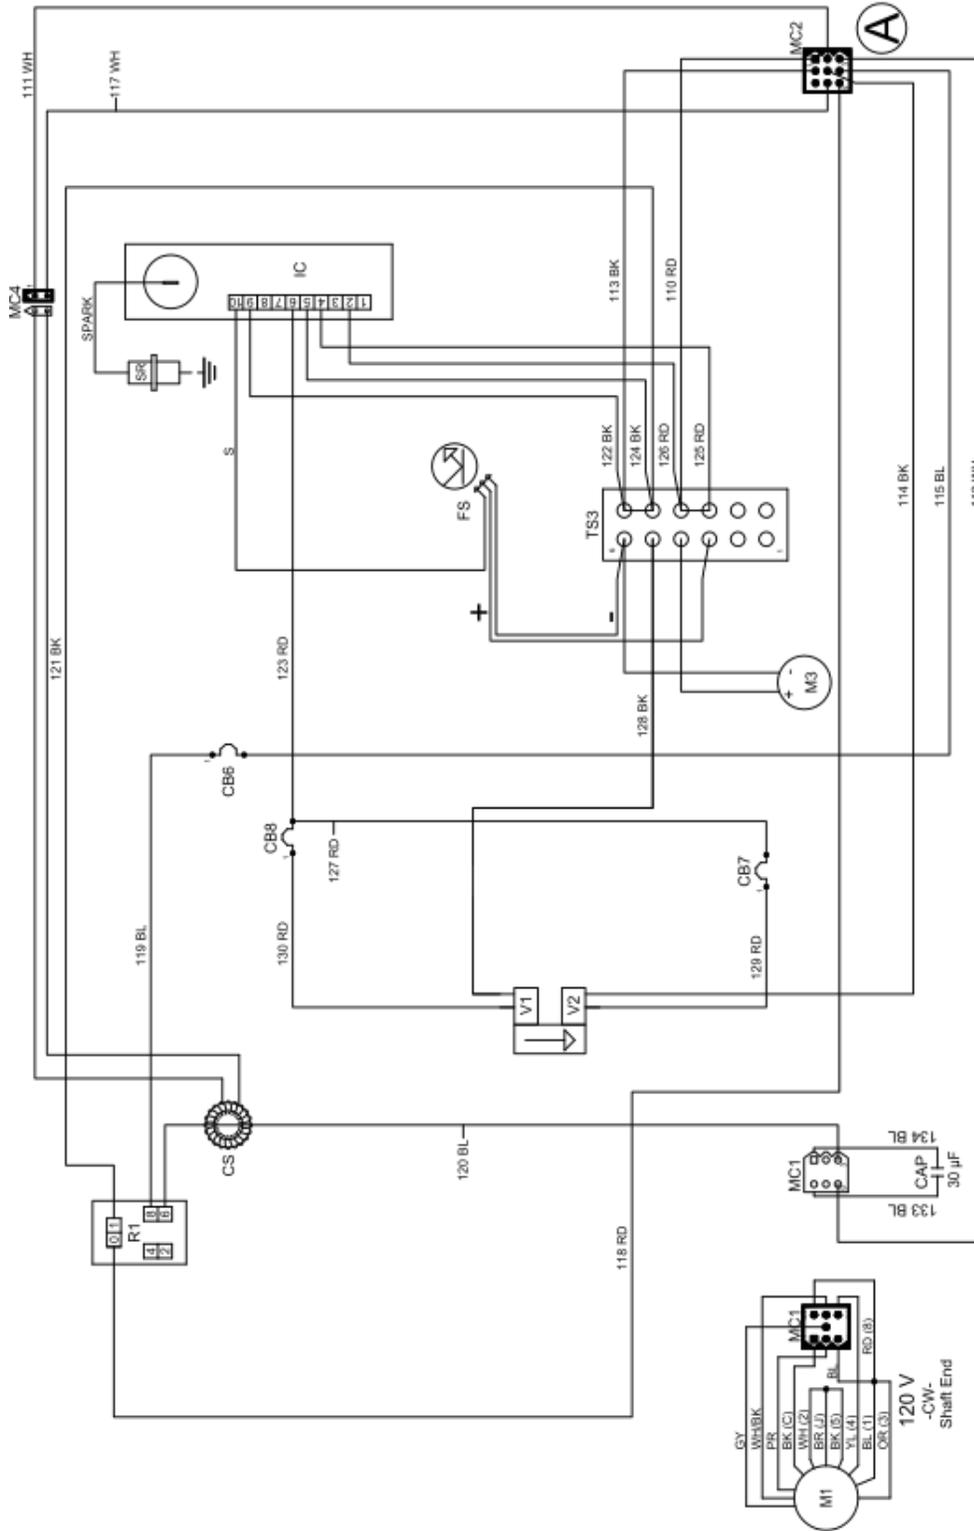

X3G-3270-2B
 X3G-3870-2B
 120 VAC 1 PH 60 Hz
 XD-9130G-GA-S-2B RH
 RH Controls Left Side
 2/16/2021


- CAP Capacitor 30µF
- CB6 Circuit Breaker, 15 Amp, Main
- CB7 Circuit Breaker, 2 Amp, Gas Valve, Hi/Low
- CB8 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CS Current Sensor
- BK-Black BL-Blue BR-Brown GY-Gray OR-Orange PR-Purple RD-Red WH-White YL-Yellow
- FS Flame Sensor
- IC Ignition Control
- M1 Motor, Oven Fan
- M3 Motor, FPPG
- R1 Oven Fan Motor Relay
- SR Spark Rod
- TS3 Terminal Strip
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW



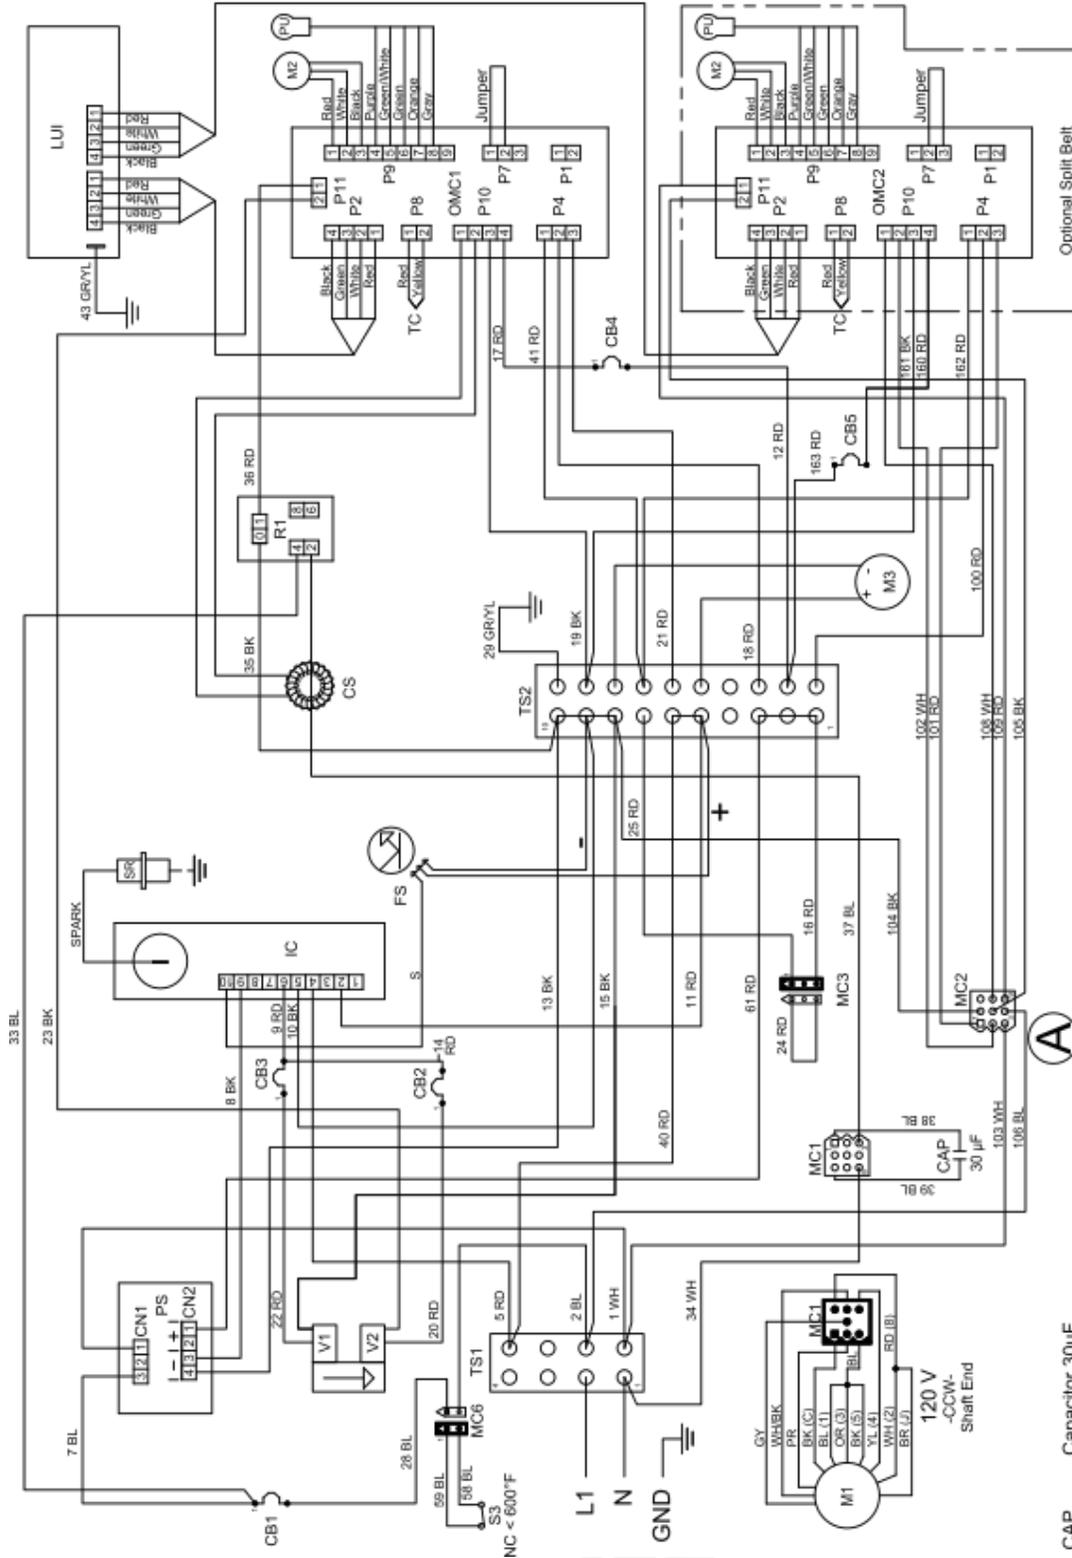


- CAP Capacitor 30µF
- CB1 Circuit Breaker, 15 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, Hi/Low
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CS Current Sensor
- FS Flame Sensor
- IC Ignition Control
- BK-Black BL-Blue BR-Brown GY-Gray OR-Orange PR-Purple RD-Red WH-White YL-Yellow
- LUI Large User Interface
- M1 Motor, Oven Fan
- M2 Motor, Conveyor
- M3 Motor, FPPG
- OMC1 Oven Machine Control, Main
- OMC2 Oven Machine Control, Split Belt & 2nd Burner
- PS Power Supply
- PU Pick-Up
- R1 Oven Fan Motor Relay
- S3 Switch, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW
- X3G-3270-2B
- X3G-3870-2B
- 120 VAC 1 PH 60 HZ
- XD-9130G-GA-S-2B RH
- RH Controls Right Side
- 2/16/2021

118 OVEN SCHEMATIC - WORLD 2 BOX LHC 230 VAC LH

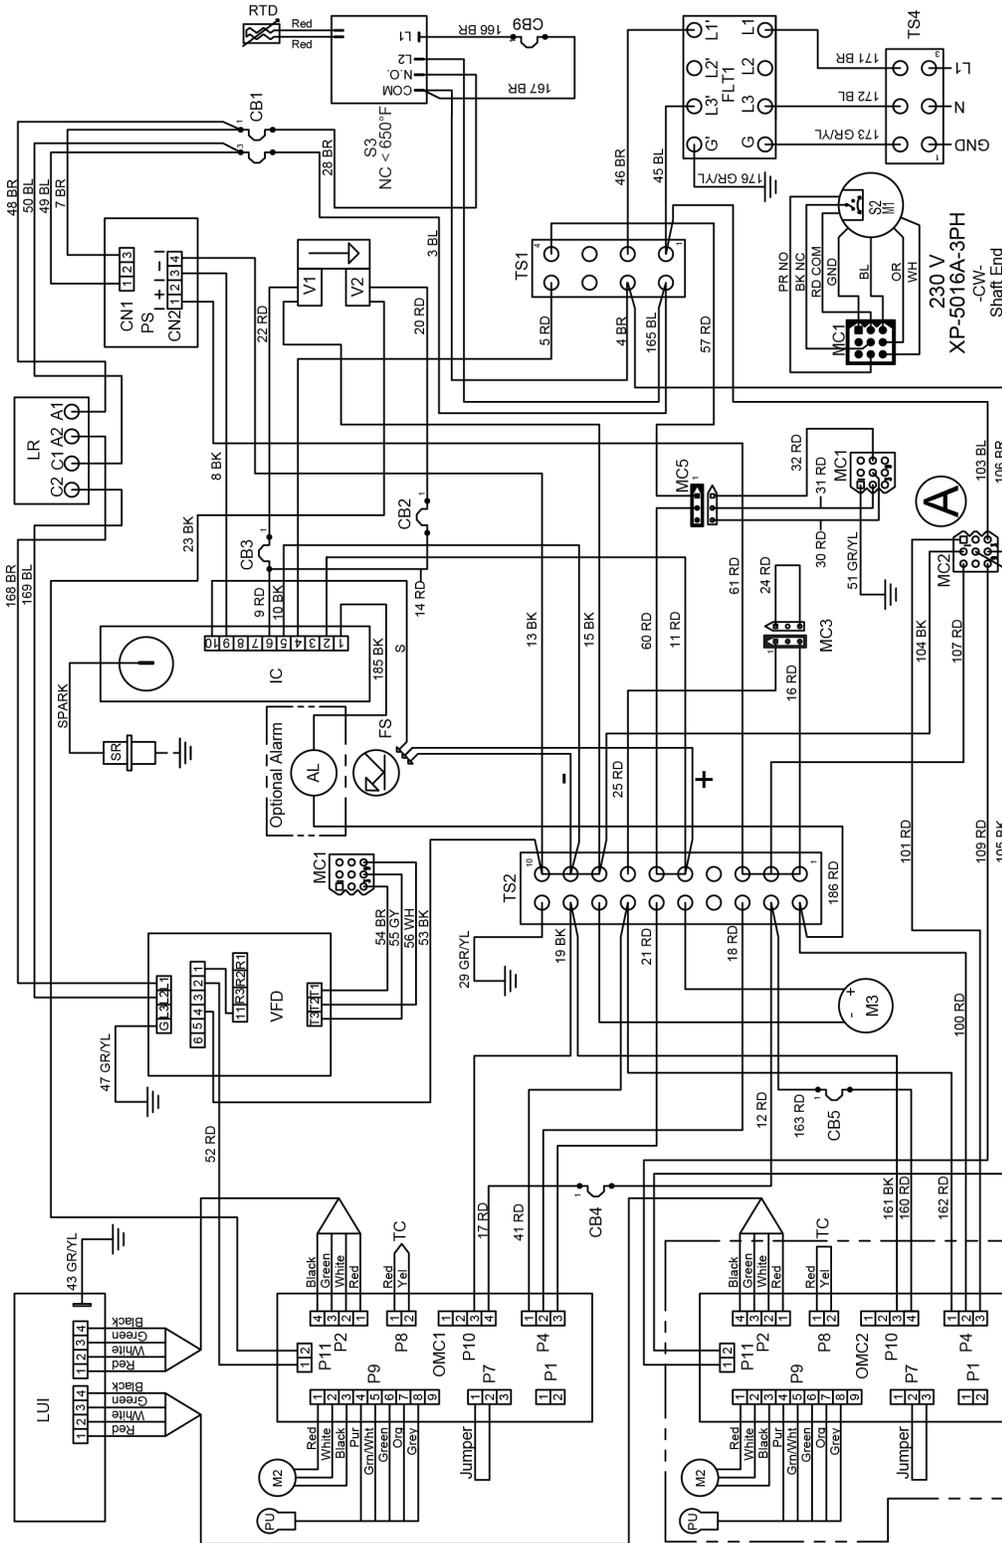

- AL Alarm, Ignition
- CB1 Circuit Breaker, 10 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB9 Circuit Breaker, 1/2 Amp, High Limit
- FLT1 Flame Sensor
- FS Power Filter, EMI
- RD-Red BK-Black BL-Blue BR-Brown GRYL-Green Yellow OR-Orange WH-White GY-Gray
- IC Ignition Control
- LUI Large User Interface
- LR Line Reactor, 3% Impedance
- M1 Motor, Oven Fan
- M2 Motor, Conveyor
- M3 Motor, FPPG
- OMC1 Oven Machine Control, Main
- OMC2 Oven Machine Control, Split Belt & 2nd Burner
- PS Power Supply
- PU Pick-Up
- RTD RTD, High Limit
- S2 Switch, Centrifugal
- S3 Line Reactor, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- TS4 Terminal Strip
- VFD Oven Fan Motor Frequency Drive
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW
- X3G-3270-2B
- X3G-3870-2B
- 230 VAC 1 PH 50 Hz
- XD-9130G-GA-W 2B LH
- LH Controls Left Side
- 11/20/2020


OVEN SCHEMATIC - WORLD 2 BOX LHC 230 VAC RH 119

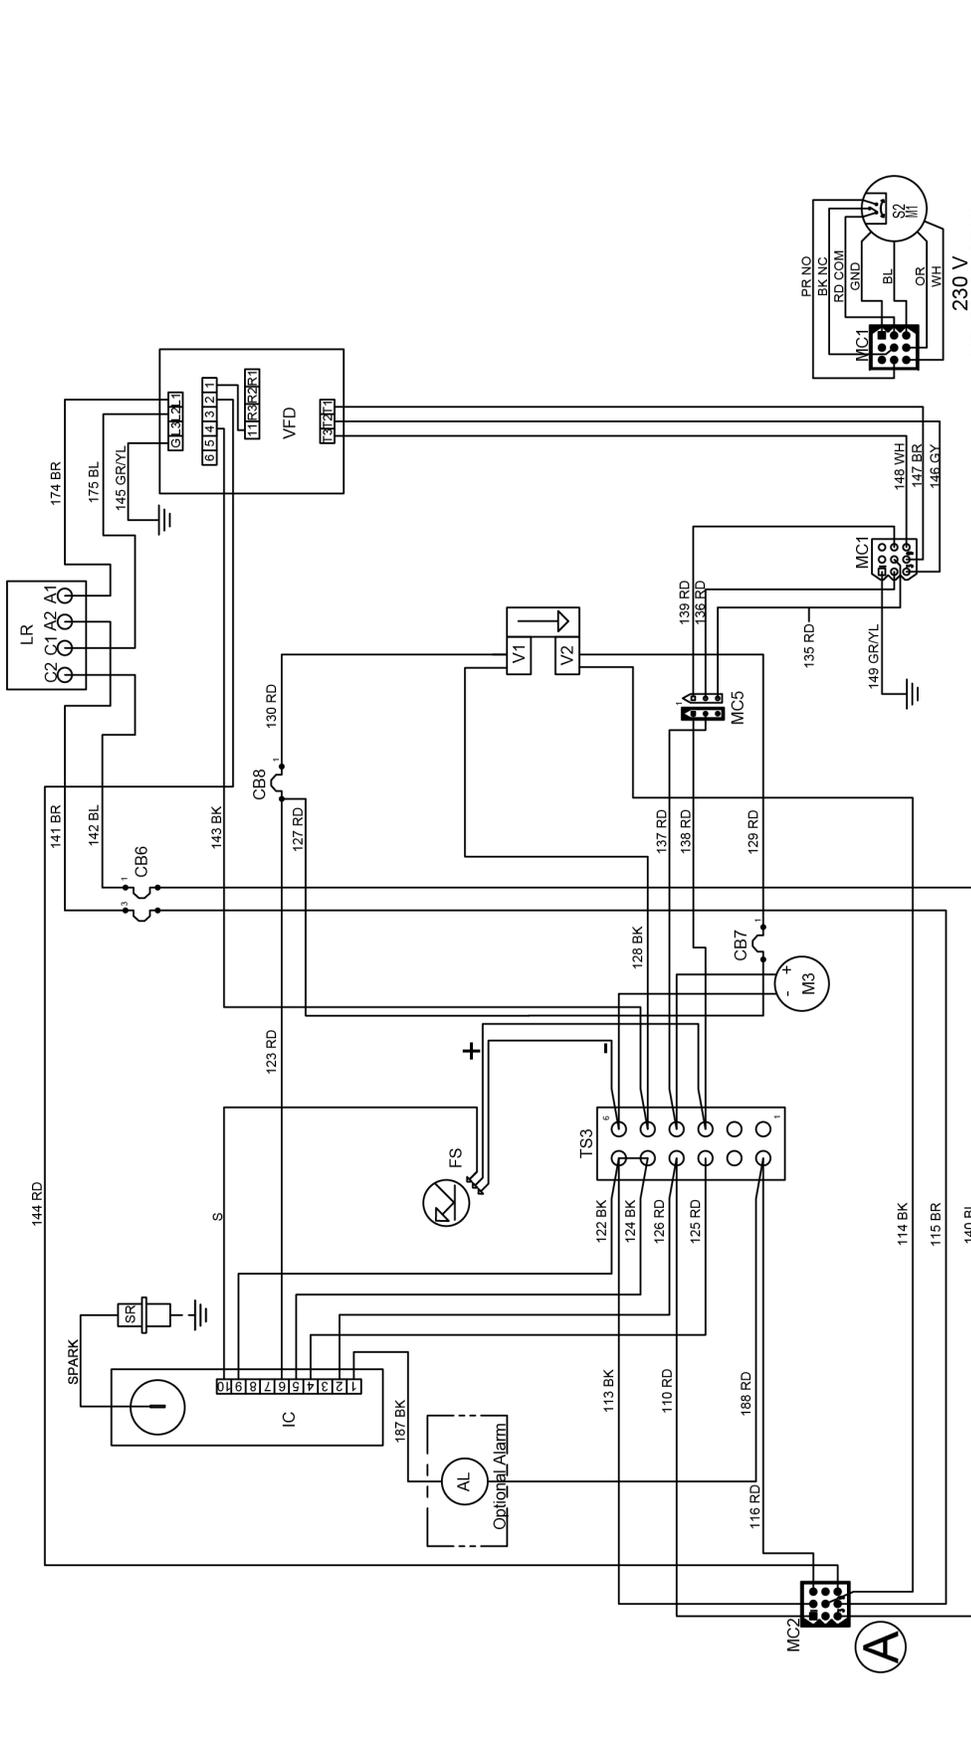

X3G-3270-2B
 X3G-3870-2B
 230 VAC 1 PH 50 Hz
 XD-9130G-GA-W 2B LH
 LH Controls Right Side
 11/20/20


- AL Alarm, Ignition
- CB6 Circuit Breaker, 10 Amp, Main
- CB7 Circuit Breaker, 2 Amp, Gas Valve, HI/Low
- CB8 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- FS Flame Sensor
- IC Ignition Control
- RD-Red BK-Black BL-Blue BR-Brown GRYL-Green Yellow OR-Orange WH-White GY-Gray
- LR Line Reactor, 3% Impedance
- M1 Motor, Oven Fan
- M3 Motor, FPPG
- S2 Switch, Centrifugal
- SR Spark Rod
- TTS3 Terminal Strip
- VFD Oven Fan Motor Frequency Drive
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW

120 OVEN SCHEMATIC - WORLD 2 BOX RHC 230 VAC LH

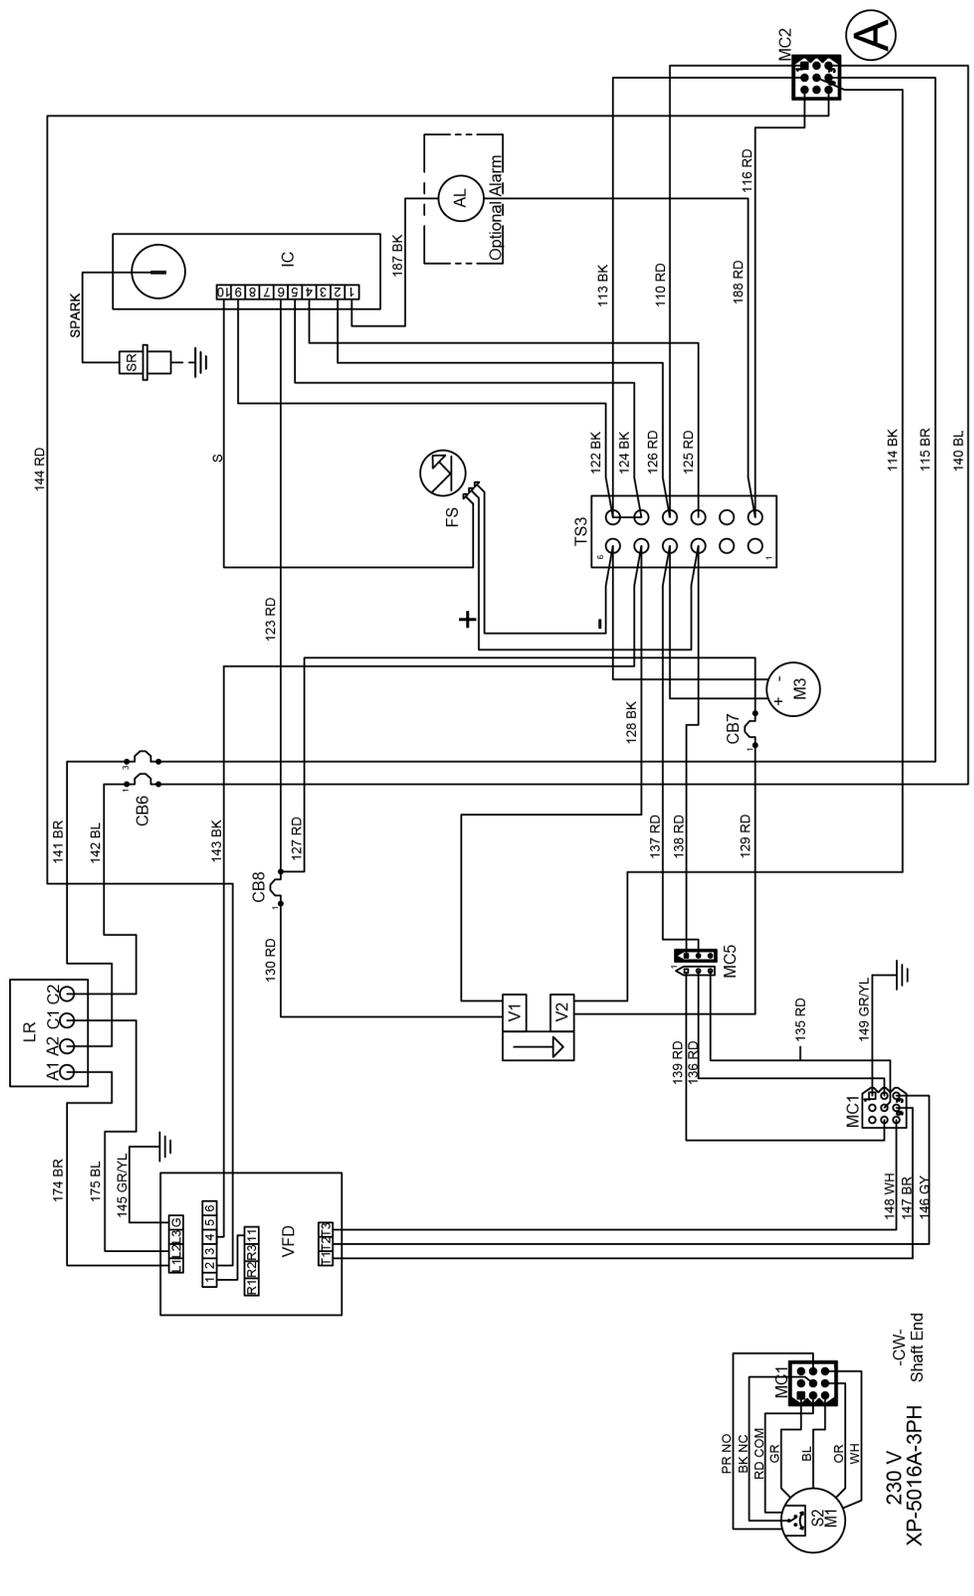


X3G-3270-2B
 X3G-3870-2B
 230 VAC 1 PH 50 Hz
 XD-9130G-GA-W 2B RH
 RH Controls Left Side
 11/20/2020


Symbol	Description	Color
AL	Alarm, Ignition	BK-Black
CB6	Circuit Breaker, 10 Amp, Main	BR-Brown
CB7	Circuit Breaker, 2 Amp, Gas Valve, HI/Low	GR/YL-Green Yellow
CB8	Circuit Breaker, 2 Amp, Gas Valve, ON/OFF	OR-Orange
FS	Flame Sensor	WH-White
IC	Ignition Control	GY-Gray
LR	Line Reactor, 3% Impedance	
M1	Motor, Oven Fan	
M3	Motor, FPPG	
S2	Switch, Centrifugal	
SR	Spark Rod	
TS3	Terminal Strip	
VFD	Oven Fan Motor Frequency Drive	
V1	Gas Valve ON/OFF	
V2	Gas Valve HI/LOW	

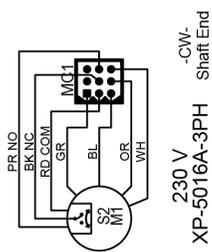

OVEN SCHEMATIC - WORLD 2 BOX RHC 230 VAC RH 121

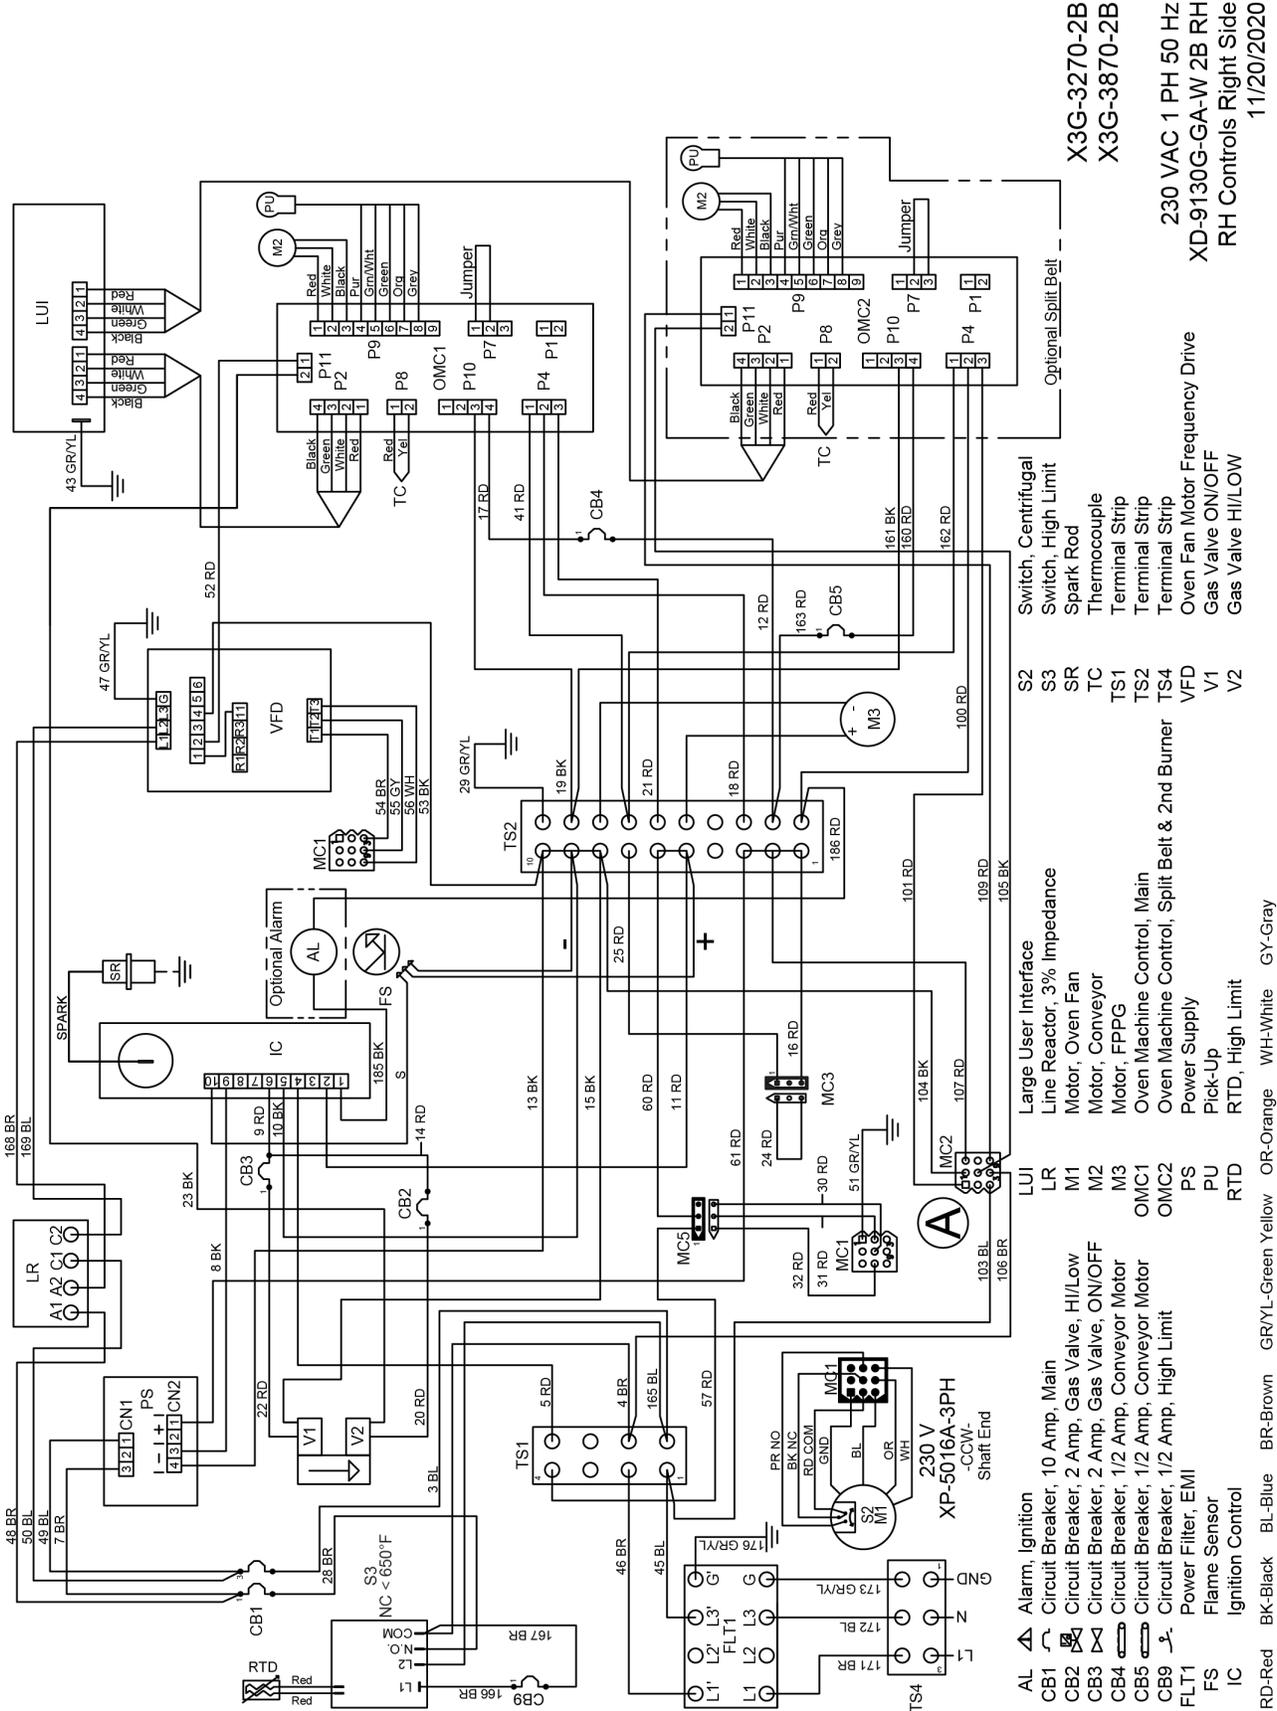


X3G-3270-2B
X3G-3870-2B
230 VAC 1 PH 50 HZ
XD-9130G-GA-W 2B RH
RH Controls Right Side
1/120/2020

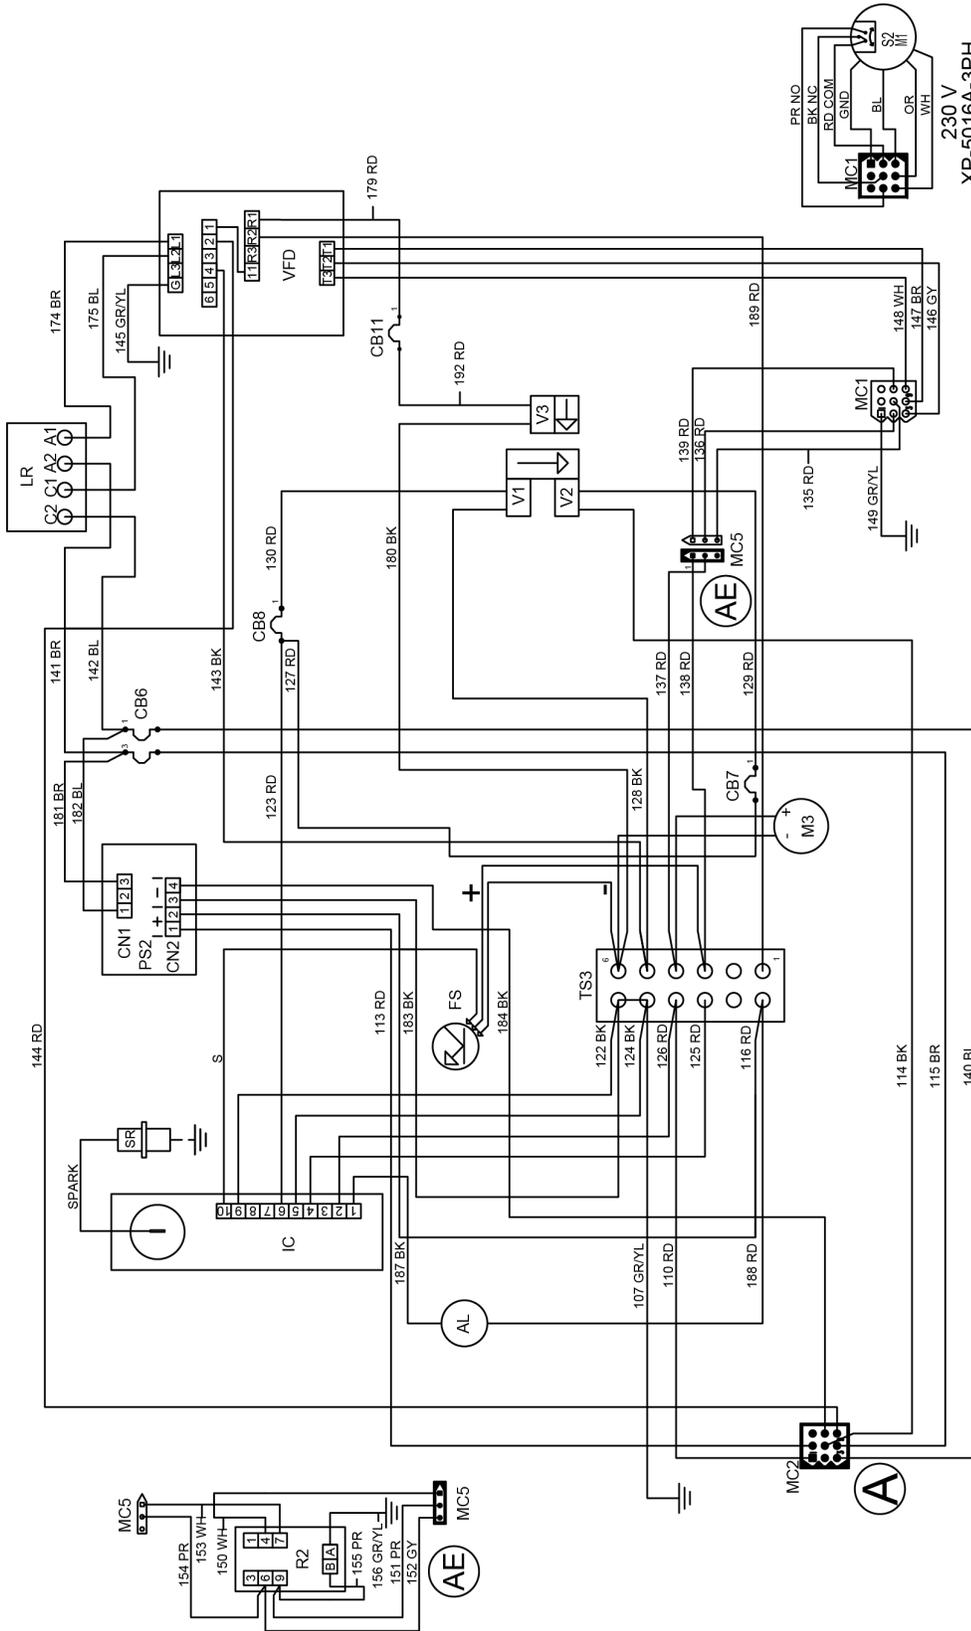

X3G-3270-2B
X3G-3870-2B
 230 VAC 1 PH 50 HZ
 XD-9130G-GA-AE 2B LH
 LH Controls Right Side
 11/20/2020

- | | | | |
|--------|---|-----------|--------------------------------|
| AL | Alarm, Ignition | TS3 | Terminal Strip |
| CB6 | Circuit Breaker, 10 Amp, Main | VFD | Oven Fan Motor Frequency Drive |
| CB7 | Circuit Breaker, 2 Amp, Gas Valve, HI/Low | V1 | Gas Valve ON/OFF |
| CB8 | Circuit Breaker, 2 Amp, Gas Valve, ON/OFF | V2 | Gas Valve HI/LOW |
| CB11 | Circuit Breaker, 2 Amp, Gas Valve, Shut-Off | V3 | Gas Valve ON/OFF, Shut-Off |
| FS | Flame Sensor | | |
| IC | Ignition Control | | |
| RD-Red | BK-Black | BL-Blue | BR-Brown |
| | GR/YL-Green Yellow | OR-Orange | GY-Gray |
| | WH-White | PR-Purple | |

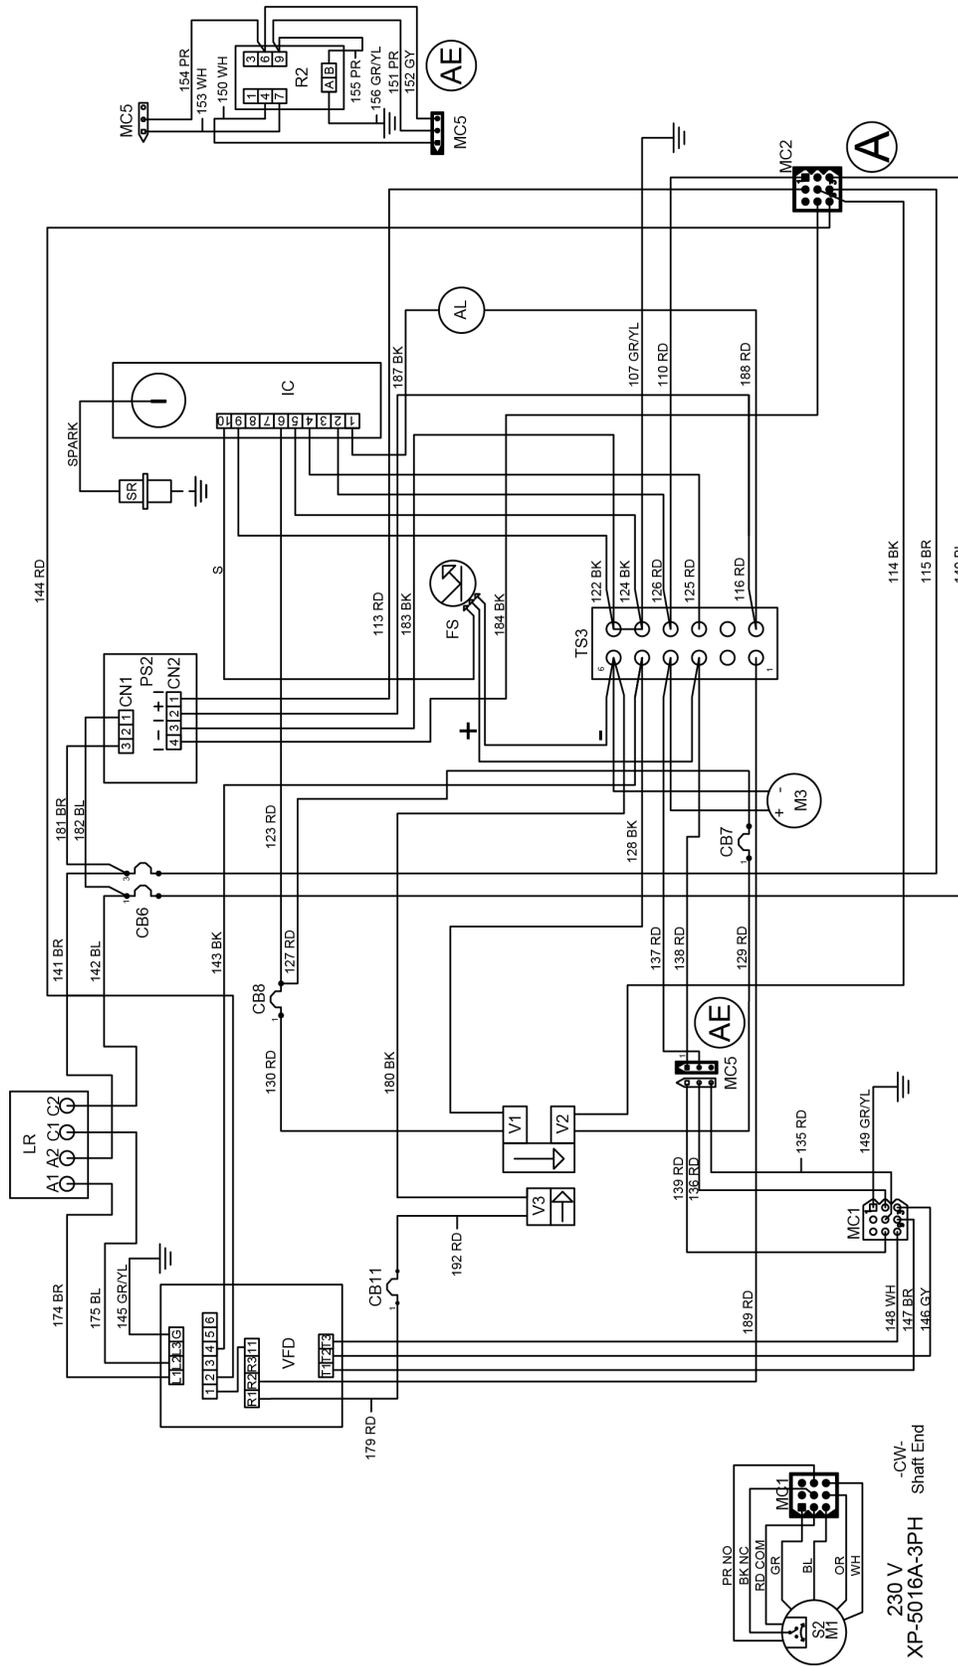


X3G-3270-2B
 X3G-3870-2B
 230 VAC 1 PH 50 HZ
 XD-9130G-GA-AE 2B RH
 RH Controls Left Side
 1/1/20/2020

Terminal Strip
 Oven Fan Motor Frequency Drive
 Gas Valve ON/OFF
 Gas Valve HI/LOW
 Gas Valve ON/OFF, Shut-Off

TS3
 VFD
 V1
 V2
 V3

LR Line Reactor, 3% Impedance
 M1 Motor, Oven Fan
 M3 Motor, FPPG
 PS2 Power Supply
 R2 Proving Relay
 S2 Switch, Centrifugal
 SR Spark Rod

OR-Orange WH-White GY-Gray PR-Purple
 RD-Red BK-Black BL-Blue BR-Brown GRYL-Green Yellow

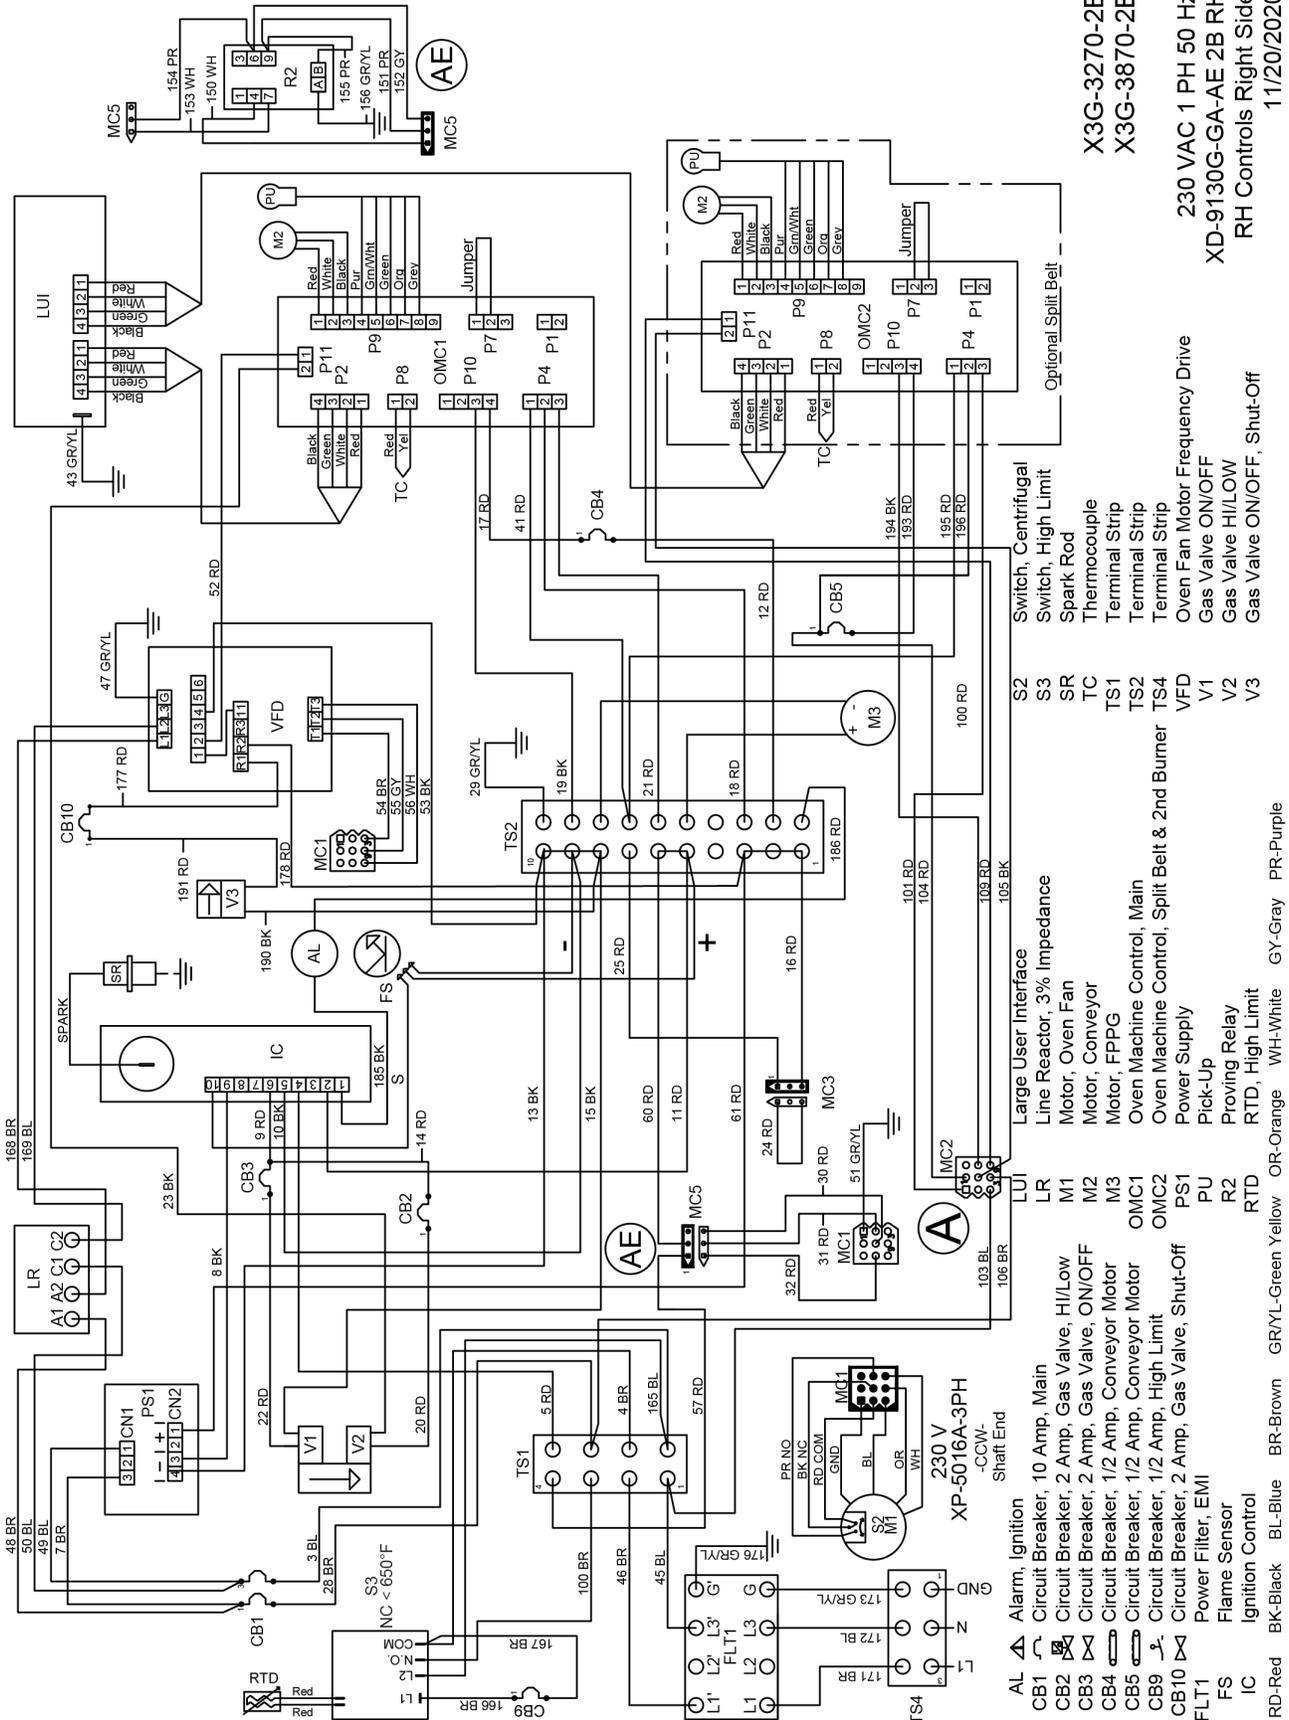



X3G-3270-2B
X3G-3870-2B

230 VAC 1 PH 50 Hz
XD-9130G-GA-AE 2B RH
RH Controls Right Side
11/20/2020


- S2 Switch, Centrifugal
- S3 Switch, High Limit
- SR Spark Rod
- TC Thermocouple
- TS1 Terminal Strip
- TS2 Terminal Strip
- TS4 Terminal Strip
- VFD Oven Fan Motor Frequency Drive
- V1 Gas Valve ON/OFF
- V2 Gas Valve HI/LOW
- V3 Gas Valve ON/OFF, Shut-Off

- AL Alarm, Ignition
- CB1 Circuit Breaker, 10 Amp, Main
- CB2 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
- CB3 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
- CB4 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB5 Circuit Breaker, 1/2 Amp, Conveyor Motor
- CB9 Circuit Breaker, 1/2 Amp, High Limit
- CB10 Circuit Breaker, 2 Amp, Gas Valve, Shut-Off
- FLT1 Power Filter, EMI
- FS Flame Sensor
- IC Ignition Control
- RD-Red BK-Black BL-Blue BR-Brown GR/YL-Green Yellow OR-Orange WH-White GY-Gray PR-Purple

- LR Line Reactor, 3% Impedance
- M1 Motor, Oven Fan
- M2 Motor, Conveyor
- M3 Motor, FPPG
- OMC1 Oven Machine Control, Main
- OMC2 Oven Machine Control, Split Belt & 2nd Burner
- PS1 Power Supply
- PU Pick-Up
- R2 Proving Relay
- RTD RTD, High Limit

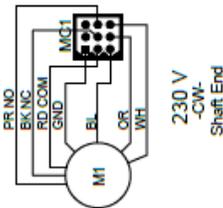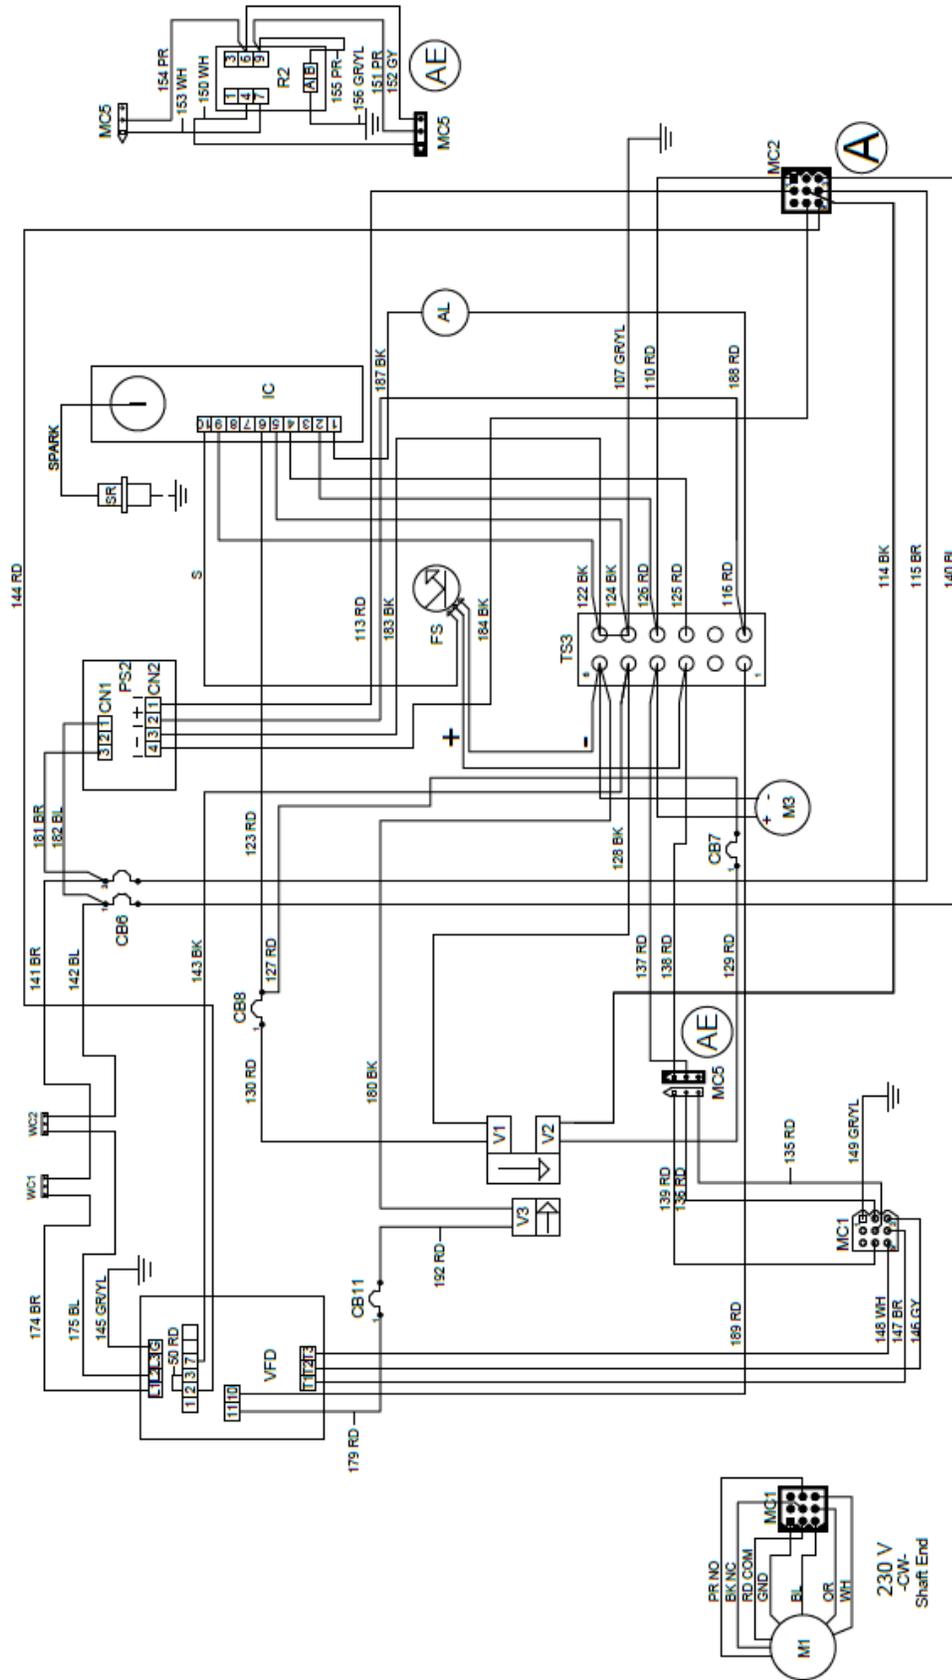

- AL Alarm, Ignition
 - CB6 Circuit Breaker, 10 Amp, Main
 - CB7 Circuit Breaker, 2 Amp, Gas Valve, HI/LOW
 - CB8 Circuit Breaker, 2 Amp, Gas Valve, ON/OFF
 - CB11 Circuit Breaker, 2 Amp, Gas Valve, Shut-Off
 - FS Flame Sensor
 - IC Ignition Control
 - M1 Motor, Ignition
 - M3 Motor, FPPG
 - PS2 Power Supply
 - R2 Proving Relay
 - SR Spark Rod
 - TSS3 Terminal Strip
 - VFD VFD
 - V1 Gas Valve ON/OFF
 - V2 Gas Valve HI/LOW
 - V3 Gas Valve ON/OFF, Shut-Off
 - WC1 Wago Connector
 - WC2 Wago Connector
 - Motor, Oven Fan
 - Motor, FPPG
 - Power Supply
 - Proving Relay
 - Spark Rod
 - Terminal Strip
 - Oven Fan Motor Frequency Drive
 - Gas Valve ON/OFF
 - Gas Valve HI/LOW
 - Gas Valve ON/OFF, Shut-Off
 - Wago Connector
 - Wago Connector
- BK-Black BL-Blue BR-Brown GY-Gray GR-Green OR-Orange PR-Purple RD-Red WH-White YL-Yellow GND-Ground NO-Normally Open NC-Normally Closed COM-Common
 X3G-3270-2B
 X3G-3870-2B
 230 VAC 1 PH 50 HZ
 XD-9130G-GA-AE 2B RH
 RH Controls Left Side
 9/29/2021

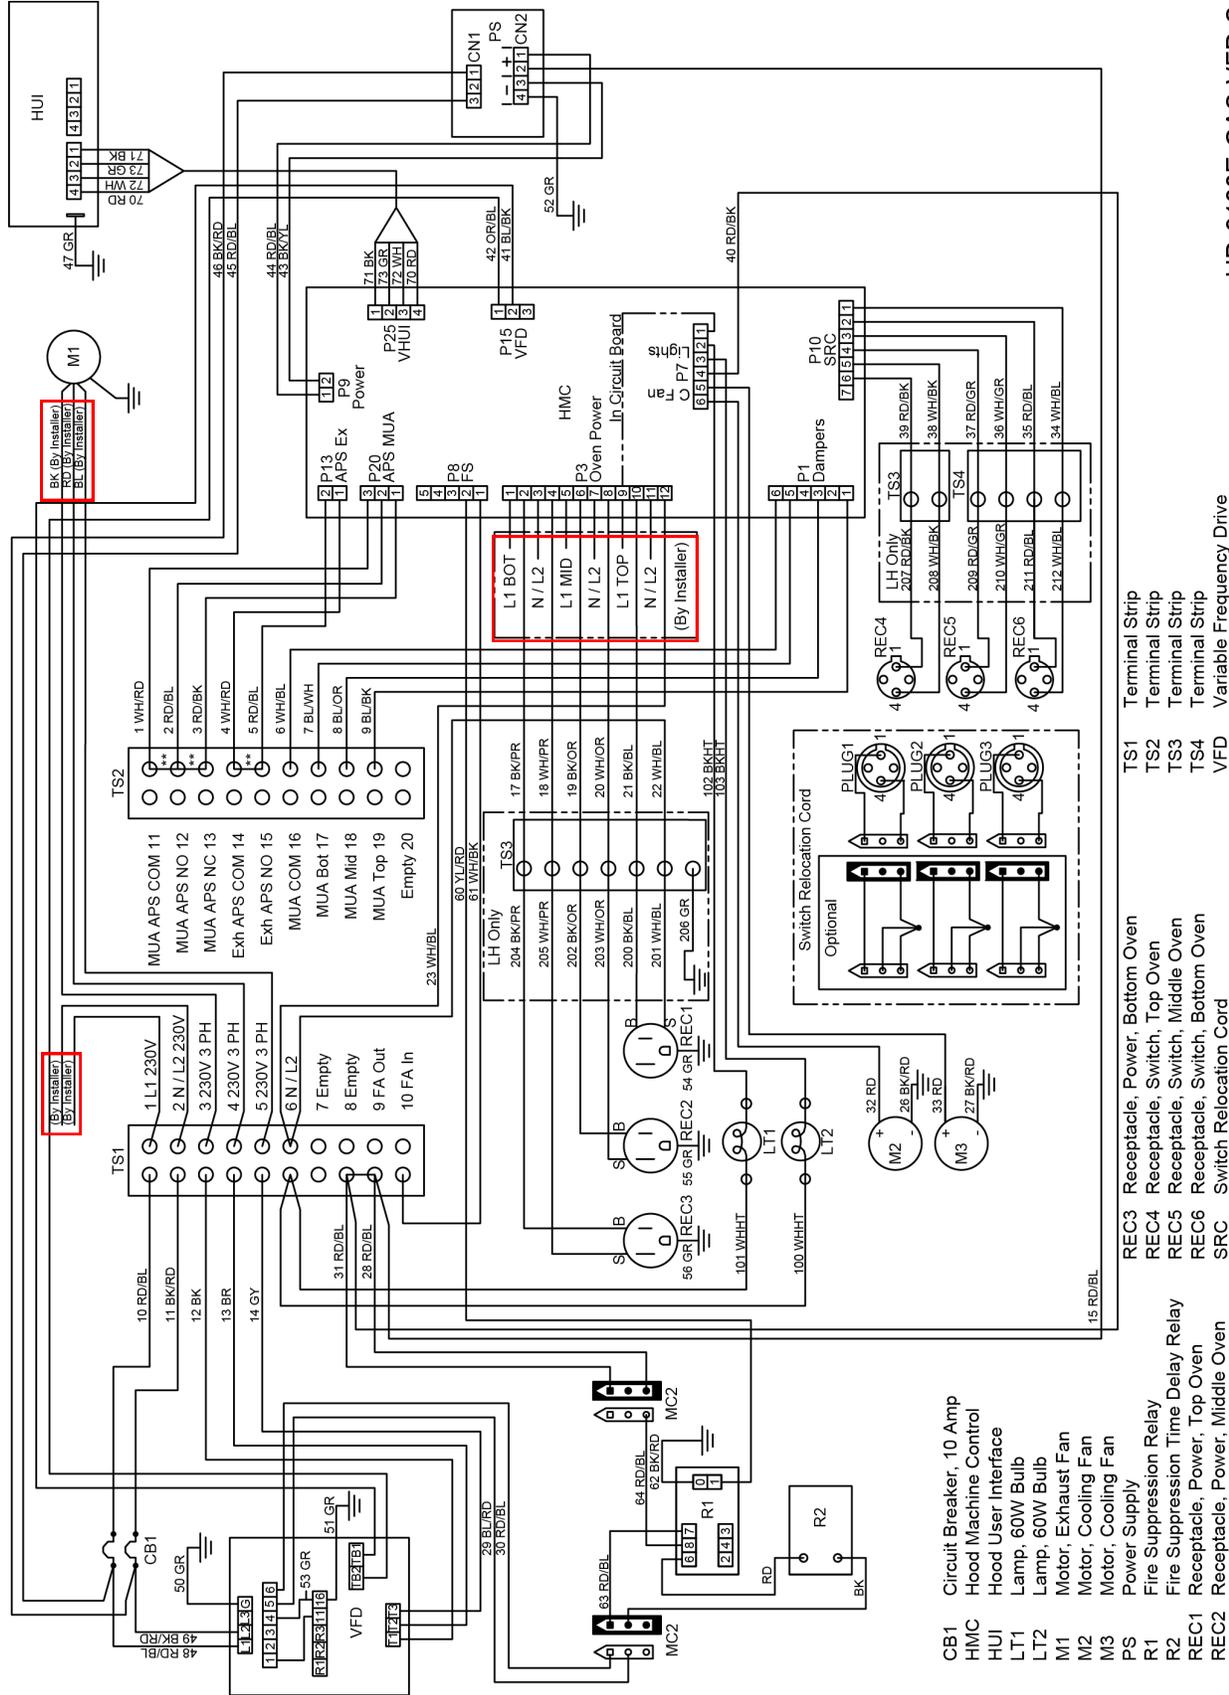

HD-9130E-GAS-VFD-S
11/20/2020

** - Remove Jumpers for APS

GY-Gray

WH-White

OR-Orange

HT-High Temp

PR-Purple

YL-Yellow

GR-Green

BR-Brown

BL-Blue

BK-Black

RD-Red

TS1 Terminal Strip

TS2 Terminal Strip

TS3 Terminal Strip

TS4 Terminal Strip

VFD Variable Frequency Drive


REC3 Receptacle, Power, Bottom Oven

REC4 Receptacle, Switch, Top Oven

REC5 Receptacle, Switch, Middle Oven

REC6 Receptacle, Switch, Bottom Oven

SRC Switch Relocation Cord

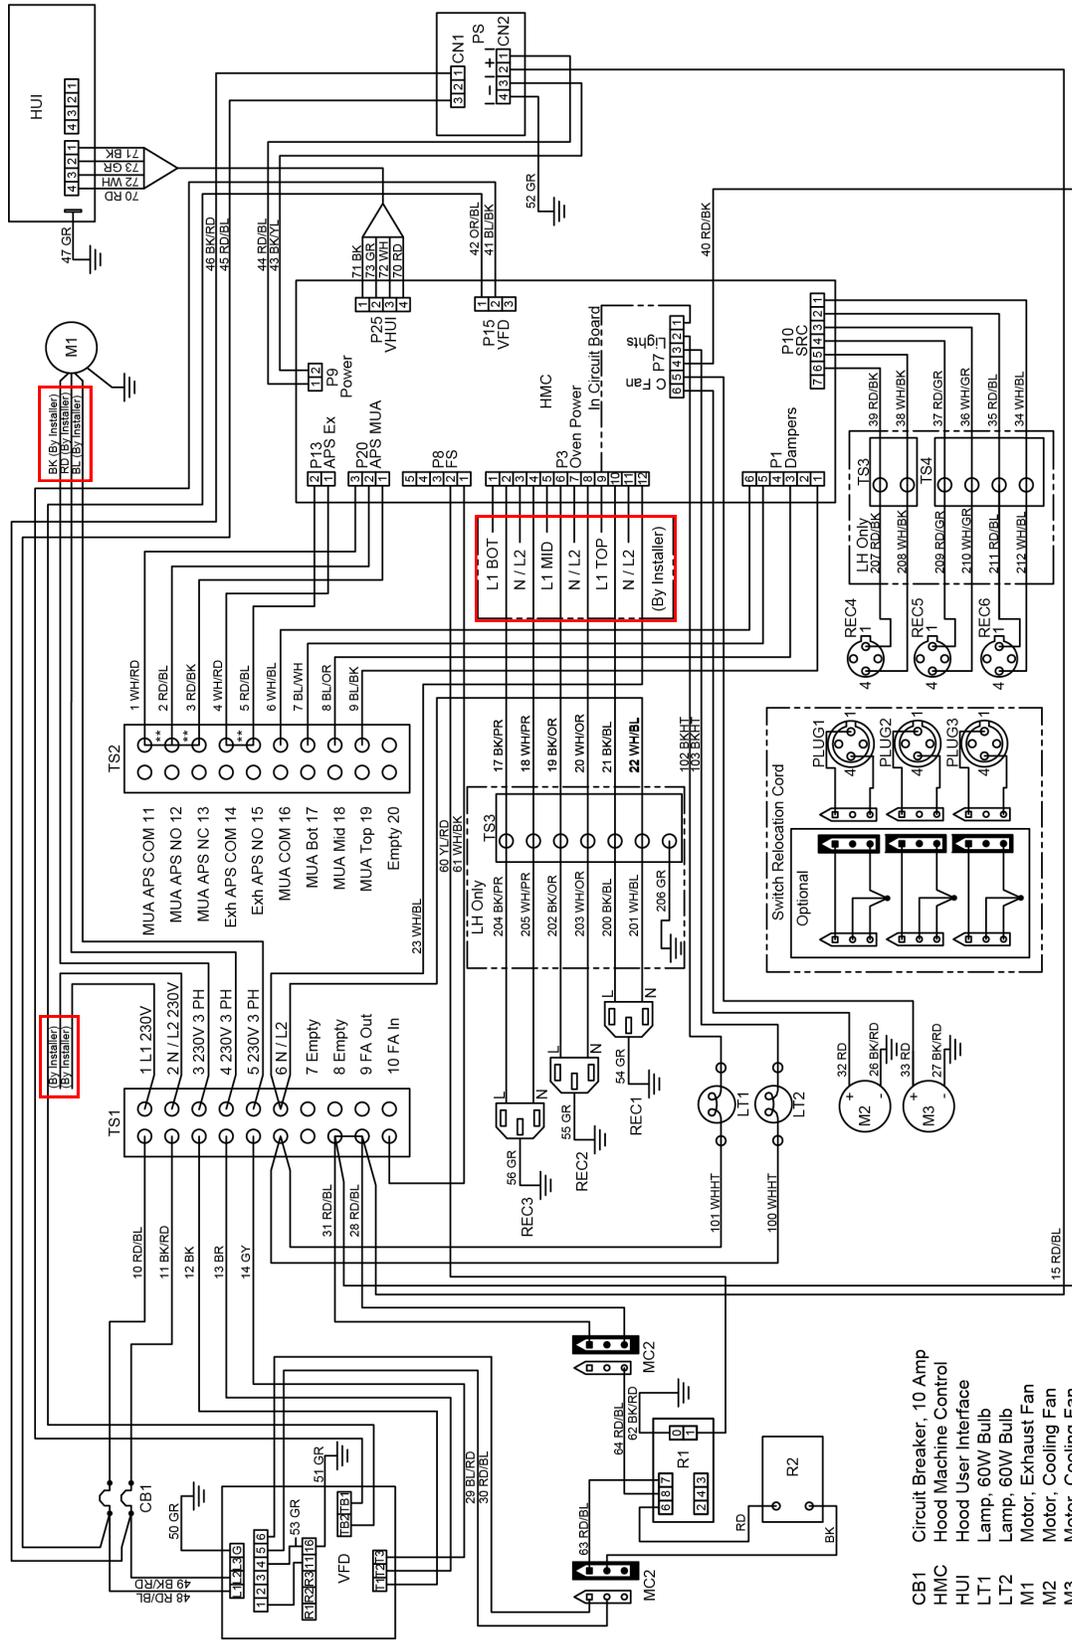


- CB1 Circuit Breaker, 10 Amp
- HMC Hood Machine Control
- HUI Hood User Interface
- LT1 Lamp, 60W Bulb
- LT2 Lamp, 60W Bulb
- M1 Motor, Exhaust Fan
- M2 Motor, Cooling Fan
- M3 Motor, Cooling Fan
- PS Power Supply
- R1 Fire Suppression Relay
- R2 Fire Suppression Time Delay Relay
- REC1 Receptacle, Power, Top Oven
- REC2 Receptacle, Power, Middle Oven
- REC3 Receptacle, Power, Bottom Oven
- REC4 Receptacle, Switch, Top Oven
- REC5 Receptacle, Switch, Middle Oven
- REC6 Receptacle, Switch, Bottom Oven
- SRC Switch Relocation Cord
- Switch Relocation Cord
- Optional
- PLUG1
- PLUG2
- PLUG3
- REC1
- REC2
- REC3
- REC4
- REC5
- REC6
- TS1 Terminal Strip
- TS2 Terminal Strip
- TS3 Terminal Strip
- TS4 Terminal Strip
- VFD Variable Frequency Drive

HD-9130E-GAS-VFD-W
11/20/2020

** - Remove Jumpers for APS

RD-Red BK-Black BL-Blue BR-Brown GR-Green YL-Yellow PR-Purple HT-High Temp OR-Orange WH-White GY-Gray



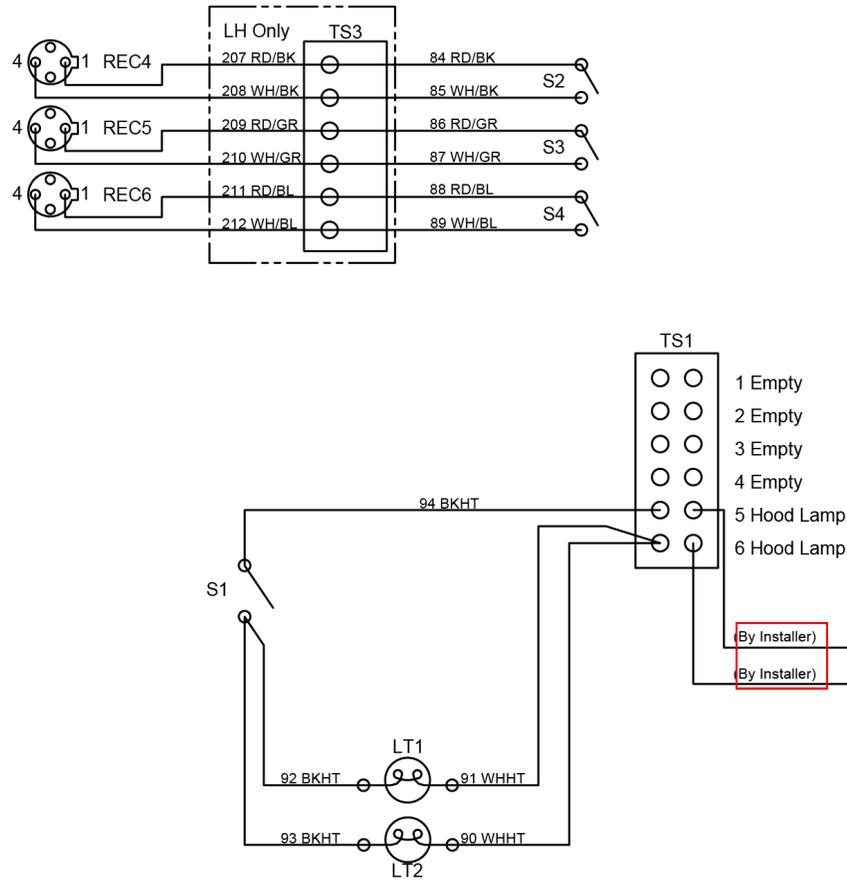

- LT1 Lamp, 60W Bulb
- LT2 Lamp, 60W Bulb
- REC4 Receptacle, Top Oven
- REC5 Receptacle, Middle Oven
- REC6 Receptacle, Bottom Oven
- S1 Switch, Light
- S2 Switch, Top Oven
- S3 Switch, Middle Oven
- S4 Switch, Bottom Oven
- TS1 Terminal Strip
- TS3 Terminal Strip

RD-Red BK-Black BL-Blue GR-Green HT-High Temp WH-White

HD-9130E-NV

03/16/2017

Product Certifications and Applicable Codes

Standard XLT Oven Certifications¹ :

XLT Gas Ovens:

1. ANSI Z83.11-2016/CSA 1.8-2016 Standard for Gas Food Service Equipment
2. ANSI /NSF 4-2016 Sanitation for Commercial Cooking Rethermalization & Powered Hot Food Holding & Transportation Equipment

XLT Electric Ovens:

1. ANSI/UL197-CSA C22.2 Commercial Electric Appliances
2. ANSI /NSF 4-2016 Sanitation for Commercial Cooking Rethermalization & Powered Hot Food Holding & Transportation Equipment

World XLT Oven Certifications¹ :

XLT Gas Ovens:

1. EN 60335-1-2002 +A11, A04, +A12, A2:2006 +A1 Low Voltage Directive (LVD)
2. EN 55014-1:2006 +A1:2009 +A2:2011 EN 61000-3-2:2014, EN 61000-3-3:2013 Electromagnetic Compatibility. (EMC)
3. EN 55014-2:1997 +A1:2001 +A:2008 Conducted Emissions, Surge Immunity
4. BS EN 203-1:2014, Standard for Safety of Gas Heated Catering Equipment
5. BS EN 203-2-1:2006, Standard for Gas Heated Catering Equipment
6. BS EN 203-3:2009, Gas Heated Catering Equipment; Materials and Parts in Contact with Food and Other Sanitary Aspects
7. EN 60335-2-102:2006 Gas Appliance Directive (GAD)

XLT Electric Ovens:

1. EN 60335-2-42:2002 +A1:2008 Safety of Household Appliances and Similar Electrical Appliances
2. EN 60335-1:2010 +A1:2013 Low Voltage Directive (LVD)
3. EN 55014-2:2015 Conducted Emissions, Surge Immunity
4. EN 61000-6-3:2007 +A1:2011 EMC Immunity for residential, commercial & light industrial
5. EN 55014-1 EMC house hold appliance electric tools & similar appliances
6. EN 61000-3-3 +A1+A2 Voltage fluctuation

Standard & World XLT Hood Certifications¹ :

1. UL 710 Standard for Safety Exhaust Hoods for Commercial Cooking
2. ANSI/NSF 2 Sanitation Food Equipment
3. ULC-S646, Standard for Exhaust Hoods and Related Controls for Commercial and Institutional Kitchens

Australian XLT Oven Certifications² :**XLT Gas Ovens: (Certification GAS40066)**

1. AS 4563-2004 Commercial Catering Gas Equipment
2. AS/NZS 3350.1:2002 Safety of Household & Similar Electrical Appliances.

Korea XLT Oven Certifications³ :**XLT Gas Ovens: (Certificate GA-107)**

1. Meets KGS-AB338 Facility/Technical/Inspection Code For Manufacture of Commercial Gas Burning Appliances.

¹ The noted certifications for XLT ovens and XLT Hood are performed and documented by Intertek Testing Services NA Inc. 165 Main Street, Cortland, NY 13045. Intertek is a nationally and internationally certified testing and accreditation agency.

² The certifications for Australia are administered and verified by the Australian Gas Association 2 Park Way, PO Box 122, BRAESIDE, VIC 3195

³ 402 Hannuri-daero, Sejong-si, 339-012, Republic of Korea

Oven Initial Start-up Checklist - Remove & Return to XLT Ovens

Fill out all information and print legibly



Start-Up Information Customer Name: _____ Company Name: _____ Phone #: _____ Email: _____ Address: _____ City: _____ State: _____ Zip: _____ Country: _____	
Follow Requirements outlined in Installation and Operation Manual <u>Oven Install and Start-up Requirements:</u> <ul style="list-style-type: none"> <input type="checkbox"/> Gas Requirements met (Gas Ovens Only) <ul style="list-style-type: none"> • One shut off valve per oven installed; if not, call XLT as this may void warranty <input type="checkbox"/> Electrical Requirements met <input type="checkbox"/> Clearances met <input type="checkbox"/> Oven(s) installed and stacked properly <ul style="list-style-type: none"> • XLT is not stacked on another manufacturer's ovens; if it is, call XLT as this may void warranty <input type="checkbox"/> Oven(s) were powered on and functioned as designed 	Follow Requirements outlined in Installation and Operation Manual <u>Hood Install and Start-up Requirements:</u> <ul style="list-style-type: none"> <input type="checkbox"/> Electrical Requirements met <input type="checkbox"/> Clearances/ Height Requirement met <input type="checkbox"/> Hood installed properly <input type="checkbox"/> Shrouds installed properly <ul style="list-style-type: none"> • Ovens are under hood with shrouds attached <input type="checkbox"/> Ventilation Requirements met <input type="checkbox"/> Hood was powered on and functions as designed <input type="checkbox"/> Ovens function properly through the Hood
Oven Information <u>Top Oven</u> Serial Number: _____ Model Number: _____ <u>Middle Oven</u> Serial Number: _____ Model Number: _____ <u>Bottom Oven</u> Serial Number: _____	Hood Information Serial Number: _____ Model Number: _____



XLT Ovens
 PO Box 9090
 Wichita, KS 67277
 FAX: 316-943-2769
 Email: startup@xltovens.com

Start-up can be submitted via mail, fax, email or submit online (using QR code above or go to xltovens.com/startup).

Print Name: _____ Signature: _____ Date: _____

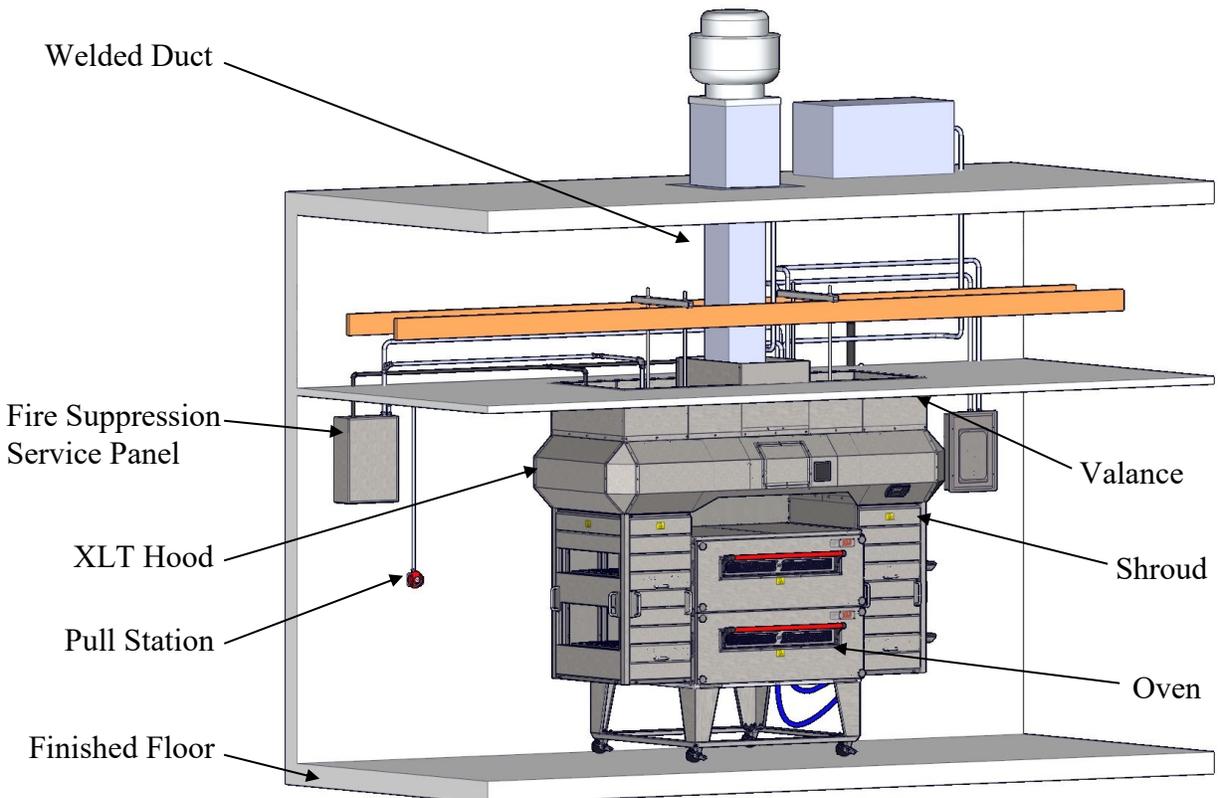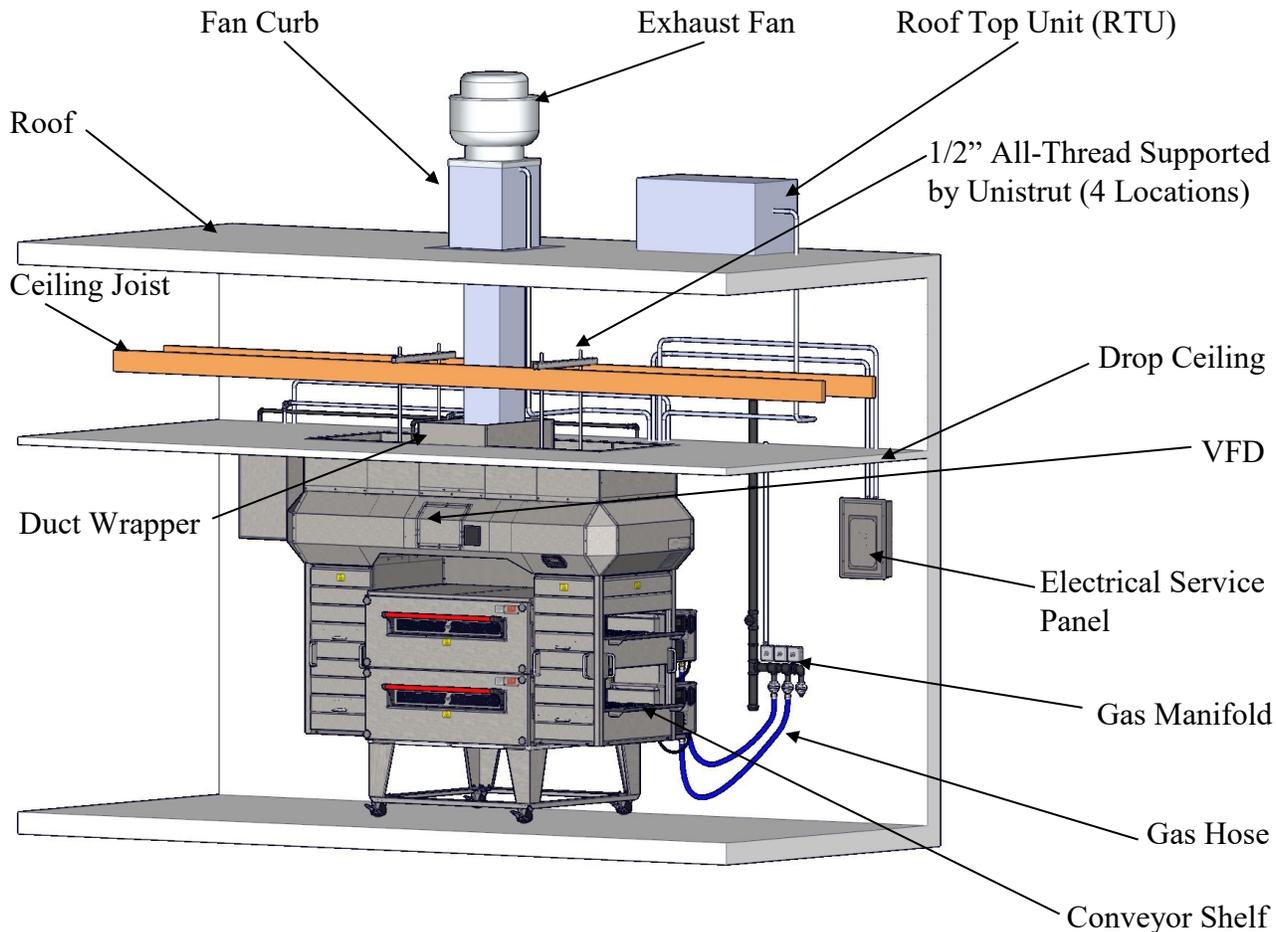

XLT Ovens
PO Box 9090
Wichita, Kansas 67277

US: 888-443-2751 FAX: 316-943-2769 INTL: 316-943-2751 WEB: www.xltovens.com